

[Manuals.plus](#) /

› [jomparis](#) /

› jomparis H170C-DCF Small Digital Alarm Clock Instruction Manual

jomparis H170C-DCF

jomparis H170C-DCF Small Digital Alarm Clock Instruction Manual

Model: H170C-DCF

INTRODUCTION

Thank you for choosing the jomparis H170C-DCF Small Digital Alarm Clock. This compact and versatile alarm clock is designed to provide accurate timekeeping, alarm functions, and environmental information. Please read this manual carefully to ensure proper setup and operation.



Figure 1: jomparis H170C-DCF Digital Alarm Clock

PRODUCT FEATURES

- Clear 3.15-inch LCD display showing time, date, day of the week, and temperature.
- 12/24-hour time format selection.
- Alarm function with a 2-minute duration.
- 5-minute snooze function.
- Backlight for easy viewing in low light conditions (lasts 4 seconds).
- Temperature display in Celsius (°C) or Fahrenheit (°F).
- Compact and portable design, ideal for bedrooms, offices, and travel.
- Battery operated (requires 2 x AAA batteries, not included).



Figure 2: Key Features of the Alarm Clock

SETUP

1. Battery Installation

The jomparis H170C-DCF alarm clock requires two (2) AAA batteries (not included) for operation.

1. Locate the battery compartment cover on the back of the clock.
2. Slide the cover downwards to open the compartment.
3. Insert two new AAA batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery compartment cover by sliding it upwards until it clicks into place.

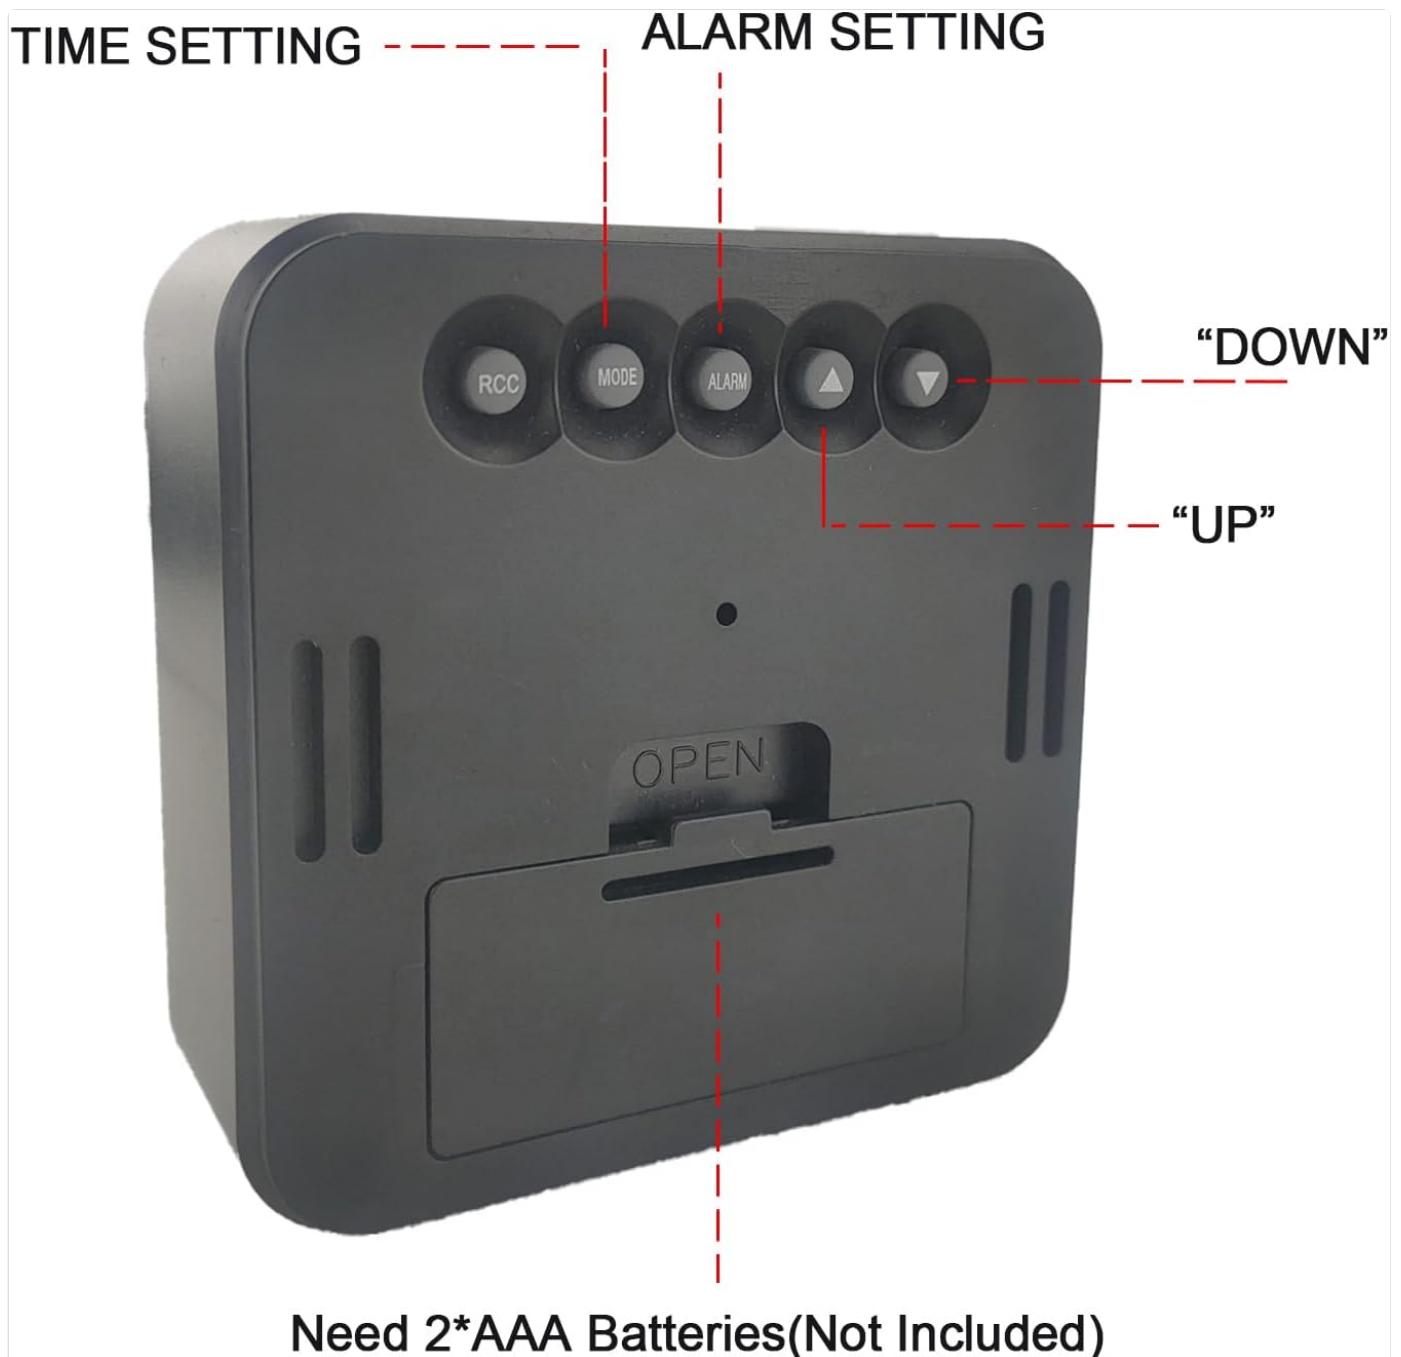


Figure 3: Back of the Clock with Battery Compartment

2. Initial Power On

Once batteries are installed, the clock will power on automatically. The display will show default time and date settings. You may need to adjust these settings to your local time and preferences.

OPERATING INSTRUCTIONS

Button Functions Overview

The clock features several buttons on the back for setting and control:

- **RCC:** (No function for this model, as per product specifications. Some models use this for radio-controlled time.)
- **MODE:** Used to enter time/date setting mode and cycle through settings.
- **ALARM:** Used to view and set the alarm time.
- **UP (▲):** Used to increase values during setting.
- **DOWN (▼):** Used to decrease values during setting and to switch between Celsius/Fahrenheit.

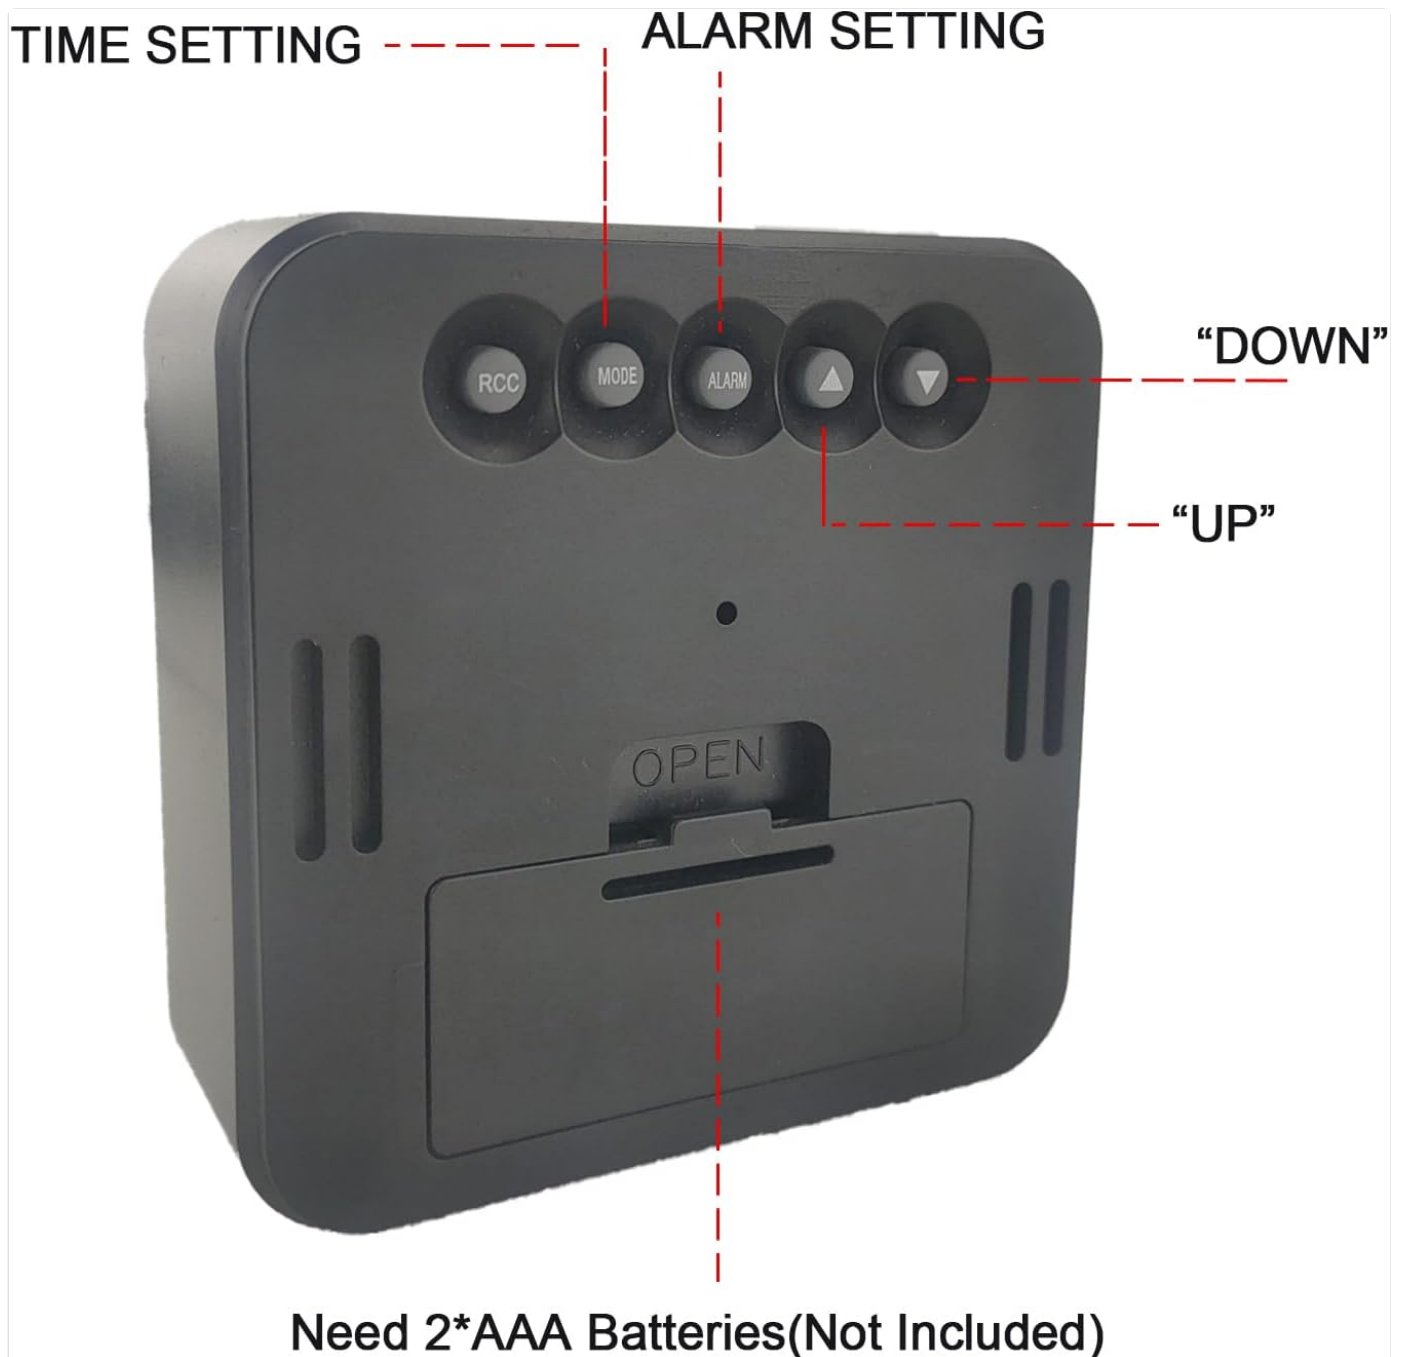


Figure 4: Control Buttons on the Back

Setting Time and Date

1. Press and hold the **MODE** button for approximately 3 seconds to enter time setting mode. The hour digit will flash.
2. Use the **UP (▲)** or **DOWN (▼)** buttons to adjust the hour.
3. Press **MODE** again to confirm the hour and move to the minute setting. The minute digit will flash.
4. Use the **UP (▲)** or **DOWN (▼)** buttons to adjust the minutes.
5. Continue pressing **MODE** to cycle through and set the year, month, and day in the same manner.
6. After setting the day, press **MODE** one last time to exit the setting mode.

Setting 12/24 Hour Format

While in normal time display mode, press the **UP (▲)** button to toggle between 12-hour (with AM/PM indicator) and 24-hour time formats.

Setting the Alarm

1. Press the **ALARM** button once to display the current alarm time.
2. Press and hold the **ALARM** button for approximately 3 seconds to enter alarm setting mode. The alarm hour digit will flash.
3. Use the **UP (▲)** or **DOWN (▼)** buttons to adjust the alarm hour.
4. Press **ALARM** again to confirm the alarm hour and move to the alarm minute setting. The alarm minute digit will flash.
5. Use the **UP (▲)** or **DOWN (▼)** buttons to adjust the alarm minutes.
6. Press **ALARM** one last time to exit alarm setting mode.

Activating/Deactivating the Alarm

While in normal time display mode, press the **ALARM** button repeatedly to toggle the alarm ON or OFF. An alarm icon (bell symbol) will appear on the display when the alarm is active.

Snooze Function

When the alarm sounds, it will last for two minutes. To activate the snooze function:

- Touch the top logo/symbol area on the clock. This will provide an additional 5 minutes of snooze time.
- To exit snooze mode before the 5 minutes are up, press any button on the back of the clock.

Backlight Function

In default mode, the screen is not continuously lit. To temporarily illuminate the display:

- Touch the top logo/symbol area on the clock. The backlight will activate for approximately 4 seconds.



Figure 5: Backlight in Action

Temperature Display (°C/°F)

The clock displays the room temperature. To switch between Celsius and Fahrenheit:

- While in normal time display mode, press the **DOWN (▼)** button. The temperature unit will toggle between °C and °F.

Your browser does not support the video tag.

Video 1: Demonstrating Backlight, Temperature Unit Switch, and Time Settings on the jomparis Digital Clock.

MAINTENANCE

- **Cleaning:** Wipe the clock with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries when the display becomes dim or functions become erratic. Always use new AAA batteries and dispose of old batteries responsibly.

- **Storage:** If storing the clock for an extended period, remove the batteries to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Low or dead batteries.	Replace with new AAA batteries. Ensure correct polarity.
Alarm does not sound.	Alarm is not activated.	Press the ALARM button to ensure the alarm icon is displayed.
Incorrect time or date.	Time/date not set correctly.	Follow the "Setting Time and Date" instructions to reset.
Backlight does not work.	Low batteries or not touching the correct area.	Replace batteries. Ensure you are touching the top logo/symbol area.
Temperature unit is incorrect.	Not toggled to desired unit.	Press the DOWN (▼) button to switch between °C and °F.

SPECIFICATIONS

Feature	Detail
Model Number	H170C-DCF
Brand	jomparis
Display Type	Digital LCD
Power Source	2 x AAA Batteries (not included)
Product Dimensions	3.15"W x 3.15"H x 1.34"D
Item Weight	3.2 ounces
Special Features	Alarm, Calendar Display, LCD Display, Snooze, Temperature Display
Material	Plastic
Room Type	Bedroom, Classroom, Home Office, Kid's Room, Study Room

WARRANTY AND SUPPORT

For specific warranty information, please refer to the product packaging or the official jomparis website. If you encounter any issues or require further assistance, please contact jomparis customer support through their official channels.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question