



Manuals.plus /

› Clementoni /

› Clementoni Disney Baby Mickey Flip Phone Instruction Manual (Model 17514)

Clementoni 17514

Clementoni Disney Baby Mickey Flip Phone Instruction Manual

Model: 17514

INTRODUCTION

The Clementoni Disney Baby Mickey Flip Phone is an electronic activity center designed for children aged 9 to 36 months. This toy features music and characters from Disney classics, providing a familiar and engaging environment for play. It encourages the exploration of movement, dexterity, and imagination through imitative play, lights, and sounds.



Image: The Mickey Flip Phone in its open position, displaying a reflective mirror and four distinct interactive buttons with icons for music, phone calls, messages, and Mickey Mouse.

SETUP

Battery Installation

The Mickey Flip Phone requires 2 AAA batteries, which are included with the product. Ensure batteries are correctly inserted according to polarity markings to enable full functionality.

Initial Use

1. Unpack the Mickey Flip Phone from its packaging.
2. Verify that the batteries are installed.
3. The device is ready for immediate play.

OPERATING INSTRUCTIONS

The Mickey Flip Phone is designed for interactive play, simulating a real smartphone experience for young children.

Basic Interaction

1. **Hold the Phone:** Grasp the phone comfortably in your hand.
2. **Activate Sounds and Lights:** Press any of the four touch buttons located on the lower screen to activate various sounds and light games. Each button corresponds to different interactive elements.

3. **Simulate Video Calls:** Open the flip phone to reveal the mirror. Look into the mirror to simulate a video call, encouraging imitative play.
4. **Explore and Learn:** Continue pressing the buttons to explore different light and sound combinations. This interaction helps stimulate visual, auditory, and cognitive development.



Image: A young child engaging with the Mickey Flip Phone, demonstrating typical use during play.

MAINTENANCE

To ensure the longevity and hygiene of your Mickey Flip Phone, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the surface of the phone with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, as these can damage the plastic and electronic components.
- **Storage:** Store the phone in a dry place away from direct sunlight and extreme temperatures when not in use.
- **Battery Care:** If the phone will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the device.

TROUBLESHOOTING

If you encounter any issues with your Mickey Flip Phone, consider the following:

- **No Sound or Lights:** Check if the batteries are correctly installed and not depleted. Replace batteries if necessary.
- **Intermittent Functionality:** Ensure there is no debris obstructing the buttons. Try removing and reinserting the batteries.

- **Low Sound Volume:** The product is designed with a specific sound level suitable for young children. If the sound seems unusually low, ensure the battery level is adequate.

If problems persist, please contact Clementoni customer support for further assistance.

SPECIFICATIONS

Feature	Detail
Product Dimensions	2.17 x 3.94 x 8.66 inches
Item Weight	4.6 ounces
Model Number	17514
Recommended Age	9 months - 3 years
Batteries	2 AAA batteries (included)
Manufacturer	Clementoni Spa
Contents	1 Flip Phone

WARRANTY AND SUPPORT

For information regarding product warranty, returns, or technical support, please refer to the official Clementoni website or contact their customer service department. Keep your purchase receipt as proof of purchase.

You can visit the Clementoni store for more products and information:[Clementoni Store](#)

