

**Joola J100A**

# JOOLA NOVA Outdoor Table Tennis Table

## Instruction Manual

### INTRODUCTION

This manual provides detailed instructions for the assembly, operation, maintenance, and troubleshooting of your JOOLA NOVA Outdoor Table Tennis Table. Please read this manual thoroughly before assembly and use to ensure safe and optimal performance of your table.

The JOOLA NOVA J100A is designed for both indoor and outdoor use, featuring a weatherproof construction and a foldable design for easy storage and solo play.

### SAFETY INFORMATION

- Always assemble the table on a flat, stable surface.
- Ensure all bolts and fasteners are securely tightened before use.
- Keep hands and fingers clear of moving parts during folding and unfolding operations.
- Do not allow children to fold or unfold the table without adult supervision.
- The table is heavy (49 kg). Use proper lifting techniques or seek assistance when moving the packaged table or assembled halves.
- Engage the locking wheels when the table is in playing position or stored vertically to prevent accidental movement.
- Do not climb on or sit on the table.
- Protect the table with a cover if stored outdoors for extended periods to prolong its lifespan, despite its weatherproof design.

### PACKAGE CONTENTS

Before beginning assembly, verify that all components are present and undamaged. If any parts are missing or damaged, please contact JOOLA customer support.

- Two (2) Table Halves (each with pre-attached legs and frame)
- One (1) Weatherproof Net Set
- Eight (8) Wheels (5 cm diameter)
- Assembly Hardware (bolts, nuts, wrenches - typically included in a sealed package)
- Instruction Manual (this document)

## SETUP AND ASSEMBLY

---

The JOOLA NOVA table is designed for quick assembly, typically within 15-20 minutes with two people.

1. **Unpacking:** Carefully open the packaging. It is recommended to have two people for this step due to the size and weight of the table halves. Lay a blanket or soft material on the floor to protect the playing surface during assembly.
2. **Positioning Table Halves:** Place one table half playing-side down on the protective blanket.
3. **Attaching Wheels:** Identify the wheel legs and the brackets. Align the wheel leg flush to the existing leg on the table. Place the brackets on each side of the leg and align the holes. Insert the supplied bolts and finger-tighten the nuts. Once all bolts are in place, use the provided wrenches to securely tighten them. Press the wheels into place on the wheel legs. Repeat for the second table half.
4. **Uprighting the Table:** With two people, carefully flip each table half upright so they stand on their own legs.
5. **Joining Table Halves:** Position the two table halves against each other to form the full playing surface. Ensure the edges are flush.
6. **Attaching the Net Set:** Secure the weatherproof net set to the center of the table. The net clamps typically attach to the underside of the table halves and also serve to connect the two table sides. Hand-tighten the clips until the net is taut.
7. **Adjusting Height:** If your playing surface is uneven, use the height-adjustable feet on the table legs to level the table.



Figure 1: Fully assembled JOOLA NOVA Outdoor Table Tennis Table.

# IN 20 MINUTEN MONTIERTE OUTDOOR TISCHTENNISPLATTE

-  SCHNELLE MONTAGE
-  SOLO-SPIELMODUS
-  PULVERBESCHICHTETES  
METALLUNTERGESTELL



Figure 2: Visual representation of the quick assembly process and key features.

# MOBILITÄT & STABILITÄT FÜR MEHR SICHERHEIT

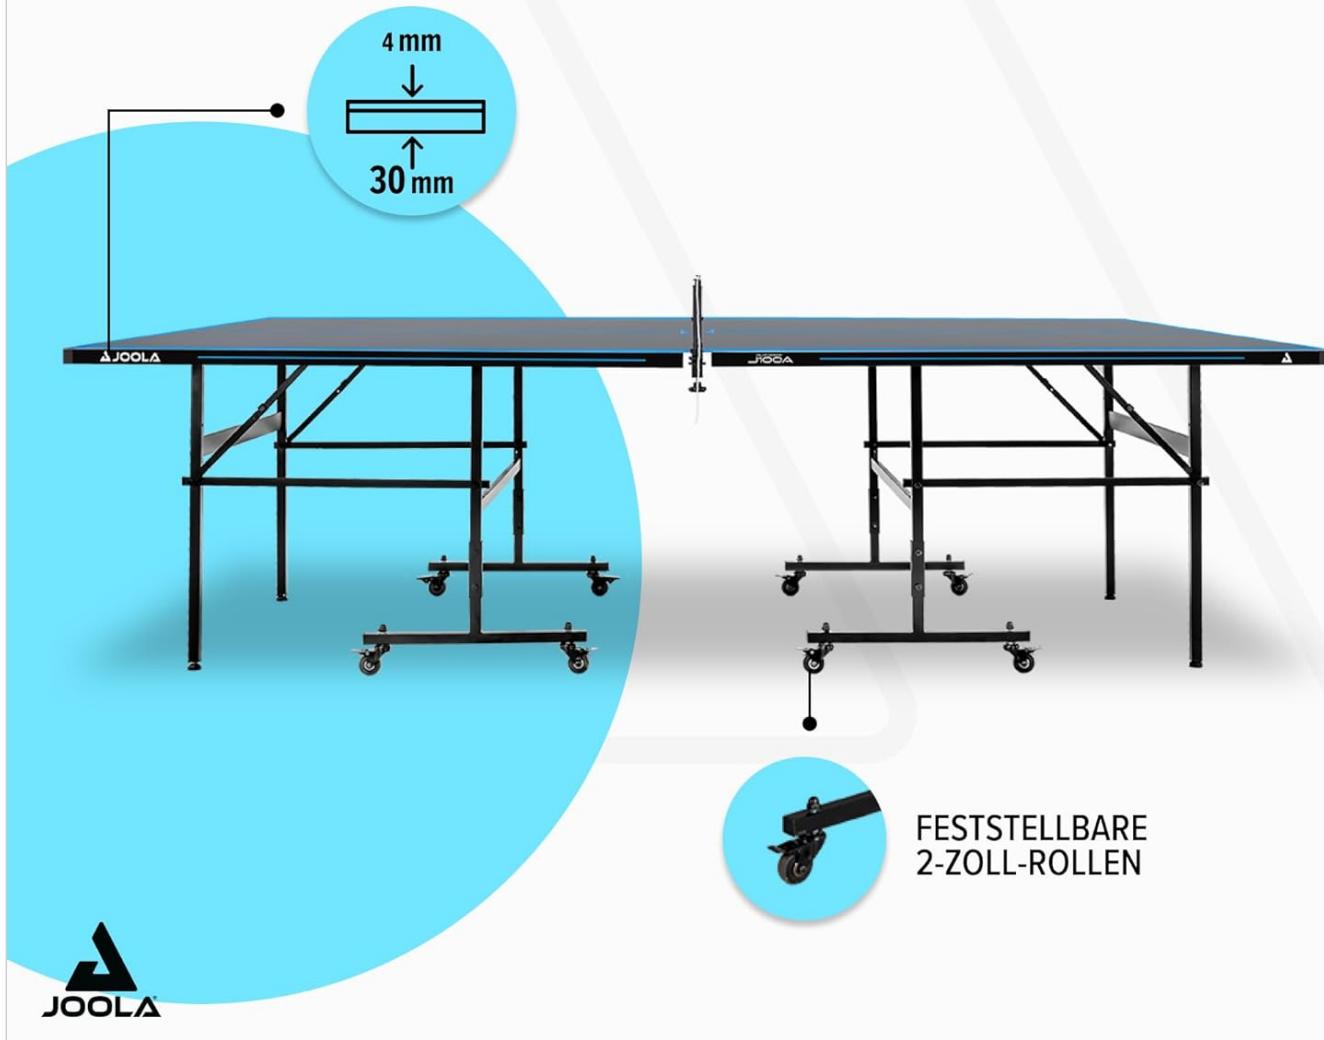


Figure 3: Mobility and stability features, including wheel locking mechanism.

## OPERATING INSTRUCTIONS

### Playing Mode (Full Table)

Once assembled and the net is attached, the table is ready for 2-4 players. Ensure the table is level and the wheels are locked for stability during play.

### Solo Play Mode

The JOOLA NOVA allows for solo practice. To engage solo play mode:

1. Unlock the wheels on one half of the table.
2. Carefully fold up one half of the table vertically. Ensure it locks securely into the upright position.
3. Lock the wheels on the folded half to prevent movement.
4. The remaining horizontal half can now be used for solo practice against the folded half.

# STABILER HALT MIT ZUSÄTZLICHEM SCHUTZ



KANTENSCHUTZ



HÖHENVERSTELLBARE  
TISCHBEINE

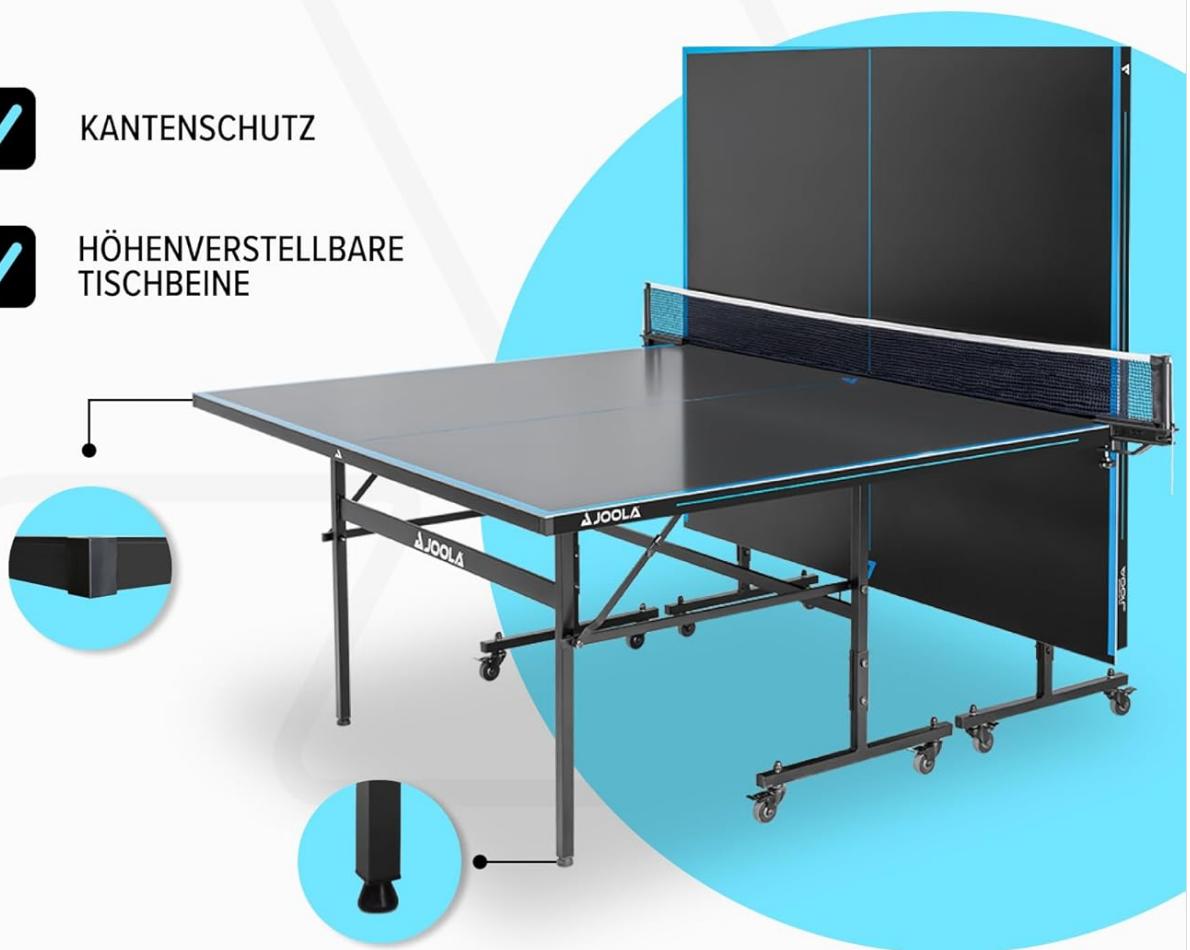


Figure 4: Table in solo play mode.

## Folding for Storage

To fold the table for compact storage:

1. Remove the net set.
2. Unlock the wheels on both table halves.
3. Carefully fold both table halves vertically. Ensure they lock securely into the upright position.
4. Push the two folded halves together for compact storage.
5. Engage the wheel locks on both halves to prevent accidental movement. The double tilt protection mechanism enhances safety in the folded state.

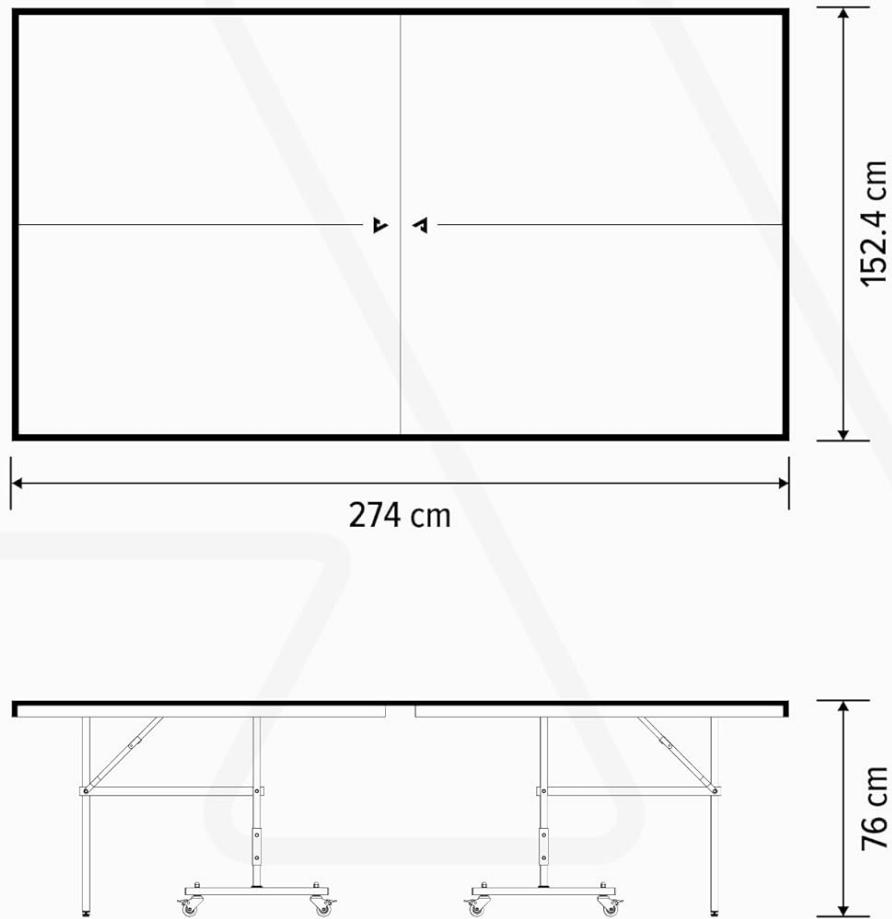


Figure 5: Table folded for compact storage.

## MAINTENANCE

- **Cleaning:** Wipe the playing surface and frame with a damp cloth to remove dust and dirt. Avoid abrasive cleaners or solvents that could damage the surface.
- **Net Care:** The net set is weatherproof. Clean it periodically with mild soap and water if needed. Store it indoors when not in use for extended periods to prolong its life.
- **Hardware Check:** Periodically check all bolts and fasteners to ensure they remain tight. Re-tighten if necessary.
- **Wheel Maintenance:** Keep the wheels free of debris to ensure smooth movement.
- **Outdoor Storage:** While designed for outdoor use, covering the table with a protective cover when not in use, especially during harsh weather conditions or prolonged periods, will significantly extend its lifespan and maintain its appearance.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Table is wobbly or unstable.	Uneven ground; loose fasteners; wheels not locked.	Adjust height-adjustable feet; tighten all bolts; ensure wheels are locked.
Difficulty folding/unfolding.	Mechanism obstructed; wheels not unlocked.	Check for debris or obstructions; ensure all wheels are unlocked before folding/unfolding.
Net is not taut.	Net clamps not tightened sufficiently.	Re-tighten net clamps securely.
Ball bounce is inconsistent.	Debris on playing surface; table not level.	Clean the playing surface; ensure the table is perfectly level using the adjustable feet.

## SPECIFICATIONS

- **Model:** JOOLA NOVA J100A
- **Dimensions (Playing):** 2.74 L x 1.53 W x 0.76 H Meters (Tournament Size)
- **Dimensions (Folded):** Approximately 60 cm (W) x 157 cm (H)
- **Table Top Material:** 4 mm Aluminium Composite Panel
- **Frame Material:** Powder-coated Alloy Steel (30 mm)
- **Color:** Anthracite/Blue
- **Item Weight:** 49 Kilograms
- **Wheels:** 8 lockable 2-inch (5 cm) wheels
- **Features:** Weatherproof, UV-resistant, Foldable, Solo Play Mode, Height-adjustable feet, Double tilt protection
- **Included Components:** Table tennis table, Weatherproof net set

# PLATZSPARENDE VERSTAUBAR UND DOPPELT GESECHEERT



KOMPAKTE  
ABSTELLMASSE



DOPPELTE  
KIPPSICHERUNG



Figure 6: Table dimensions and weight.

## WARRANTY AND SUPPORT

For warranty information, product support, or to order replacement parts, please contact JOOLA customer service. Refer to the official JOOLA website or your purchase documentation for specific warranty terms and contact details.

**Manufacturer:** JOOLA