

[manuals.plus](#) /

› [SAMSUNG](#) /

› [SAMSUNG Split Digital Inverter Ultra AI 12,000 BTUs Air Conditioner User Manual](#)

SAMSUNG F-2X12DYFZA

SAMSUNG Split Digital Inverter Ultra AI 12,000 BTUs Air Conditioner User Manual

Model: F-2X12DYFZA

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your SAMSUNG Split Digital Inverter Ultra AI 12,000 BTUs Air Conditioner. Please read this manual thoroughly before operating the appliance and retain it for future reference. Proper installation, operation, and maintenance are crucial for optimal performance and longevity of the unit.

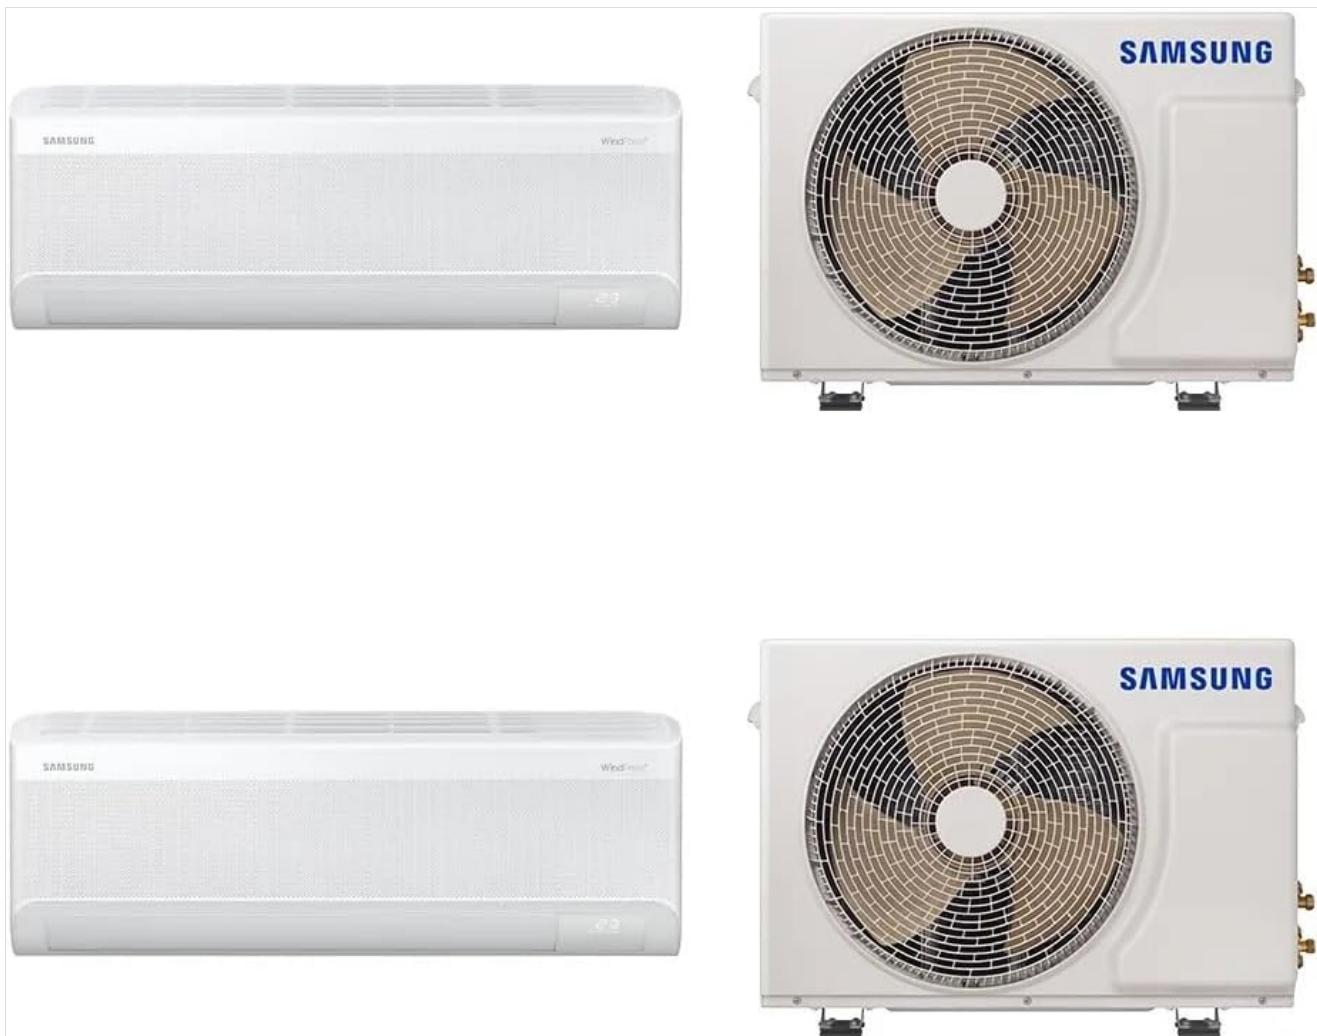


Figure 1.1: Overview of the SAMSUNG Split Digital Inverter Ultra AI Air Conditioner system, including indoor and outdoor units.

2. SAFETY INFORMATION

To prevent injury to the user or others and property damage, the following instructions must be followed. Incorrect operation due to ignoring instructions may cause harm or damage.

- **Installation:** Installation must be performed by qualified personnel in accordance with national wiring standards. Do not attempt to install the unit yourself.
- **Power Supply:** Ensure the unit is connected to a 220V power supply. Do not use multi-outlet adapters or extension cords.
- **Operation:** Do not insert fingers or foreign objects into the air inlet/outlet. Do not operate with wet hands.
- **Maintenance:** Always turn off the power and unplug the unit before cleaning or performing any maintenance.
- **Refrigerant:** The unit contains R32 refrigerant. Do not attempt to repair or tamper with the refrigerant circuit. Contact qualified service personnel.

3. PRODUCT OVERVIEW

3.1 Indoor Unit (Evaporator)

The indoor unit is responsible for cooling or heating the air and circulating it within the room. It features a sleek design with a digital display and air vents.



Figure 3.1: Front view of the indoor unit.

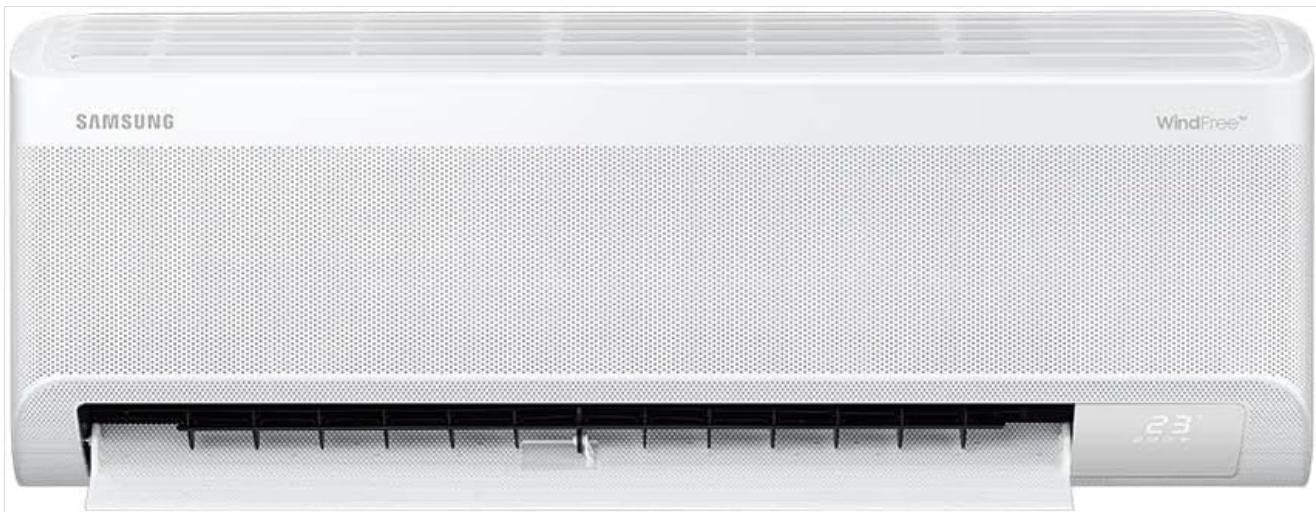


Figure 3.2: Indoor unit with air outlet open.

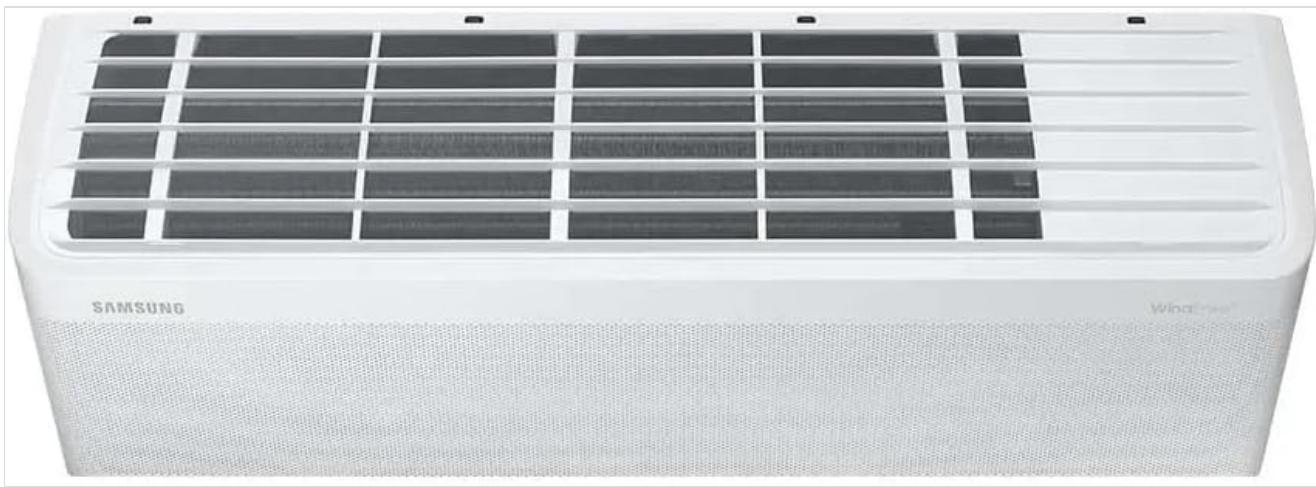


Figure 3.3: Top view of the indoor unit, showing the air intake.

3.2 Outdoor Unit (Condenser)

The outdoor unit houses the compressor and condenser coil, dissipating heat to the outside environment during cooling or absorbing heat during heating. It is designed for outdoor installation.

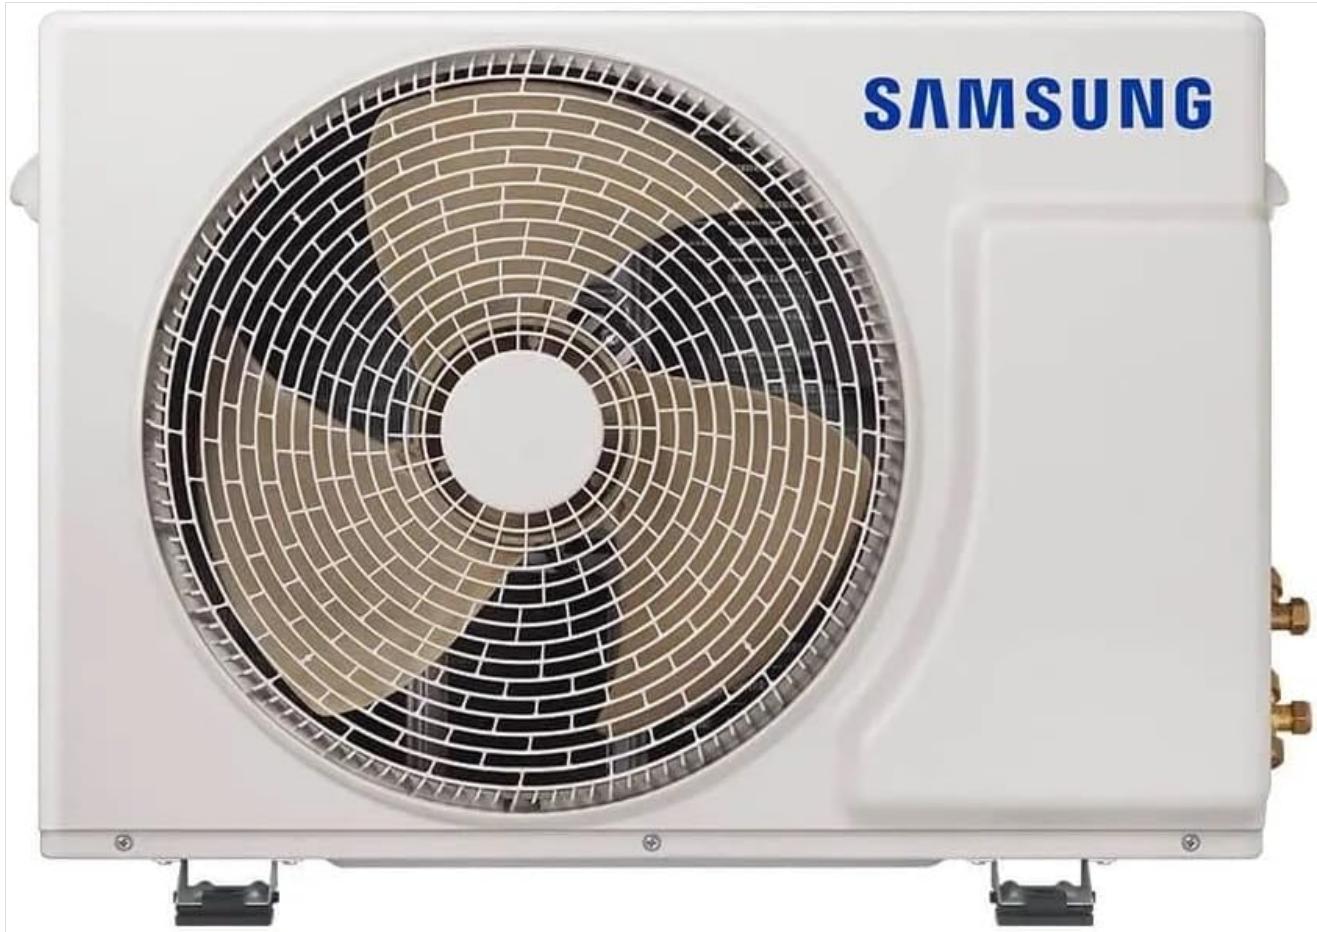


Figure 3.4: Front view of the outdoor unit.



Figure 3.5: Angled view of the outdoor unit.

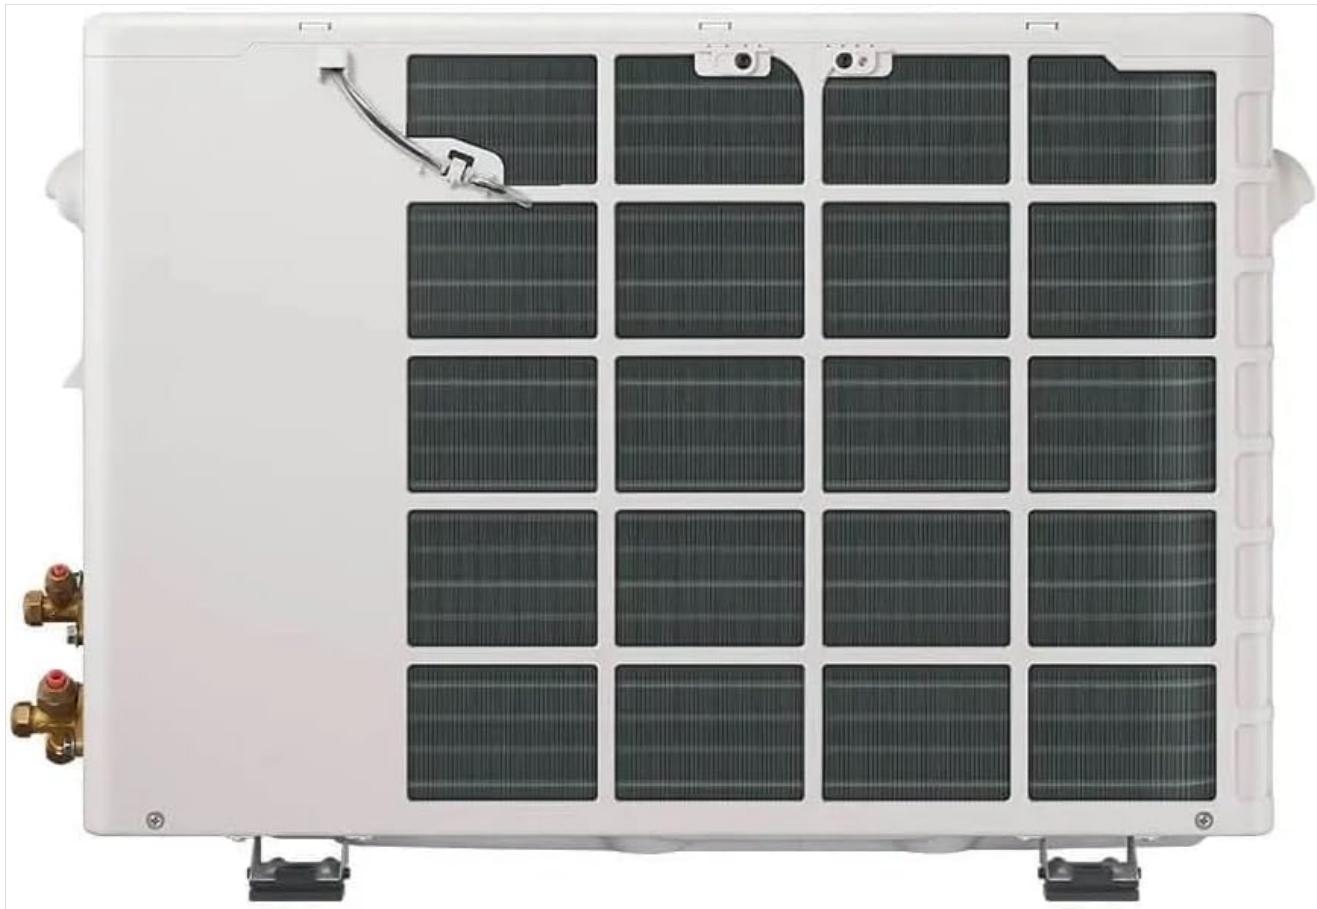


Figure 3.6: Rear view of the outdoor unit.

3.3 Remote Control

The remote control allows you to conveniently operate all functions of your air conditioner from a distance. It typically includes buttons for power, mode selection, temperature adjustment, fan speed, and special features.

4. SETUP

4.1 Installation

Installation of the SAMSUNG Split Digital Inverter Ultra AI Air Conditioner requires specialized tools and knowledge. It is strongly recommended that installation be performed by a certified and qualified technician to ensure proper functioning, safety, and compliance with local regulations. Incorrect installation can lead to electric shock, fire, water leakage, or other damage.

- **Site Selection:** Choose a location for both indoor and outdoor units that allows for proper airflow, drainage, and accessibility for maintenance.
- **Electrical Connection:** Ensure the electrical wiring meets the specifications (220V) and is properly grounded.
- **Refrigerant Piping:** The refrigerant lines must be correctly connected and sealed to prevent leaks.
- **Drainage:** Ensure the condensate drain pipe is properly installed to allow for efficient water removal.

4.2 Initial Power On

After professional installation is complete, follow these steps for the initial power-on:

1. Ensure all electrical connections are secure and the circuit breaker for the air conditioner is in the 'ON' position.
2. Insert batteries into the remote control.

3. Press the 'Power' button on the remote control to turn on the unit.
4. The indoor unit display will illuminate, and the unit will begin operation in the last selected mode or default mode.

5. OPERATING INSTRUCTIONS

5.1 Basic Operation with Remote Control

- **Power On/Off:** Press the **Power** button to turn the unit on or off.
- **Mode Selection:** Press the **Mode** button to cycle through available modes: Cool, Fan, Dry, Auto.
- **Temperature Adjustment:** Use the **Up/Down** arrows to set the desired temperature.
- **Fan Speed:** Press the **Fan** button to adjust the fan speed (Auto, Low, Medium, High).
- **Swing:** Use the **Swing** button to adjust the vertical airflow direction.

5.2 Operating Modes

- **Cool Mode:** Provides cooling by lowering the room temperature to the set level.
- **Fan Mode:** Circulates air without cooling or heating.
- **Dry Mode:** Reduces humidity in the room.
- **Auto Mode:** The unit automatically selects the appropriate operating mode (Cool or Fan) based on the room temperature.

5.3 Special Features

- **Digital Inverter Technology:** Optimizes compressor speed to maintain desired temperature with minimal fluctuations, leading to energy efficiency.
- **Ultra AI:** Advanced artificial intelligence features for optimized comfort and energy savings. Refer to the specific AI features in your remote control guide for detailed usage.
- **Wi-Fi Connectivity:** Allows control of the air conditioner via a smartphone app. Follow the instructions in the app to connect your unit to your home Wi-Fi network.
- **Sleep Function:** Adjusts temperature and fan speed for comfortable sleep, typically increasing temperature slightly over time.
- **Dehumidification Function:** Specifically designed to remove excess moisture from the air.
- **Timer Function:** Set the unit to turn on or off automatically at a specified time.
- **Automatic Cleaning:** This feature helps to dry the indoor unit's evaporator coil to prevent mold and bacteria growth. Activate it after cooling operation.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your air conditioner. Always disconnect power before performing any maintenance.

6.1 Air Filter Cleaning

The air filter should be cleaned every two weeks or more frequently depending on usage and air quality.

1. Open the front panel of the indoor unit.
2. Remove the washable air filters.
3. Clean the filters with a vacuum cleaner or wash them with lukewarm water and a mild detergent.
4. Rinse thoroughly and allow them to dry completely in a shaded area before reinstalling.

5. Close the front panel.

6.2 Exterior Cleaning

Wipe the indoor unit's exterior with a soft, dry cloth. For stubborn dirt, use a damp cloth with a mild detergent, then wipe dry. Do not use harsh chemicals or abrasive cleaners.

6.3 Seasonal Maintenance

- **Before Summer:** Check the outdoor unit for any obstructions (leaves, debris) and ensure they are cleared. Verify proper drainage.
- **Professional Check-up:** Consider an annual professional inspection and cleaning of the entire system, including refrigerant levels and coil cleaning, to maintain efficiency.

7. TROUBLESHOOTING

Before contacting service, review the following common issues and their solutions.

Problem	Possible Cause	Solution
Unit does not turn on	No power supply; Remote control batteries depleted; Circuit breaker tripped.	Check power connection; Replace remote batteries; Reset circuit breaker.
Insufficient cooling/heating	Dirty air filter; Blocked outdoor unit; Doors/windows open; Incorrect mode/temperature setting.	Clean air filter; Clear obstructions from outdoor unit; Close doors/windows; Adjust settings.
Water leakage from indoor unit	Clogged drain pipe; Improper installation.	Clear drain pipe obstruction; Contact a qualified technician for inspection.
Unusual noise	Loose parts; Foreign object in fan; Unit not level.	Check for loose parts; Turn off and inspect for foreign objects (if safe); Ensure unit is level. If noise persists, contact service.
Wi-Fi connection issues	Router issues; Incorrect Wi-Fi password; Distance from router.	Restart router; Re-enter Wi-Fi password in app; Move router closer or use a Wi-Fi extender.

If the problem persists after attempting these solutions, please contact SAMSUNG customer support or a qualified service technician.

8. SPECIFICATIONS

Detailed technical specifications for the SAMSUNG Split Digital Inverter Ultra AI 12,000 BTUs Air Conditioner, model F-2X12DYFZA.

Feature	Specification
Brand	SAMSUNG
Model Number	F-2X12DYFZA

Feature	Specification
Indoor Unit Model	AR12DYFZAWKNAZ
Cooling Capacity	12,000 BTUs/h
Voltage	220 Volts
Energy Rating	A
Noise Level (Indoor Unit)	43/25 dBA
Indoor Unit Dimensions (W x D x H)	820 x 215 x 299 mm
Indoor Unit Weight	9.2 kg
Overall Product Dimensions	37.5 x 88 x 29 cm
Overall Product Weight	65.5 kg
Technology	Digital Inverter, Ultra AI
Connectivity	Wi-Fi compatible
Filter Type	Washable
Included Components	Air Conditioner Split Samsung Digital Inverter Ultra AI 12000 BTUs Frio AR12DYFZAWK/AZ (220V), Remote Control
Certification	ANATEL: 107252102752

9. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or visit the official SAMSUNG website. Keep your purchase receipt as proof of purchase for warranty claims.

For technical support, service requests, or further inquiries, please contact SAMSUNG customer service. Contact details can typically be found on the SAMSUNG official website or in the product packaging.

SAMSUNG Official Website: www.samsung.com