

STONELINE 22705

STONELINE Electric Pasta Maker User Manual

Model: 22705

INTRODUCTION

Thank you for choosing the STONELINE Electric Pasta Maker. This device is designed to simplify the process of making fresh, homemade pasta and gnocchi. Please read this manual carefully before first use to ensure safe operation and optimal performance. Keep this manual for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not immerse the motor unit in water or other liquids. Clean with a damp cloth only.
- This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Keep out of reach of children.
- Use only attachments and accessories recommended by the manufacturer.
- Do not operate the appliance if the charging cable or plug is damaged, or if the appliance malfunctions or has been damaged in any manner.
- Ensure the appliance is fully assembled and attachments are securely in place before operation.
- Avoid contact with moving parts.
- Unplug the appliance from the power source (USB-C cable) before cleaning or when not in use.
- This product is for household use only.

PACKAGE CONTENTS

Please check the package contents to ensure all items are present and undamaged:

- 1 x STONELINE Electric Pasta Maker (Main Unit)

- 5 x Stainless Steel Pasta Attachments (for square spaghetti, wide pasta, thick pasta, thin pasta, ribbon noodles)
- 2 x Gnocchi Attachments (large and small funnel)
- 1 x USB-C Charging Cable



Image: All components of the STONELINE Electric Pasta Maker, including the main unit, various pasta discs, and gnocchi funnels.

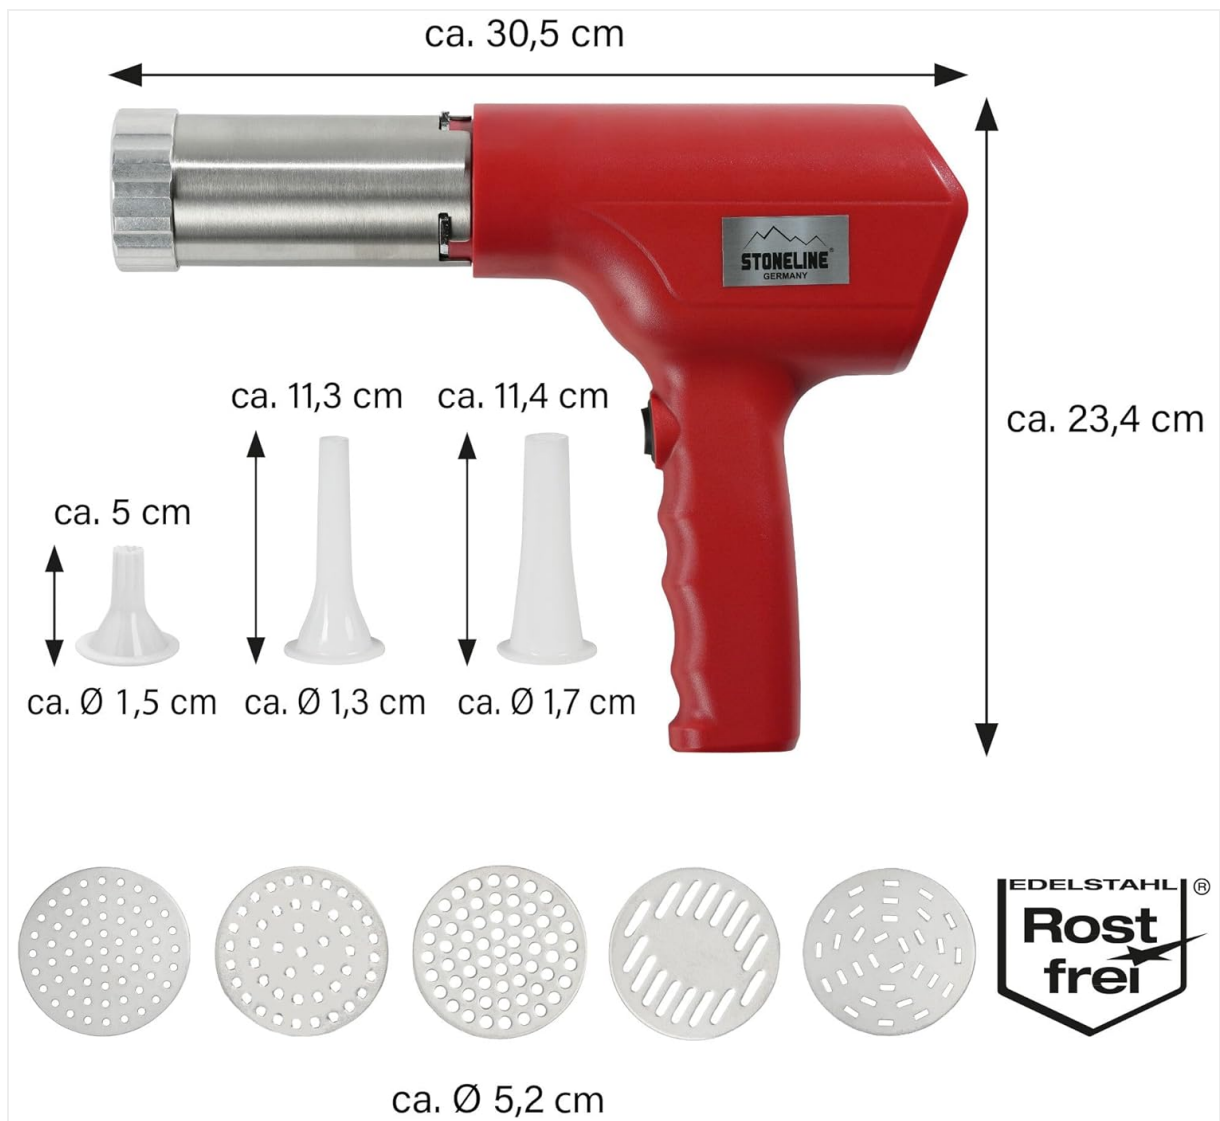


Image: Diagram showing the dimensions of the pasta maker and its various attachments, including pasta discs and gnocchi funnels.

PRODUCT OVERVIEW

The STONELINE Electric Pasta Maker consists of a main motor unit, a dough tube, a dough pusher, and various interchangeable pasta and gnocchi attachments. It features a USB-C rechargeable battery for wireless operation.



Image: An exploded diagram illustrating the main components of the pasta maker, including the motor unit, dough tube, and end cap with attachment.

SETUP

1. Charging the Device

Before first use, fully charge the pasta maker. Connect the provided USB-C charging cable to the charging port on the device and plug the other end into a suitable USB power adapter (not included). The device is equipped with two powerful batteries (3000 mAh total capacity) and has a power of 40 watts.


2. Assembling the Pasta Maker

1. Ensure the device is turned off.
2. Select the desired pasta or gnocchi attachment.
3. Insert the chosen attachment into the end cap.
4. Attach the dough tube to the main unit.
5. Secure the end cap with the attachment onto the dough tube by twisting it clockwise until it is firmly in place.

OPERATING INSTRUCTIONS

1. Preparing the Dough

Prepare your pasta dough using desired ingredients such as pasta flour or durum wheat semolina. The dough should be firm but pliable, not too sticky or too dry. For best results, the dough should be kneaded well.

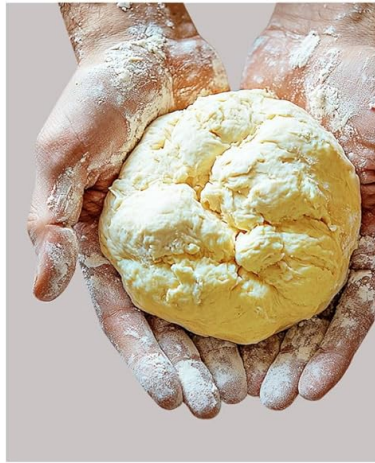

STEP: 1



STEP: 2



STEP: 3



STEP: 4



STEP: 5



STEP: 6

Image: A six-step visual guide demonstrating dough preparation, assembly of the pasta maker, loading dough, and extruding pasta directly into boiling water.

2. Making Pasta or Gnocchi

1. Ensure the pasta maker is assembled with the desired attachment.
2. Form your prepared dough into a cylindrical shape that fits into the dough tube.
3. Insert the dough into the dough tube. Fill the tube to approximately 3/4 capacity.
4. Position the pasta maker directly over a pot of boiling, salted water.
5. Press the switch to begin extruding the pasta. The fresh pasta will be pressed directly into the boiling water.
6. Once the desired length of pasta is extruded, release the switch. To retract the dough pusher and prepare for the next batch, press the switch again. Repeat the process until all dough is used.



Image: A person demonstrating the use of the STONELINE Electric Pasta Maker, extruding fresh spaghetti directly into a cooking pot.



Image: The pasta maker shown alongside different pasta shapes it can produce, including spaghetti, tagliatelle, and gnocchi, highlighting its versatility.

MAINTENANCE AND CLEANING

Proper cleaning after each use is crucial to prevent dough from drying and hardening, which can make cleaning difficult and affect performance.

1. **Immediate Cleaning:** After use, turn off the device. Disassemble the dough tube, end cap, and attachments promptly.
2. **Dough Pusher:** Wipe the dough pusher with a damp cloth. Do not rinse the main motor unit under water.
3. **Dough Tube, Attachments, and Screw Thread:** Clean these parts under clear running water. Use a small brush if necessary to remove any dough residue from the pasta discs.
4. **Drying:** Allow all cleaned parts to dry thoroughly before reassembling or storing.
5. **Storage:** Store the pasta maker and its accessories in a dry, clean place, away from direct sunlight and moisture. Its compact design allows for space-saving storage.

Note: The appliance is **NOT** dishwasher safe.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted.	Charge the device using the USB-C cable.
Dough is not extruding or extruding slowly.	Dough is too dry or too wet; dough tube is overfilled; attachment is clogged.	Adjust dough consistency; do not overfill the dough tube (max 3/4); clean the attachment thoroughly.
Pasta shapes are not forming correctly.	Dough consistency is incorrect; attachment is not properly secured.	Ensure dough is firm but pliable; check that the attachment is twisted on tightly.
Device stops during operation.	Battery is low; motor overload due to stiff dough.	Recharge the device. If dough is too stiff, remove some dough and adjust consistency.

SPECIFICATIONS

- **Model Number:** 22705
- **Brand:** STONELINE
- **Power:** 40 W
- **Battery:** 3000 mAh (rechargeable via USB-C)
- **Material:** Stainless Steel, Aluminum Alloy, Plastic (BPA free)
- **Item Weight:** 1.5 Kilograms
- **Number of Attachments:** 7 (5 pasta discs, 2 gnocchi funnels)
- **Dishwasher Safe:** No
- **Dimensions (approx.):** 30.5 cm (Length) x 6.5 cm (Width) x 23.5 cm (Height)

WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the documentation included with your purchase or visit the official STONELINE website. You may also contact STONELINE customer service directly for assistance.

STONELINE Official Website: www.stoneline.de (Example link, actual link may vary)