

BAKAJI 52671

BAKAJI XXL Dual Basket Air Fryer Instruction Manual

Model: 52671

1. INTRODUCTION

Thank you for choosing the BAKAJI XXL Dual Basket Air Fryer. This appliance uses hot air circulation to cook food, providing a crispy exterior and juicy interior with little to no oil. It is designed for healthy and convenient cooking, making it an excellent alternative to traditional frying and oven baking.

Important Safety Information

- Always place the air fryer on a stable, heat-resistant surface, away from walls or other appliances to ensure proper ventilation.
- Do not immerse the appliance, cord, or plug in water or any other liquid.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Keep children and pets away from the appliance during operation.
- Do not block the air inlet or outlet vents.
- Always unplug the appliance when not in use and before cleaning. Allow it to cool down completely before handling.
- Do not operate the appliance if the plug, power cord, or the appliance itself is damaged.

2. PRODUCT OVERVIEW

The BAKAJI XXL Dual Basket Air Fryer features two independent cooking zones, allowing you to prepare different foods simultaneously. Its intuitive touch display provides easy control over cooking settings.



Figure 2.1: Front view of the BAKAJI XXL Dual Basket Air Fryer.

Components

- Main Unit with Touch Display
- Two Removable Cooking Baskets
- Two Removable Crisper Plates (Non-stick, Dishwasher Safe)
- Power Cord



Schermo LED



Temperatura regolabile



Tempo regolabile



Doppia
funzione di cottura



Sincronizzazione finale



Figure 2.2: LED screen and control icons for the BAKAJI Air Fryer.

The LED screen displays temperature, time, and various icons for pre-set programs, dual cooking, and synchronization functions.

3. SPECIFICATIONS

Feature	Specification
Capacity	2 x 4.0 Liters (Total 8 Liters)
Dimensions (D x W x H)	37.6P x 32l x 36.6H cm (378 x 364 x 319 mm)
Weight	7.5 kg
Power Output	1700 Watts

Feature	Specification
Adjustable Temperature	60 - 200°C
Timer	1 - 60 minutes
Display	LED Touch Screen
Voltage	230 Volt (AC)
Material	Plastic (Exterior), Non-stick coating (Internal baskets)
Cable Length	90 cm
Special Features	Timer, Dual Power Zones, Synchronization Function, Automatic Shut-off, Anti-overheating



Figure 3.1: Product dimensions.

4. SETUP

4.1 Unpacking

1. Carefully remove the air fryer and all packaging materials from the box.
2. Remove any stickers or labels from the appliance.
3. Check that all components listed in the Product Overview section are present and undamaged.

4.2 Initial Cleaning

Before first use, clean the appliance thoroughly.

- Wipe the exterior of the appliance with a damp cloth.
- Wash the cooking baskets and crisper plates with hot water, dish soap, and a non-abrasive sponge. These parts are also dishwasher safe.
- Rinse and dry all parts thoroughly before reassembling.

CESTELLI ESTRAIBILI

Rivestimento antiaderente e lavabile in lavastoviglie



Figure 4.1: Removable baskets and crisper plates.

4.3 Placement

- Place the air fryer on a stable, level, and heat-resistant surface.
- Ensure there is at least 10 cm of free space around the back and sides of the appliance, and above it, for adequate air circulation.

- Do not place the appliance near flammable materials or heat sources.

5. OPERATING INSTRUCTIONS

5.1 Powering On and Basic Operation

1. Plug the power cord into a grounded wall outlet. The display will illuminate briefly.
2. Pull out the desired cooking basket(s) by the handle. Place the crisper plate inside the basket.
3. Place your ingredients into the basket. Do not overfill.
4. Slide the basket(s) back into the air fryer until they click into place.
5. Press the power button on the touch display to turn on the appliance.



Figure 5.1: Touch display with anti-overheating feature.

5.2 Setting Temperature and Timer

- On the touch display, select the basket you wish to program (1 or 2).
- Use the temperature control buttons (usually '+' and '-') to adjust the cooking temperature (60-200°C).

- Use the timer control buttons (usually '+' and '-') to set the cooking time (1-60 minutes).
- Press the start/pause button to begin cooking.

5.3 Using Dual Baskets and Synchronization Function

This air fryer features two independent cooking zones, allowing for versatile meal preparation.

ZONE DOPPIE DI POTENZA

Funzione di spegnimento automatico



Figure 5.2: Dual power zones and automatic shut-off.

- **Independent Cooking:** You can set different temperatures and times for each basket (Basket 1 and Basket 2) to cook different foods simultaneously.
- **Synchronization Function:** To ensure both dishes finish cooking at the same time, use the synchronization feature. After setting the time and temperature for both baskets, press the 'SYNC' button. The air fryer will automatically adjust the start times of each basket so they complete cooking together.



Figure 5.3: Synchronization function in action with two different foods.

5.4 Pre-set Programs

The air fryer includes pre-set programs for common dishes. Select the desired program icon on the touch display, and the appliance will automatically set the optimal temperature and time. You can manually adjust these settings if needed.

5.5 Cooking Tips

- For best results, shake the baskets halfway through cooking for items like fries or nuggets to ensure even crisping.
- Lightly oiling fresh ingredients can enhance crispiness.
- The air fryer cooks faster than a traditional oven. Monitor food closely, especially during initial uses.
- The appliance features fast air circulation and 1700W power for efficient cooking.



VELOCE CIRCOLAZIONE DELL'ARIA

Cuoce gli alimenti velocemente, risparmiando
tempo ed energia fino al 50%

1700 W



180 °C - 20 minuti



170 °C - 20 minuti



190°C-23min



180 °C - 14 minuti

Figure 5.4: Fast air circulation and power details.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your air fryer.

6.1 Cleaning the Baskets and Crisper Plates

- After each use, unplug the air fryer and allow it to cool completely.
- Remove the cooking baskets and crisper plates.
- Wash them with hot water, dish soap, and a non-abrasive sponge. The non-stick coating makes them easy to clean.
- Alternatively, these parts are dishwasher safe for convenient cleaning.
- Ensure they are completely dry before storing or next use.

6.2 Cleaning the Interior and Exterior

- Wipe the exterior of the appliance with a damp cloth. Do not use harsh abrasives or metal scouring pads.
- For the interior, gently wipe with a damp cloth. If necessary, use a soft brush to clean the heating element, ensuring the appliance is unplugged and cool.
- Never immerse the main unit in water.

7. TROUBLESHOOTING

If you encounter any issues with your air fryer, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on	Not plugged in; Power outlet issue; Appliance fault.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. If the problem persists, contact customer support.
Food is not cooked evenly	Baskets are overfilled; Food not shaken; Incorrect temperature/time.	Do not overfill baskets. Shake or flip food halfway through cooking. Adjust temperature and time as needed.
White smoke coming from the appliance	Grease residue from previous use; Fatty food being cooked.	Clean the baskets and crisper plates thoroughly. Remove excess oil from food before cooking. This is usually harmless.
Unpleasant plastic smell during first uses	New appliance odor.	This is normal for new appliances and will dissipate after a few uses. Ensure good ventilation during initial operation.
Food is not crispy	Not enough oil (for fresh food); Temperature too low; Cooking time too short.	Lightly brush fresh food with oil. Increase temperature or cooking time. Ensure baskets are not overcrowded.

8. WARRANTY AND SUPPORT

8.1 Warranty Information

Your BAKAJI XXL Dual Basket Air Fryer is covered by a standard manufacturer's warranty against defects in materials and workmanship. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration. Keep your proof of purchase for warranty claims.

8.2 Customer Support

For any questions, technical assistance, or warranty claims, please contact BAKAJI customer support. Contact details can typically be found on the product packaging, the official BAKAJI website, or your purchase documentation.

