

HADEN 211064

Haden 25L 4-in-1 Digital Air Fryer Microwave and Convection & Grill Oven

Model: 211064

[Safety Information](#)[Product
Overview](#)[Setup](#)[Operating
Instructions
Warranty &
Support](#)[Maintenance](#)[Troubleshooting](#)[Specifications](#)

1. SAFETY INFORMATION

Please read all instructions carefully before using the appliance and retain them for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

General Safety Precautions

- Do not operate the appliance if the power cord or plug is damaged.
- Ensure the appliance is placed on a stable, level, heat-resistant surface.
- Maintain adequate ventilation around the appliance. Do not block any ventilation openings.
- Do not use the appliance outdoors or in damp conditions.
- Always unplug the appliance when not in use and before cleaning.
- Do not immerse the appliance, cord, or plug in water or any other liquid.
- This appliance is for household use only.
- Keep children and pets away from the appliance during operation.
- The appliance generates heat during use. Do not touch hot surfaces. Use oven mitts or handles.
- Do not place food directly on the bottom of the oven cavity. Always use the turntable or appropriate accessories.
- Do not use abrasive cleaners or sharp objects to clean the appliance.

Microwave Specific Safety

- Do not heat sealed containers, baby bottles with narrow necks, or whole eggs in the microwave, as they may explode.

- Only use microwave-safe cookware. Metal or foil should not be used in microwave mode.
- Liquids heated in the microwave can superheat without boiling. Exercise extreme caution when removing containers.
- Regularly inspect the door seals and door for any damage. Do not operate if damaged.

Air Fryer/Convection/Grill Specific Safety

- Ensure the air fryer tray and grill rack are properly positioned before use.
- Do not overfill the air fryer basket to allow for proper air circulation.
- Some foods may splatter during air frying; use caution when opening the door.
- Always clean the appliance after each use to prevent grease buildup, which can be a fire hazard.

2. PRODUCT OVERVIEW

The Haden 25L 4-in-1 Digital Air Fryer Microwave and Convection & Grill Oven is a versatile kitchen appliance designed to simplify your cooking experience. It combines the functions of a microwave, air fryer, convection oven, and grill in one compact unit.



Figure 2.1: Front view of the Haden 25L 4-in-1 Digital Air Fryer Microwave, showcasing its sleek design and digital control panel.

Key Components

- **Control Panel:** Digital display with touch controls for various functions and settings.
- **Door Handle:** For opening and closing the appliance door.
- **Viewing Window:** Allows you to monitor cooking progress.
- **Turntable:** Rotates food for even cooking in microwave mode.
- **Turntable Ring:** Supports the turntable.

- **Air Fryer Tray:** Non-stick tray designed for air frying, allowing hot air to circulate around food.
- **Grill Rack:** Used for grilling and some convection cooking.
- **Oven Cavity:** Stainless steel interior for durability and easy cleaning.



Figure 2.2: Included accessories: Non-stick air fry tray and grill rack, designed for optimal cooking performance and easy cleaning.

3. SETUP

Unpacking and Placement

1. Carefully remove the appliance and all packaging materials from the box.
2. Remove any protective film or stickers from the appliance.
3. Inspect the appliance for any damage. Do not use if damaged.

4. Place the appliance on a flat, stable, heat-resistant surface, such as a kitchen countertop.
5. Ensure there is at least 20 cm (8 inches) of clear space above the appliance, 10 cm (4 inches) at the rear, and 5 cm (2 inches) on each side for proper ventilation. Do not place it inside a cupboard or enclosed space.
6. Keep the appliance away from heat sources, such as stoves or ovens, and away from water.



Figure 3.1: Appliance dimensions: Length 48.3 cm, Height 28.1 cm, Depth 40 cm. Ensure adequate clearance for ventilation.

Initial Use

1. Before first use, wipe the interior and exterior of the appliance with a damp cloth.
2. Wash the turntable, turntable ring, air fryer tray, and grill rack in warm, soapy water. Rinse and dry thoroughly.
3. Place the turntable ring in the center of the oven cavity, then place the glass turntable on top, ensuring it sits securely.
4. Plug the appliance into a grounded electrical outlet. The display will show "0:00" or similar.
5. Set the clock: Press the "Clock/Timer" button, use the "+" or "-" buttons to set the hour, press "Clock/Timer" again, then set the minutes. Press "Clock/Timer" to confirm.
6. It is recommended to run the appliance empty for 5-10 minutes on a high heat setting (e.g., Air Fry at 230°C) to burn off any manufacturing residues. A slight odor or smoke may be present; this is normal. Ensure good ventilation during this process.

4. OPERATING INSTRUCTIONS

The Haden 4-in-1 appliance offers multiple cooking modes and convenient presets for various dishes.

NON-STICK AIR FRY & GRILL PANS INCLUDED



Figure 4.1: Overview of the control panel, highlighting the main cooking modes (Air Fryer, Microwave, Grill, Microwave + Convection) and general functions (Defrost, Timer, Auto Reheat, Express Cooking).

Cooking Modes

Select your desired cooking mode using the dedicated buttons on the control panel.

4.1. Microwave Cooking (900W)

- Press the "Micro" button.
- Use the "+" or "-" buttons to set the cooking time.
- Press "Start" to begin cooking.
- For quick start, press the "+30 Sec" button to add 30 seconds of cooking time at full power. Repeated presses add more time.

4.2. Air Fry Cooking (1500W)

- Place food on the air fryer tray.
- Press the "Air Fry" button.
- Use the "+" or "-" buttons to set the cooking time and temperature (up to 230°C).
- Press "Start" to begin air frying.


4.3. Grill Function

- Place food on the grill rack.
- Press the "Grill" button.
- Use the "+" or "-" buttons to set the cooking time.
- Press "Start" to begin grilling.

4.4. Microwave + Convection (Combi)

- Press the "Micro + Conv" button.
- Select the desired convection temperature using "+" or "-" buttons.
- Set the cooking time.
- Press "Start" to begin combination cooking.

Presets and Special Functions

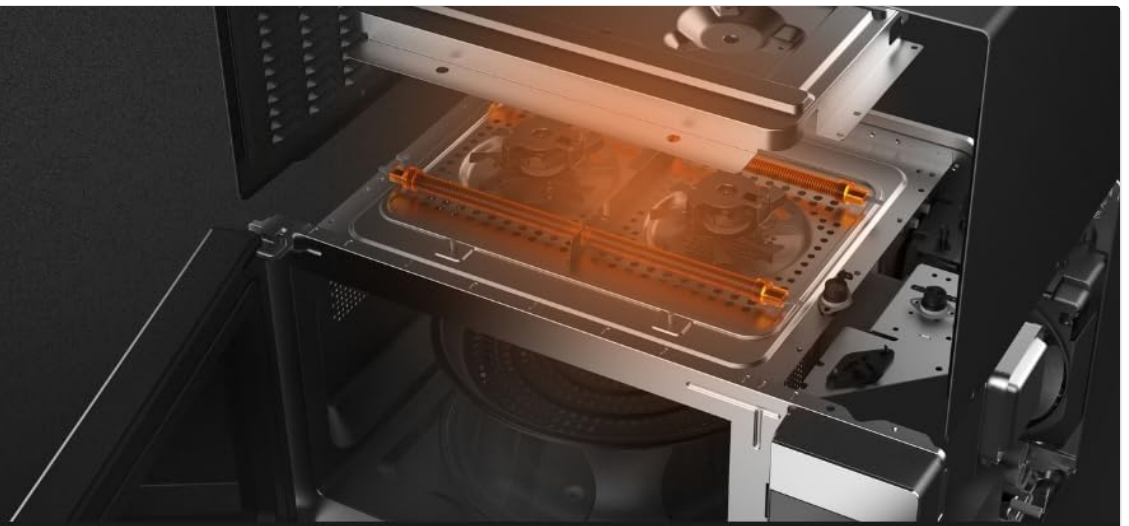

AEROFUSION TECHNOLOGY

REVOLUTIONIZING COOKING WITH AEROFUSION TECHNOLOGY, THIS CUTTING-EDGE SYSTEM COMBINES HIGH-VELOCITY AIR CIRCULATION AND PRECISE MICROWAVE HEAT DISTRIBUTION.



Figure 4.2: Detailed view of the control panel showing 8 Auto Cook Presets (AC01-AC08) and 7 Air Fryer Presets (AF01-AF07) for convenient one-touch cooking.

4.5. Auto Cook Presets (8 Options)

These presets are designed for common microwaveable foods. Refer to the appliance's internal label or user interface for specific food types (e.g., Milk Coffee, Potato, Rice, Spaghetti, Fish, Beef/Mutton, Skewered Meat, Cake).

- Press the "Auto Cook" button repeatedly to cycle through the auto cook options (AC01-AC08).
- Press "Start" to begin cooking.

4.6. Air Fryer Presets (7 Options)

These presets are optimized for popular air-fried foods (e.g., Chicken Drumstick, Chicken Nuggets, Chicken Wings, French Fries, Mozzarella Sticks, Onion Rings, Chicken Popcorn).

- Press the "Air Fry" button, then use the "+" or "-" buttons to select the desired air fryer preset (AF01-AF07).
- Press "Start" to begin air frying.

4.7. Speed Defrost

- Press the "Defrost Time/Weight" button.
- Use the "+" or "-" buttons to select the defrost time or weight.
- Press "Start" to begin defrosting.

4.8. Timer Function

- Press the "Clock/Timer" button (when not setting the clock).
- Use the "+" or "-" buttons to set the desired countdown time.
- Press "Start". The timer will count down without activating any cooking function.

4.9. Auto Reheat

- Press the "Auto Reheat" button.
- Press "Start" to begin reheating.

4.10. Express Cook

- Press the "+5 Min" or "+1 Min" buttons for quick cooking at full microwave power.
- Press "Start" to begin.

4.11. Child Safety Lock

- To activate: Press and hold the "Stop/Cancel" button for 3 seconds until a beep sounds and the lock indicator appears on the display.
- To deactivate: Press and hold the "Stop/Cancel" button for 3 seconds until a beep sounds and the lock indicator disappears.

5. MAINTENANCE

Regular cleaning and proper care will ensure the longevity and optimal performance of your Haden 4-in-1 appliance.

Cleaning Instructions

1. Always unplug the appliance from the power outlet before cleaning.
2. Allow the appliance to cool completely before cleaning.
3. **Interior:** Wipe the interior cavity with a damp cloth and mild detergent. For stubborn stains, place a bowl of water with lemon slices inside and microwave for 2-3 minutes to loosen residue, then wipe clean. The stainless steel interior is designed for easy cleaning.
4. **Exterior:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.
5. **Door and Door Seal:** Clean the door, door seals, and adjacent parts carefully with a damp cloth to remove any spills or splatters.
6. **Turntable, Turntable Ring, Air Fryer Tray, Grill Rack:** These components can be washed in warm, soapy water or placed in the dishwasher (if dishwasher-safe, refer to specific component instructions). Rinse and dry thoroughly before reassembling.
7. **Control Panel:** Wipe gently with a soft, damp cloth. Do not allow water to seep into the control panel.

Storage

When not in use for extended periods, ensure the appliance is clean and dry. Store it in a cool, dry place, away from

direct sunlight and moisture.

6. TROUBLESHOOTING

If you encounter issues with your appliance, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outage; circuit breaker tripped; door not closed properly.	Ensure plug is securely in outlet; check household circuit breaker; close door firmly.
Food is not cooking evenly.	Improper food placement; turntable not rotating; incorrect power level/temperature.	Ensure food is centered; check turntable and ring for obstructions; adjust settings as needed.
Excessive smoke or burning smell during air frying.	Grease buildup; food splattering; too much oil used.	Clean the interior and accessories thoroughly; reduce oil; ensure food is not touching heating elements.
Display shows an error code.	Internal malfunction.	Unplug the appliance for 5 minutes, then plug back in. If error persists, contact customer support.
Child lock is activated.	Accidental activation.	Press and hold "Stop/Cancel" button for 3 seconds to deactivate.

If the problem persists after trying these solutions, please contact Haden Customer Support.

7. SPECIFICATIONS

Technical details for the Haden 25L 4-in-1 Digital Air Fryer Microwave and Convection & Grill Oven.

Feature	Detail
Brand	HADEN
Model Number	211064
Capacity	25 Litres
Product Dimensions (L x W x H)	49.5 x 40 x 29 cm
Item Weight	17.3 kg

Feature	Detail
Installation Type	Freestanding
Microwave Power	900W
Air Fry Power	1500W
Total Wattage	1400 watts (General Power Consumption)
Voltage	230 Volts
Heating Method	Convection
Special Features	Auto Cook, Shortcut Keys, Child Safety Lock, Defrost, Digital Control, Express Cook, Grill Function
Material Type	Stainless Steel, Glass
Inner Material Type	Stainless Steel
Included Components	Microwave Rack, Grill, Turntable, Air Fryer Tray
Colour	Silver & Black
Country of Origin	China

8. WARRANTY & SUPPORT

For detailed warranty information, including terms and conditions, please refer to the warranty card included with your purchase or visit the official Haden website.

Customer Support

If you have any questions, require technical assistance, or need to report an issue with your Haden 25L 4-in-1 Digital Air Fryer Microwave, please contact Haden Customer Support through the following channels:

- **Website:** Visit the official Haden website for FAQs, product registration, and contact forms.
- **Phone:** Refer to your product documentation for the customer service phone number in your region.
- **Email:** Contact customer support via email for non-urgent inquiries.

Please have your model number (211064) and purchase date ready when contacting support.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question