

[manuals.plus](#) /› [NBCP](#) /› [NBCP Wired PS3 PC Game Controller User Manual](#)

NBCP Wired PC PS3

NBCP Wired PS3 PC Game Controller User Manual

Model: Wired PC PS3

1. PRODUCT OVERVIEW

The NBCP Wired PS3 PC Game Controller is designed to provide a versatile and immersive gaming experience across multiple platforms. Featuring dual vibration feedback and a turbo function, this controller offers precise control and enhanced gameplay for PC (Windows 7/8/8.1/10/Vista) and PS3 systems.



Figure 1: NBCP Wired PS3 PC Game Controller

2. PACKAGE CONTENTS

- 1 x NBCP Wired PS3 PC Game Controller
- 1 x User Manual (this document)

3. SETUP GUIDE

3.1 PC Connection (Windows 7/8/8.1/10/Vista)

The controller supports plug-and-play functionality for Windows operating systems, utilizing both X-Input and D-Input modes for broad game compatibility.

1. Locate an available USB port on your PC.
2. Insert the USB connector of the controller into the USB port.
3. The system will automatically detect and install the necessary drivers. This process may take a few moments.
4. Once installed, the controller is ready for use with compatible games.



Plug & Play

Support win xp/win7/win8/
win8.1/win10 systems

① X-INPUT
② D-INPUT



Figure 2: Connecting the controller to a PC via USB

3.2 PS3 Connection

The controller is compatible with all versions of the PS3 console (Fat, Slim, Super Slim).

1. Locate an available USB port on your PS3 console.
2. Insert the USB connector of the controller into the USB port.
3. The PS3 will recognize the controller automatically.
4. The controller is now ready for use with PS3 games.



Figure 3: Controller connected to a PS3 console

4. OPERATING INSTRUCTIONS

4.1 Controller Layout

Dual vibration feedback

Built-in dual-motor vibration, powerful gaming experience



Figure 4: Controller Button Layout

- **D-PAD:** Directional Pad for precise movement.
- **A, B, X, Y Keys:** Standard action buttons.
- **AUTO Key:** Used in conjunction with the TURBO function.
- **MODE Key:** Switches between different controller modes if applicable.
- **TURBO Key:** Activates the turbo function for rapid button presses.
- **LED Indicator:** Displays controller status.
- **Left Analog Stick (L3):** Provides 360-degree movement and can be pressed for L3 input.
- **Right Analog Stick (R3):** Provides 360-degree movement and can be pressed for R3 input.

4.2 Dual Vibration Feedback

The controller features built-in dual motors that provide vibration feedback, enhancing the gaming experience by simulating in-game actions. The intensity of the vibration can vary based on the game and specific in-game events.



Figure 5: Dual Vibration Feedback Mechanism

4.3 Turbo Function

The Turbo function allows for rapid, continuous pressing of a button with a single hold, which can be advantageous in certain games.



Figure 6: Turbo Function Button

To activate Turbo for a specific button:

1. Press and hold the desired action button (e.g., A, B, X, Y).
2. While holding the action button, press the **TURBO** button once.
3. Release both buttons. The action button will now continuously register presses when held down.

To deactivate Turbo for a specific button:

1. Press and hold the action button for which Turbo is active.
2. While holding the action button, press the **TURBO** button once.
3. Release both buttons. The Turbo function for that button is now off.

4.4 Ergonomic Design

The controller is designed with an ergonomic shape and asymmetrical joystick layout for comfortable and extended gameplay sessions. The analog sticks offer 360-degree ultra-accuracy for precise control.



Figure 7: Ergonomic Controller Shape

4.5 In-Game Demonstration

Your browser does not support the video tag.

Video 1: Demonstration of the controller in use during gameplay, showcasing responsiveness and vibration feedback.

5. MAINTENANCE

To ensure the longevity and optimal performance of your NBCP Game Controller, follow these maintenance guidelines:

- Cleaning:** Use a soft, dry cloth to wipe down the controller. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals or abrasive cleaners.
- Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures. Avoid wrapping the cable too tightly to prevent damage.
- Handling:** Do not drop the controller or subject it to strong impacts. Avoid pulling the cable forcefully from the USB port or the controller itself.

6. TROUBLESHOOTING

If you encounter issues with your controller, please refer to the following common solutions:

Problem	Possible Solution
Controller not recognized by PC/PS3	Ensure the USB cable is securely plugged into both the controller and the device. Try a different USB port on your PC/PS3. Restart your PC/PS3. For PC, check Device Manager for driver issues. Reinstall drivers if necessary (though typically plug-and-play).

Problem	Possible Solution
Buttons/Joysticks unresponsive or erratic	<p>Disconnect and reconnect the controller.</p> <p>Ensure the game supports controller input.</p> <p>Check game settings for controller configuration.</p> <p>Test the controller on another PC/PS3 to rule out device-specific issues.</p>
Vibration feedback not working	<p>Ensure the game supports vibration feedback.</p> <p>Check in-game settings to ensure vibration is enabled.</p> <p>Some older games or emulators may not fully support vibration.</p>

7. SPECIFICATIONS

Feature	Detail
Model Number	Wired PC PS3
Connectivity	Wired USB
Cable Length	1.8 meters (5.9 feet)
Compatibility	PC (Windows 7/8/8.1/10/Vista, X-Input & D-Input), PS3 (all versions)
Vibration Feedback	Dual Motor Vibration
Special Features	Turbo Function, Ergonomic Design
Item Weight	10.5 ounces
Package Dimensions	6.81 x 4.61 x 3.19 inches



Figure 8: Controller Dimensions

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or contact the manufacturer directly. Keep your purchase receipt as proof of purchase.

Manufacturer: NBCP