

Eueiriup HKWH002-800W

Eueiriup 800W Electric Panel Heater Instruction Manual

Model: HKWH002-800W

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Eueiriup 800W Electric Panel Heater. Please read all instructions carefully before installation and use. Retain this manual for future reference.

PRODUCT OVERVIEW

The Eueiriup 800W Electric Panel Heater is designed for indoor use, providing efficient and quiet convection heating. It features an aluminum body, dual heat settings, and an adjustable thermostat. The heater can be used freestanding with included wheels or mounted on a wall.

Key Features:

- **800W Heating Power:** Provides effective warmth for indoor spaces.
- **Aluminum Convection Technology:** Heats without fans, gas, or oil, ensuring quick warmth.
- **Dual Heat Settings:** Offers two power levels for customized temperature control.
- **Adjustable Thermostat:** Allows precise temperature management.
- **Quiet Operation:** Fan-less design minimizes noise (less than 30dB).
- **Allergy-Friendly:** No fan to circulate dust, pollen, or dander.
- **Safety Features:** Includes overheat protection, anti-tip protection, V0 flame retardant materials, and IPX4 waterproof rating.
- **Versatile Mounting:** Can be used freestanding with wheels or wall-mounted.
- **Portable Design:** Equipped with casters and ergonomic handles for easy movement.
- **Power Cord Storage:** Integrated area for convenient cord management.

EFFICIENT & QUIET HEATING



Low Noise



Energy Efficient



Fast Heating



Figure 1: Illustration of the heater's efficient and quiet convection heating process.

Our



 All Aluminum

 Non-Liquid

 Non-Air Blower

Other



 Non Aluminum

 Containing Liquid

 Contains Fan

Figure 2: Comparison highlighting the Eueiriup heater's aluminum, non-liquid, and fan-less design.



Figure 3: Visual representation of whole room convection warming provided by the heater.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Read all instructions before using this heater.
2. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the heater and keep them away from the sides and rear.
3. Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
4. Always unplug heater when not in use.
5. Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
6. Do not use outdoors.
7. This heater is not intended for use in bathrooms, laundry areas, and similar indoor locations. Never locate heater where it may fall into a bathtub or other water container. The IPX4 waterproof rating protects against

splashing water, but immersion should be avoided.

8. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
9. To disconnect heater, turn controls to OFF, then remove plug from outlet.
10. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
11. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
12. A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
13. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
14. This heater is equipped with an anti-tip protection switch that automatically turns off the unit if it is accidentally knocked over.
15. The heater features overheat protection, which will shut off the unit if it reaches an unsafe temperature.
16. Constructed with V0 flame retardant materials for enhanced safety.



Figure 4: Visualizing the heater's tip-over and overheat safety features.

Unpacking:

Carefully remove the heater from its packaging. Check for any signs of damage. Ensure all components are present: heater unit, wheels (if using freestanding option), and wall-mounting hardware (if wall mounting).

Freestanding Assembly (with Wheels):

1. Place the heater upside down on a soft, flat surface to avoid scratching.
2. Attach the provided wheels to the designated slots at the bottom of the heater. Ensure they are securely fastened.
3. Carefully turn the heater upright.

Wall Mounting:

If you choose to wall mount the heater, ensure the wall surface is suitable and can support the heater's weight (20.4 lbs). Use the provided wall-mounting hardware. It is recommended to consult a qualified professional for wall installation to ensure safety and proper mounting. **Note:** Some users have reported that the back of the heater can become hot during operation. Ensure adequate clearance from the wall and any combustible materials if wall-mounting.

1. Select a suitable location on a wall, away from curtains, furniture, and other flammable objects. Maintain at least 3 feet (0.9 m) clearance from the front, sides, and rear.
2. Mark the drilling points on the wall using the mounting bracket as a template.
3. Drill holes and insert wall plugs (if necessary).
4. Secure the mounting bracket to the wall.
5. Carefully hang the heater onto the mounting bracket, ensuring it is stable and level.

Placement:

Place the heater on a firm, level surface. Ensure the power cord is not obstructed or placed under carpeting. The heater is suitable for various indoor rooms such as bedrooms, living rooms, dining rooms, bathrooms, offices, laundry rooms, and RVs.



Figure 5: Heater dimensions and examples of freestanding and wall-mounted placement.



Figure 6: Example of the heater installed as a wall-mounted unit.

OPERATING INSTRUCTIONS

Your Eueiriup Electric Panel Heater is equipped with simple control knobs for ease of use.

1. **Power On/Off:** Plug the heater into a standard 120V AC electrical outlet. Locate the power knob (usually marked with 'O' for off and 'I' or 'II' for power levels). Turn the knob to the desired power setting.
2. **Heat Settings:** The heater offers two heat settings. Select 'I' for a lower heat output or 'II' for full 800W heating power.
3. **Adjusting Thermostat:** Use the thermostat knob to set your desired room temperature. Turn the knob clockwise to increase the temperature setting and counter-clockwise to decrease it. The heater will cycle on and off to maintain the set temperature.
4. **Initial Use:** During the first few uses, a slight odor may be present. This is normal and will dissipate quickly. Ensure the room is well-ventilated during initial operation.

TEMPERATURE REGULATION



Figure 7: Control knobs for adjusting temperature and selecting heat output.

MAINTENANCE

Cleaning:

- Always unplug the heater and allow it to cool completely before cleaning.
- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Ensure no water enters the interior of the heater.
- Do not immerse the heater in water.

Storage:

- When not in use, store the heater in a cool, dry place.
- Use the integrated power cord storage area for neat organization.
- If wall-mounted, ensure it is securely fastened. If freestanding, ensure it is stable or stored away to prevent accidental tipping.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Heater does not turn on.	<p>Not plugged in.</p> <p>Power outlet malfunction.</p> <p>Thermostat set too low.</p> <p>Overheat protection activated.</p> <p>Tip-over switch activated.</p>	<p>Ensure the power cord is securely plugged into a 120V AC outlet.</p> <p>Test the outlet with another appliance.</p> <p>Increase the thermostat setting.</p> <p>Unplug the heater, let it cool for 10-15 minutes, then plug it back in.</p> <p>Ensure the heater is on a stable, level surface and upright.</p>
Heater produces insufficient heat.	<p>Thermostat set too low.</p> <p>Heat setting too low.</p> <p>Room size too large for heater capacity.</p>	<p>Increase the thermostat setting.</p> <p>Select the higher heat setting ('II').</p> <p>This 800W heater is designed for supplemental heating in smaller to medium-sized rooms.</p>
Unusual odor during operation.	<p>New product odor (initial use).</p> <p>Dust accumulation on heating elements.</p>	<p>This is normal for initial use and will dissipate. Ensure good ventilation.</p> <p>Unplug and clean the heater as per maintenance instructions.</p>

SPECIFICATIONS

Feature	Detail
Brand	Eueiriup
Model Number	HKWH002-800W
Power Output	800W
Voltage	120 Volts (AC)
Number of Heat Settings	2
Fuel Type	Electric
Form Factor	Wall Mount / Freestanding
Indoor/Outdoor Usage	Indoor
Color	White
Product Dimensions (D x W x H)	3"D x 13"W x 21"H
Item Weight	20.4 pounds
Special Features	Fast Heating, Portable, Wheels, Overheat Protection, Anti-Tip Protection, IPX4 Waterproof, V0 Flame Retardant Materials

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact the retailer where the product was acquired. Keep your purchase receipt as proof of purchase.

