

[Manuals.plus](#) /

› [Smad](#) /

› Smad 0.7 Cu.Ft Countertop Microwave Oven DMD70-20LBSGU-B7 Instruction Manual

Smad DMD70-20LBSGU-B7

Smad 0.7 Cu.Ft Countertop Microwave Oven DMD70-20LBSGU-B7 Instruction Manual

Model: DMD70-20LBSGU-B7

1. INTRODUCTION

Thank you for purchasing the Smad 0.7 Cu.Ft Countertop Microwave Oven. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your new appliance. Please read it thoroughly before use and retain it for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed, including the following:

- Read all instructions before using the appliance.
- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Ensure proper ventilation around the microwave. Do not block any ventilation openings.
- Do not heat liquids or other foods in sealed containers since they are liable to explode.
- Always use oven mitts when handling hot items from the microwave.

3. PACKAGE CONTENTS

Upon unpacking, please ensure all items are present and in good condition:

- Smad 0.7 Cu.Ft Countertop Microwave Oven
- Glass Turntable
- Roller Ring (under turntable)
- Instruction Manual

4. SETUP AND INSTALLATION

4.1 Placement

Place the microwave oven on a flat, stable surface that can support its weight and the heaviest food item likely to be cooked in it. Ensure there is adequate ventilation space:

- Leave a minimum of 4 inches (10 cm) of space on the top, back, and sides for proper airflow.
- Do not block any ventilation openings on the oven.
- Avoid placing the oven near heat sources or in areas with high humidity.

4.2 Turntable Installation

The glass turntable and roller ring are essential for even cooking. Install them as follows:

1. Place the roller ring in the circular indentation on the oven floor.
2. Carefully place the glass turntable onto the roller ring, ensuring it sits securely on the center hub.



ENJOY YOUR BAKING TIME

LET SMAD HELP YOU
MELT THE BUTTER

CHAT WITH YOUR FRIENDS

LET SMAD HELP YOU
MAKING SNACKS



NO TIME TO PREPARE BREAKFAST

LET SMAD OFFER YOU
DELICIOUS ONE

BEING BUSY WITH WORK

LET SMAD HELP YOU COOK
LUNCH



Image: Glass turntable and roller ring correctly placed inside the microwave oven cavity.

4.3 Power Connection

Plug the microwave oven into a grounded electrical outlet. Ensure the voltage matches the specifications of your appliance.



Image: Front view of the Smad 0.7 Cu.Ft Countertop Microwave Oven, ready for use.

5. OPERATING INSTRUCTIONS

The Smad microwave oven features a digital control panel for easy operation.



Image: Close-up of the digital control panel and LED display, showing time and function buttons.

5.1 Basic Cooking

1. Place food in a microwave-safe container on the glass turntable.

2. Close the oven door securely.
3. Use the number pad to enter the desired cooking time.
4. Press the 'Start' button to begin cooking.

5.2 Power Levels

This microwave offers 10 power levels to suit various cooking needs. To adjust the power level:

1. Enter the desired cooking time.
2. Press the 'Power' button.
3. Use the number pad to select a power level from 1 (lowest) to 10 (highest).
4. Press 'Start'.

5.3 Auto-Cook Programs

The oven includes 6 convenient auto-cook programs for common foods:

- Beverage
- Frozen Meal
- Popcorn
- Pizza
- Potatoes
- Reheat

To use an auto-cook program, simply press the corresponding button on the control panel. The oven will automatically set the cooking time and power level.

EASY OPERATION

6 AUTO MENUS—2 DEFROST OPTIONS



Power	Cook by Weight
Timer	Defrost by Weight
Cook	Speed Defrost

Image: The microwave's control panel showing the 6 auto-cook menu options and defrost functions.

5.4 Defrost Options

The microwave offers two defrost modes:

- **Defrost by Weight:** Allows you to input the weight of the food, and the oven calculates the defrosting time.
- **Speed Defrost:** Provides a quick defrost option for smaller items.

Refer to the control panel for specific buttons and instructions for each defrost mode.



Image: The microwave's control panel highlighting the 'Defrost by Weight' and 'Speed Defrost' buttons.

5.5 Child Safety Lock

The child safety lock prevents unintentional operation of the microwave, providing peace of mind.

- **To Activate:** Press and hold the 'Stop/Cancel' button for 3 seconds. A lock indicator will appear on the display.

- **To Deactivate:** Press and hold the 'Stop/Cancel' button for 3 seconds again. The lock indicator will disappear.



Image: A child reaching for the microwave's control panel, illustrating the importance of the child safety lock feature.

6. MAINTENANCE AND CLEANING

Regular cleaning helps maintain the performance and longevity of your microwave oven.

6.1 Exterior Cleaning

Wipe the exterior with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish.

6.2 Interior Cleaning

Clean the interior cavity with a mild detergent and a soft cloth. For stubborn food splatters, place a bowl of water with lemon slices inside and microwave for a few minutes. The steam will loosen the residue, making it easier to wipe away.

6.3 Turntable and Roller Ring

The glass turntable and roller ring are removable for easy cleaning. Wash them in warm, soapy water or in the dishwasher. Ensure they are completely dry before placing them back in the oven.

7. TROUBLESHOOTING

If you encounter issues with your microwave, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven does not start	Power cord unplugged; Door not closed properly; Child lock activated.	Ensure power cord is securely plugged in; Close door firmly; Deactivate child lock (refer to section 5.5).
Food not heating evenly	Food not stirred or rotated; Turntable not rotating.	Stir or rotate food halfway through cooking; Ensure turntable and roller ring are correctly installed and free of obstructions.
Light bulb not working	Light bulb burned out.	Contact customer support for replacement or service.
Unusual noise during operation	Turntable or roller ring not seated correctly; Foreign object in cavity.	Re-seat turntable and roller ring; Check for and remove any foreign objects.

8. SPECIFICATIONS

Brand	Smad
Model Number	DMD70-20LBSGU-B7
Capacity	0.7 Cubic Feet
Wattage	700 Watts
Power Levels	10
Product Dimensions (W x D x H)	17.9 x 14 x 10.4 inches
Item Weight	23.4 Pounds
Turntable Diameter	9.6 inches
Installation Type	Countertop
Special Features	Child Safety Lock, Digital Control, 6 Auto-Cook Programs

9. WARRANTY AND SUPPORT

9.1 Product Warranty

This Smad microwave oven is covered for **12 months against defects** from the date of purchase. This warranty covers manufacturing defects and does not cover damage caused by misuse, accident, or unauthorized modifications.

9.2 Customer Support

If you encounter any issues or require assistance with your product, please feel free to contact Smad customer support. When contacting support, please have your model number (DMD70-20LBSGU-B7) and purchase information readily available.

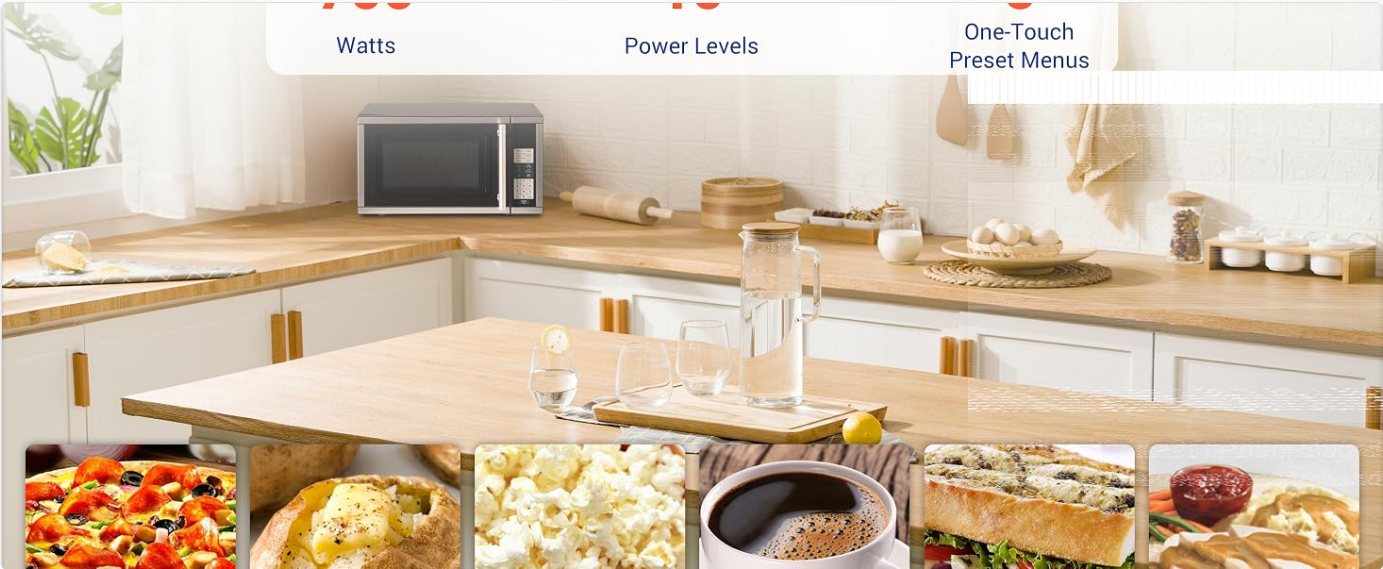


Image: Visual guide on handling damaged shipments and contacting customer support for assistance.

© 2025 Smad. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DXDPRTSD>

More documents and user manuals: <https://manuals.plus/>