

[manuals.plus](#) /› [ZdalaMit](#) /› [ZdalaMit RC-1251 Remote Control User Manual for Denon Sound Bars DHT-S216, DHT-S217](#)

ZdalaMit RC-1251

ZdalaMit RC-1251 Remote Control User Manual

For Denon Dolby Atmos Sound Bar Models DHT-S216 and DHT-S217

1. INTRODUCTION

This manual provides instructions for the ZdalaMit RC-1251 replacement remote control. This remote is designed to be compatible with Denon Dolby Atmos Sound Bar models DHT-S216 and DHT-S217, as well as replacing older remote models RC-1236 and RC-1245. No programming is required for its use; simply install batteries and it is ready to operate your compatible sound bar.


2. SETUP AND BATTERY INSTALLATION

The ZdalaMit RC-1251 remote control requires two AAA alkaline batteries for operation. Batteries are not included with the remote control.

2.1 Battery Installation Steps:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two 1.5V AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Once batteries are installed, the remote control is ready for immediate use with your compatible Denon sound bar. No additional pairing or programming steps are necessary.

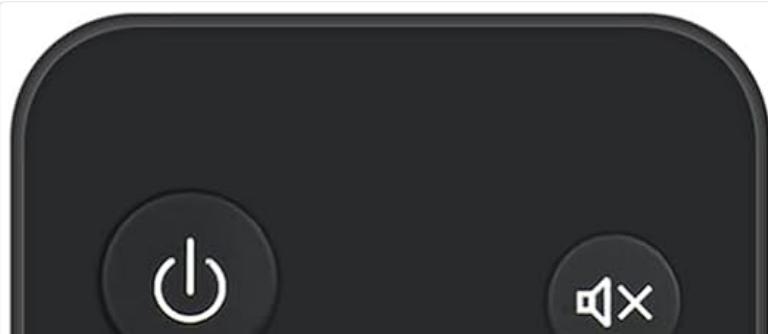

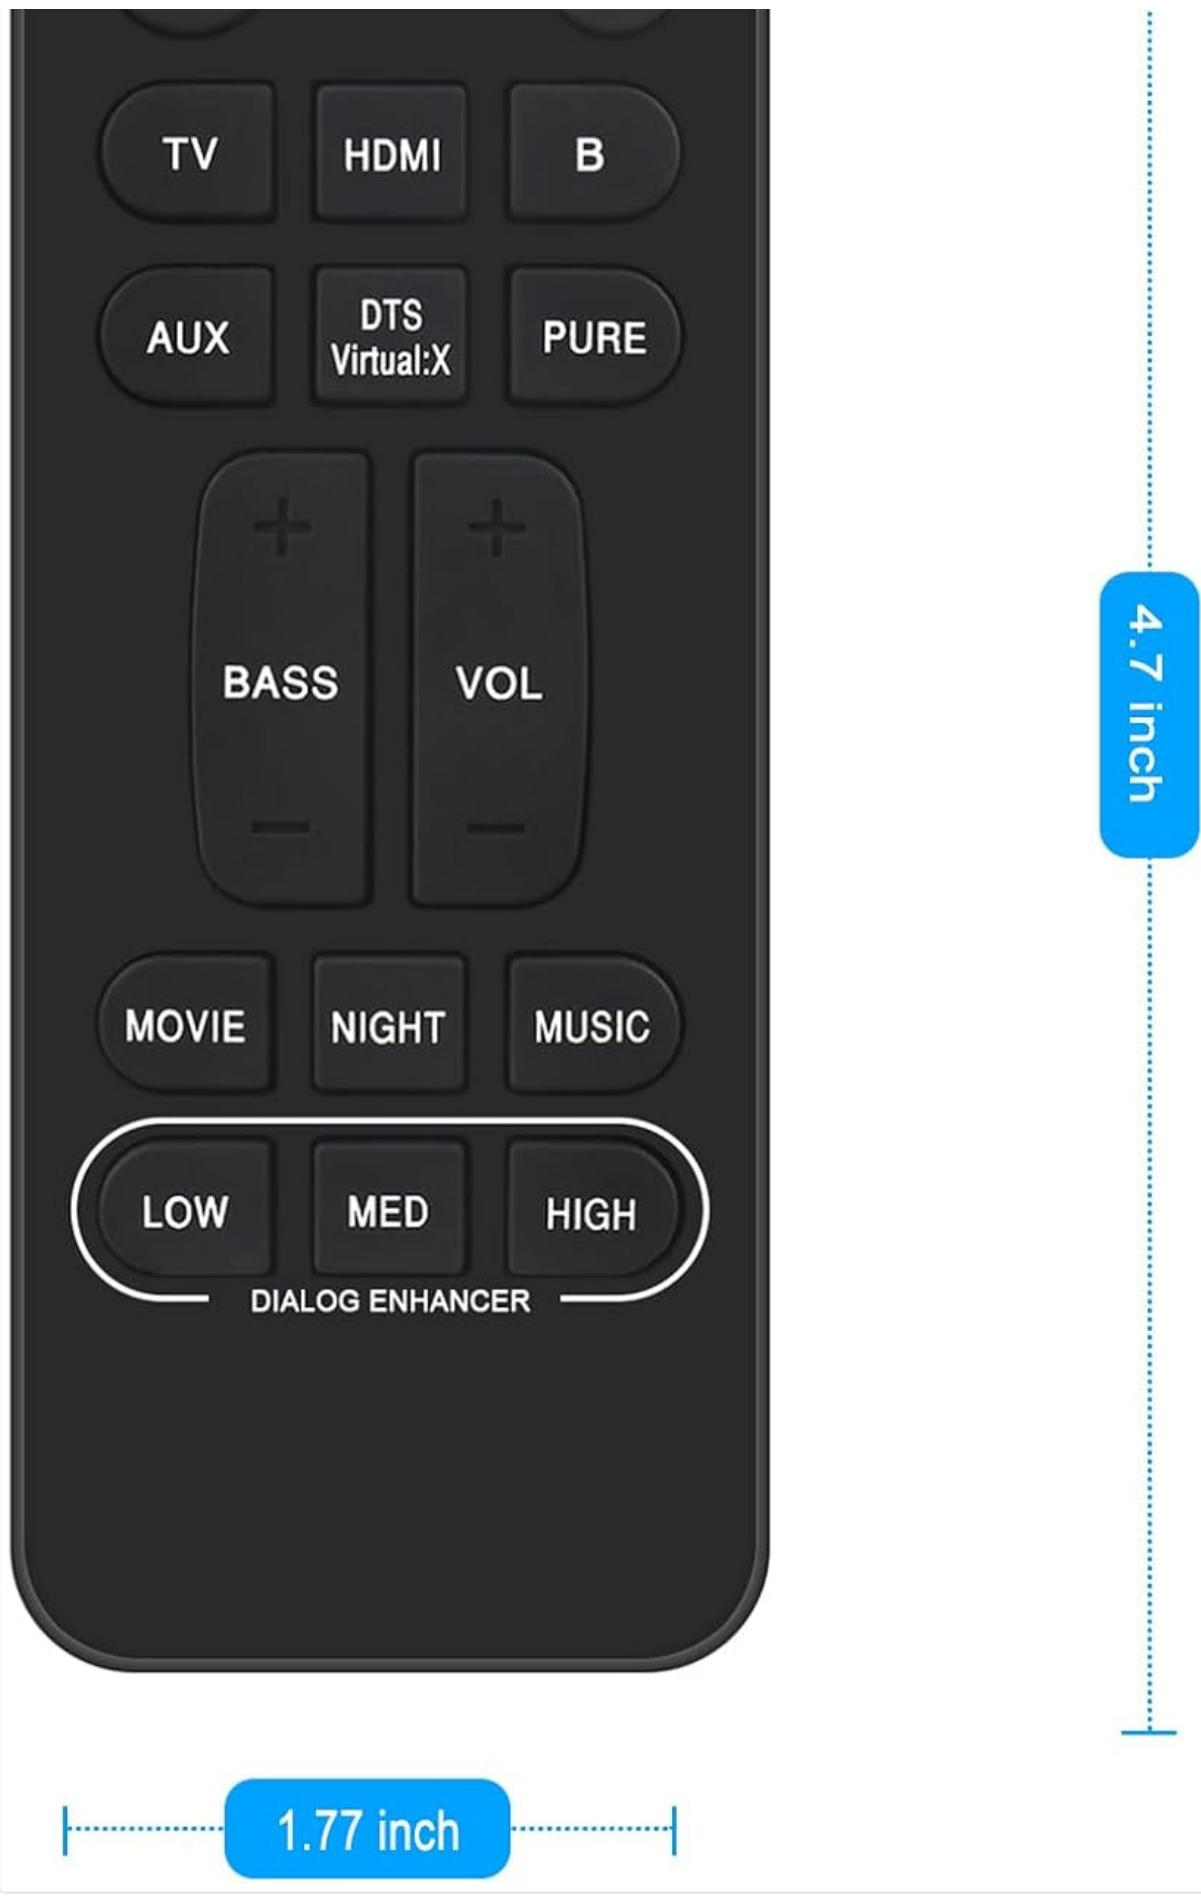


Figure 1: Back view of the RC-1251 remote control, illustrating the battery compartment location for installation.

3. OPERATING THE REMOTE CONTROL

The ZdalaMit RC-1251 remote control provides direct access to various functions of your Denon sound bar. Familiarize yourself with the button layout and their corresponding functions.





Figure 2: Front view of the RC-1251 remote control with button layout.

3.1 Button Functions:

- **Power Button ():** Turns the sound bar on or off.
- **Mute Button ():** Mutes or unmutes the sound.
- **TV:** Selects the TV audio input.
- **HDMI:** Selects the HDMI audio input.
- **B:** Function not specified, typically for Bluetooth or another auxiliary input. Refer to your sound bar's manual.
- **AUX:** Selects the auxiliary audio input.
- **DTS Virtual:X:** Activates or deactivates DTS Virtual:X surround sound mode.
- **PURE:** Activates or deactivates Pure audio mode for uncolored sound.
- **BASS (+/-):** Adjusts the bass level.
- **VOL (+/-):** Adjusts the main volume level.
- **MOVIE:** Activates Movie sound mode.
- **NIGHT:** Activates Night sound mode, which reduces dynamic range for late-night listening.
- **MUSIC:** Activates Music sound mode.
- **DIALOG ENHANCER (LOW, MED, HIGH):** Adjusts the clarity of dialogue. Select Low, Medium, or High based on preference.

4. MAINTENANCE

Proper care and maintenance will ensure the longevity and reliable performance of your remote control.

4.1 Battery Replacement:

Replace batteries when the remote control's response becomes sluggish or stops functioning. Always replace both AAA batteries simultaneously with new alkaline batteries. Do not mix old and new batteries, or different types of batteries.

4.2 Cleaning:

To clean the remote control, use a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the remote's surface or internal components.

4.3 Storage:

If the remote control will not be used for an extended period, remove the batteries to prevent leakage, which can cause damage. Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

5. TROUBLESHOOTING

If you experience issues with your ZdalaMit RC-1251 remote control, consider the following troubleshooting steps:

- **Remote not responding:** Check if the batteries are correctly inserted with the correct polarity (+/-). Replace old batteries with new AAA alkaline batteries.
- **Intermittent response:** Ensure there are no obstructions between the remote control and the sound bar's infrared receiver. The remote requires a clear line of sight.
- **Limited range:** Verify that the batteries are fresh. The effective range of the remote may decrease with low battery power.
- **Specific button not working:** Ensure the remote is pointed directly at the sound bar. If the issue persists, the button may be faulty, or the sound bar's receiver might have an issue.

This remote control is pre-programmed and does not require any setup beyond battery installation. If problems persist after following these steps, consult the user manual for your Denon sound bar or contact customer support for further assistance.

6. SPECIFICATIONS

Feature	Specification
Model	RC-1251
Compatibility	Denon DHT-S216, DHT-S217 Sound Bars (Replaces RC-1236, RC-1245)
Power Supply	2 x 1.5V AAA Alkaline Batteries (not included)
Dimensions (L x W x H)	4.76 x 1.79 x 0.55 inches (12.09 x 4.55 x 1.40 cm)
Item Weight	1.41 ounces (40 grams)
Special Feature	Pre-programmed, no setup required



Figure 3: RC-1251 remote control with approximate dimensions.

© 2025 ZdalaMit. All rights reserved.