

[Manuals.plus](#) /

› [Gevi](#) /

› Gevi 12 Cup Programmable Drip Coffee Maker with Touch Screen, Fast and Strong Brew, Auto Shut-Off, 4-Hour Keep Warm Plate, Iced Coffee Option, Anti-Drip System, Permanent Filter Black

Gevi DCMA0-BK0A1

Gevi 12 Cup Programmable Drip Coffee Maker User Manual

Model: DCMA0-BK0A1

PRODUCT OVERVIEW

The Gevi 12 Cup Programmable Drip Coffee Maker (Model: DCMA0-BK0A1) is designed for convenience and versatility, offering a range of features to enhance your coffee brewing experience. This appliance includes a user-friendly touch screen interface, options for fast and strong brewing, an automatic shut-off function, and a 4-hour keep warm plate. It also features a dedicated iced coffee option, an anti-drip system for mess-free operation, and a permanent filter for ease of use and environmental friendliness.



Image: Gevi 12 Cup Programmable Drip Coffee Maker with a cup of hot coffee and a glass of iced coffee.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.

- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or coffee maker in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Scalding may occur if the lid is removed during the brewing cycles.
- The carafe is designed for use with this appliance. It must never be used on a range top.
- Do not place a hot carafe on a wet or cold surface.
- Do not use a cracked carafe or a carafe having a loose or weakened handle.
- Do not clean carafe with cleansers, steel wool pads, or other abrasive material.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

PARTS IDENTIFICATION

Familiarize yourself with the components of your Gevi 12 Cup Programmable Drip Coffee Maker:

- Coffee Maker Unit (Main Body)
- Glass Coffee Pot (Carafe)
- Scoop
- Permanent Filter
- Filter Basket



Keep Warm Timer

5 Minutes-3 Hours
59 Minutes

Image: Individual components of the Gevi Drip Coffee Maker laid out.

SETUP AND FIRST USE

Before using your new Gevi coffee maker for the first time, it is important to properly set it up and perform an initial cleaning cycle.

1. **Unboxing:** Carefully remove the coffee maker and all its components from the packaging. Ensure all protective films and materials are removed, especially from the touch screen.

Protective Film

Please remove this film before use



Image: Removing the protective film from the touchscreen.

2. **Wash All Removable Parts:** Wash the carafe, permanent filter, and filter basket in warm, soapy water. Rinse thoroughly and dry completely before reassembling.
3. **Initial Cleaning Cycle:** For the first use, it is recommended to run at least two full brewing cycles with only water to clean the internal components.
 - Fill the water tank to the MAX line with clean water.
 - Place the empty carafe on the warming plate.
 - Press the "ON/OFF" button to power on the machine.
 - Press the "CLEAN" button, then press "ON/OFF" again to start the cleaning cycle.
 - Once the cycle is complete, discard the water from the carafe.
 - Repeat this process at least once more.

For a visual guide on unboxing and first use, please watch the video below:

Your browser does not support the video tag.

Video: Unboxing and First Use of the Gevi 12 Cup Drip Coffee Maker. This video demonstrates how to unpack the coffee maker, remove protective films, and perform the initial cleaning cycle.

Setting the Clock and Delay Brew Timer

The Gevi coffee maker features a 24-hour programmable timer for convenience.

1. **Setting the Clock:**

- Press the "ON/OFF" button to turn on the coffee maker.
- When the timer display blinks, press the "Hour" and "Minute" buttons to set the current time.
- Press the "ON/OFF" button again to confirm the clock time.

2. **Setting the Delay Brew Timer:**

- After setting the clock, press the "Delay Brew Timer" button.
- When the timer display blinks, use the "Hour" and "Minute" buttons to set your desired delay brewing time.
- Press the "Delay Brew Timer" button again to confirm the delay brewing time.
- *Note:* If you press the "ON/OFF" button after setting the delay brew, it will cancel the delay brewing setting.
- Once set, the machine will automatically brew at the preset time.

For detailed instructions on setting the clock and delay brew timer, refer to the video:

Your browser does not support the video tag.

Video: How to set the clock and the delay brew timer on the Gevi 12 Cup Drip Coffee Maker.

Making Coffee

Follow these steps to brew a fresh pot of coffee:

1. **Add Water:** Open the top lid and pour fresh, cold water into the water tank. Use the water level indicator on the side to measure the desired number of cups (up to 12 cups MAX).



Image: Adding water to the coffee maker's reservoir.

2. **Add Coffee Grounds:** Place the permanent filter into the filter basket, then add your desired amount of ground coffee into the filter. Close the top lid securely.



Reusable Coffee Filter & Basket

Image: Adding coffee grounds to the reusable filter.

3. **Place Carafe:** Ensure the glass carafe is correctly positioned on the warming plate.
4. **Select Brew Strength:** Use the touch screen to select your preferred coffee flavor:
 - **Classic:** For a balanced, everyday brew.
 - **Intense:** For a stronger, bolder flavor.
 - **Rich:** For the deepest, most robust coffee.

4 Brewing Strengths



Image: Visual representation of different brewing strengths.

5. **Start Brewing:** Press the "ON/OFF" button to begin the brewing process. The machine will automatically start brewing.

Watch this video for a step-by-step guide on making coffee:

Your browser does not support the video tag.

Video: How to make coffee with the Gevi 12 Cup Drip Coffee Maker.

Iced Coffee Option

Enjoy refreshing iced coffee with your Gevi coffee maker:

1. **Prepare Water:** Fill the water tank with room temperature water, ensuring it does not exceed the MAX mark for iced coffee (indicated on the water level gauge).
2. **Add Coffee Grounds:** Place the permanent filter into the filter basket and add your desired amount of ground coffee.
3. **Prepare Carafe with Ice:** Fill the carafe with ice cubes up to the "max ice cubes" mark. Do not overfill.
4. **Select Iced Coffee:** Press the "ON/OFF" button to power on. Then, press the "ICE COFFEE" button on the touch screen.
5. **Start Brewing:** Press the "ON/OFF" button again to start the iced coffee brewing process. The machine will brew a concentrated coffee directly over the ice.

Learn how to make iced coffee with this helpful video:

Your browser does not support the video tag.

Video: How to make iced coffee using the Gevi 12 Cup Drip Coffee Maker.

Setting the Keep Warm Timer

The coffee maker features an adjustable keep-warm timer to ensure your coffee stays hot for longer.

1. **Brew Coffee:** First, brew your coffee as usual.
2. **Activate Keep Warm Timer:** After selecting your desired brewing style (and before starting the brew), press the "KEEP WARM TIMER" button.
3. **Adjust Time:** Use the "Hour" and "Minute" buttons to set your preferred keep warm duration (from 5 minutes up to 3 hours and 59 minutes).
4. **Confirm Setting:** Press the "KEEP WARM TIMER" button again to confirm your selection.
5. **Start Brewing:** Finally, press the "ON/OFF" button to start brewing. The coffee maker will automatically keep the coffee warm for the set duration after brewing is complete.



Image: Keep Warm Timer display on the Gevi coffee maker.

For a demonstration on setting the keep warm timer, please see this video:

Your browser does not support the video tag.

Video: Instructions on how to set the keep warm timer on the Gevi 12 Cup Drip Coffee Maker.

CLEANING AND MAINTENANCE

Daily Cleaning

Regular cleaning ensures optimal performance and prolongs the life of your coffee maker.

1. **Cool Down:** Always ensure the unit has cooled down completely before cleaning.
2. **Remove Parts:** Open the top cover and remove the permanent filter and filter basket. Discard any used coffee grounds.
3. **Wash Removable Parts:** Wash the permanent filter, filter basket, and carafe in warm, soapy water. Rinse thoroughly and allow them to air dry completely or towel dry.

- 4. **Clean Exterior:** Wipe the warming plate and the exterior of the coffee maker with a soft, damp cloth. Dry thoroughly.
- 5. **Reassemble:** Once all parts are completely dry, reassemble them into the coffee maker.

For a visual guide on daily cleaning, watch the video:

Your browser does not support the video tag.

Video: Daily cleaning routine for the Gevi 12 Cup Drip Coffee Maker.

Descaling

Over time, mineral deposits (scale) can build up in your coffee maker, affecting its performance and coffee taste. The descaling indicator will illuminate on the screen when it's time to descale.

- 1. **Preparation:** Ensure the coffee maker is cool. Remove the filter and filter basket and discard any coffee grounds.
- 2. **Prepare Descaling Solution:** Dissolve a descaling powder (such as Gevi's recommended citric acid descaling powder) in water according to the product instructions. Fill the water tank with this solution up to the 12-cup mark.
- 3. **Start Descaling:** Place the empty carafe on the warming plate. Plug in the machine. Press and hold the "CLEAN" button to start the descaling process. The clean icon will illuminate.
- 4. **Completion:** The descaling cycle will take approximately 15 minutes. Once complete, the clean icon will stop flashing.
- 5. **Rinse Cycles:** Empty the carafe and fill the water tank with clean water. Run at least two more full cleaning cycles with only clean water to rinse out any remaining descaling solution.

For a visual guide on descaling, watch the video:

Your browser does not support the video tag.

Video: How to descale the Gevi 12 Cup Drip Coffee Maker.

TROUBLESHOOTING

If you encounter any issues with your Gevi coffee maker, please refer to the common problems and solutions below:

Problem	Possible Cause	Solution
Coffee does not brew.	No water in tank; Machine not plugged in; "ON/OFF" button not pressed.	Fill water tank; Plug in machine; Press "ON/OFF" button.
Coffee tastes weak or too strong.	Incorrect coffee-to-water ratio; Wrong brew strength selected.	Adjust coffee grounds amount; Select desired brew strength (Classic, Intense, Rich).
Water overflows from filter basket.	Too much coffee grounds; Filter basket not properly seated; Clogged filter.	Reduce coffee grounds; Ensure filter basket is correctly inserted; Clean filter and descale if necessary.
Coffee maker leaks.	Carafe not properly placed; Water tank overfilled; Loose parts.	Ensure carafe is centered on warming plate; Do not exceed MAX fill line; Check all removable parts are securely in place.
Clock loses time or is inaccurate.	Internal clock drift.	Reset the clock periodically as needed.
Touch screen unresponsive or machine shuts off mid-brew.	Electrical issue; Internal malfunction.	Unplug the machine for a few minutes, then plug it back in. If the issue persists, contact customer support.

SPECIFICATIONS

Brand: Gevi

Model Name: Drip Coffee Maker

Model Number: DCMA0-BK0A1

Color: Black

Product Dimensions: 12.1"D x 8"W x 13.8"H

Item Weight: 7.48 pounds

Coffee Maker Type: Drip Coffee Machine

Filter Type: Permanent Filter

Capacity: 12 Cups

Special Features: Touchscreen, Keep Warm Timer, Iced Coffee, Permanent Filter, Programmable

Operation Mode: Fully Automatic

Voltage: 120 Volts

Human Interface Input: Touchscreen

Coffee Input Type: Ground Coffee

WARRANTY AND SUPPORT

Gevi is committed to your satisfaction. Every Gevi product purchased via official or authorized channels is backed by a **12-month warranty** and **lifetime technical support**.

If you encounter any issues with your Gevi coffee maker or require assistance, please do not hesitate to contact Gevi customer service directly for support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question