

Ranbomer CMK1030

Ranbomer K Cup Coffee Maker User Manual

MODEL: CMK1030

Your guide to perfect coffee, every time.

1. Introduction

Thank you for choosing the Ranbomer K Cup Coffee Maker. This versatile machine is designed to provide you with a convenient and enjoyable coffee brewing experience, whether you prefer K-cups or ground coffee. Please read this manual thoroughly before first use to ensure safe and optimal operation.

Key Features:

- Two Brewing Options: Compatible with K-cups and ground coffee.
- Compact and Portable Design: Ideal for small spaces and travel.
- Adjustable Brew Sizes: Brews 6 to 14 ounces to suit your preference.
- Self-Cleaning Function: Simplifies maintenance and ensures consistent coffee quality.
- Simple One-Touch Operation: Easy and hassle-free coffee preparation.

2. Safety Instructions

WARNING: To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric

shock, or injury to persons.


- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Extreme caution must be used when dispensing hot water.

3. Components

Familiarize yourself with the parts of your Ranbomer K Cup Coffee Maker:



Main Unit: The primary coffee maker body, including the water reservoir, brewing chamber, and control buttons.

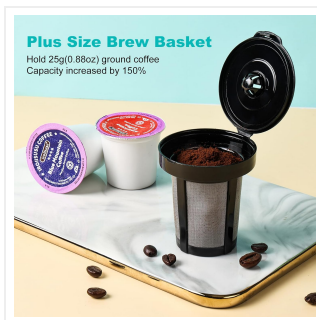

Reusable Ground Coffee Filter Basket: Used for brewing with your favorite ground coffee. This "plus size" basket holds up to 25g (0.88oz) of ground coffee.



K-Cup Holder: Designed to securely hold single-serve K-cup pods for brewing.



Water Reservoir: Located on the side, with clear markings for 6oz, 8oz, 10oz, 12oz, and 14oz fill levels. Note: The water tank is not detachable.



Drip Tray: Removable tray at the base to catch drips and spills. Accommodates various cup sizes.



Control Buttons: "CAPSULE" and "GROUND" buttons for selecting brewing mode.

4. Setup

1. **Unpack:** Carefully remove all packaging materials and components from the box.
2. **Clean Before First Use:**
 - Wash the reusable ground coffee filter basket, K-cup holder, and drip tray in warm, soapy water. Rinse thoroughly.
 - Wipe the exterior of the coffee maker with a damp cloth.
 - Perform a cleansing brew cycle: Fill the water reservoir to the MAX (14oz) line with fresh water. Place an empty mug on the drip tray. Close the lid and press either the "CAPSULE" or "GROUND" button to run a full cycle without coffee. Discard the hot water. Repeat this process 2-3 times to ensure the internal components are clean.
3. **Position:** Place the coffee maker on a stable, flat, heat-resistant surface near a power outlet. Ensure adequate ventilation around the unit.
4. **Plug In:** Insert the power plug into a grounded electrical outlet.

5. Operating Instructions

Brewing with K-Cups:

1. Lift the lid of the brewing chamber.
2. Insert a K-cup pod into the K-cup holder. Ensure it is seated correctly.
3. Add fresh water to the water reservoir. Fill to your desired brew size (6oz, 8oz, 10oz, 12oz, or 14oz). The coffee maker will brew all the water you add.
4. Place your mug on the drip tray. For taller mugs, you may remove the drip tray.
5. Close the lid firmly.
6. Press the "CAPSULE" button. The indicator light will illuminate, and brewing will begin.
7. Once brewing is complete, the light will turn off. Carefully remove your hot coffee.

Brewing with Ground Coffee:

1. Lift the lid of the brewing chamber.
2. Open the reusable ground coffee filter basket and fill it with your desired amount of ground coffee (up to 25g/0.88oz). Close the filter basket.
3. Place the filled ground coffee filter basket into the brewing chamber.
4. Add fresh water to the water reservoir. Fill to your desired brew size (6oz, 8oz, 10oz, 12oz, or 14oz).
5. Place your mug on the drip tray.
6. Close the lid firmly.
7. Press the "GROUND" button. The indicator light will illuminate, and brewing will begin.
8. Once brewing is complete, the light will turn off. Carefully remove your hot coffee.

Note: To stop brewing at any time, press the active brewing button again.

6. Maintenance

Daily Cleaning:

- Always unplug the coffee maker before cleaning.
- Remove and empty the K-cup holder or ground coffee filter basket after each use. Rinse them under running water.
- Remove and empty the drip tray. Wash it with warm, soapy water and rinse thoroughly.
- Wipe the exterior of the coffee maker with a damp, soft cloth. Do not use abrasive cleaners or scouring pads.

Self-Cleaning Function:

The coffee maker features a self-cleaning function to help prevent mineral buildup. It is recommended to use this function regularly, especially if you have hard water.

1. Ensure the brewing chamber is empty (no K-cup or ground coffee).
2. Fill the water reservoir with clean water up to the 14oz MAX line.
3. Place an empty mug or container on the drip tray.
4. Press and hold both the "CAPSULE" and "GROUND" buttons simultaneously for approximately 3 seconds until the indicator lights begin to blink. This initiates the self-cleaning cycle.
5. The coffee maker will run water through its system. Once the cycle is complete, the lights will stop blinking.
6. Discard the water from the mug/container.

Descaling (Deep Cleaning):

Over time, mineral deposits (scale) can build up in your coffee maker, affecting performance and coffee taste. Descale your coffee maker every 3-6 months, or more frequently if you notice slower brewing or reduced coffee temperature.

1. Prepare a descaling solution: Mix white vinegar and water in a 1:1 ratio. For example, use 7oz vinegar and 7oz water for a 14oz fill.
2. Pour the descaling solution into the water reservoir.
3. Place a large empty mug or container on the drip tray.
4. Run a full brew cycle by pressing either the "CAPSULE" or "GROUND" button. Discard the solution.
5. Repeat the brewing process with the remaining descaling solution if necessary, or let it sit for 30 minutes before running another cycle.
6. After descaling, run at least two full cycles with fresh, clean water to rinse out any remaining vinegar taste.

7. Troubleshooting

Problem	Possible Cause	Solution
Coffee maker does not turn on.	Not plugged in; power outlet issue.	Ensure the power cord is securely plugged into a working electrical outlet. Try a different outlet.
Coffee is not brewing or only a small amount is dispensed.	Insufficient water in reservoir; clogged needle; mineral buildup.	Ensure water reservoir is filled to desired level. Clean the needle (refer to maintenance). Perform a descaling cycle.
Coffee tastes weak or watery.	Too much water for coffee amount; coffee grind too coarse; old coffee.	Use less water or more coffee. Ensure coffee is fresh and ground appropriately for drip brewing.
Coffee maker flashes blue and red lights.	Indicates a need for descaling or an internal error.	Perform a descaling cycle as described in the Maintenance section. If the issue persists, contact customer support.
Difficulty removing K-cup or ground coffee basket after brewing.	Heat expansion; no specific tab for removal.	Allow the unit to cool slightly before attempting removal. Use a heat-resistant glove or a utensil to carefully lift the basket.
Water spills when filling reservoir.	Narrow opening; awkward pouring angle.	Use a measuring cup with a spout for easier pouring. Pour slowly and carefully.

8. Specifications

- Brand: Ranbomer
- Model Name: CMK1030
- Color: Mint
- Product Dimensions: 5.1"D x 7.3"W x 11.8"H
- Item Weight: 3.76 pounds
- Coffee Maker Type: Drip Coffee Machine
- Filter Type: Reusable (for ground coffee)

- Water Reservoir Capacity: 6 to 14 ounces
- Operation Mode: Fully Automatic
- Special Features: Single Serve, K Cup and Ground Coffee 2-in-1, Self-cleaning Function, Fits Travel Mug

9. Warranty and Support

The Ranbomer K Cup Coffee Maker comes with a **One Year Warranty** from the date of purchase, covering manufacturing defects under normal use.

For warranty claims, technical support, or any questions regarding your product, please contact Ranbomer customer service through the following channels:

- Refer to the contact information provided on the product packaging or the official Ranbomer website.
- For Amazon purchases, you can typically find seller contact information through your order history.

Please have your model number (CMK1030) and purchase date ready when contacting support.

