

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [RISEOFLE](#) /

› RISEOFLE Z17 180cm Smartphone Tripod & Selfie Stick Instruction Manual

RISEOFLE Z17

RISEOFLE Z17 180cm Smartphone Tripod & Selfie Stick Instruction Manual

Model: Z17 | Brand: RISEOFLE

PRODUCT OVERVIEW

The RISEOFLE Z17 is a versatile 2-in-1 smartphone tripod and selfie stick designed for mobile photography and videography. Constructed from high-quality aluminum alloy, it offers a lightweight yet robust solution for capturing stable photos and videos.

- **Versatile Design:** Functions as both a stable tripod and an extendable selfie stick.
- **Adjustable Height:** Features a 7-section telescopic rod, extending from a compact 31 cm (12.2 in) to an impressive 180 cm (70.86 in) for various shooting angles.
- **Compact & Portable:** Folds down to just 31 cm (12.2 in) and weighs 264 g (0.58 lb), making it easy to carry in a backpack or hand luggage.
- **360° Rotation & Wide Compatibility:** The phone holder rotates 360° for easy switching between portrait and landscape modes. It accommodates smartphones 6.6 to 9.1 cm wide and is compatible with most cameras, action cameras, and webcams via a 1/4" screw mount.
- **Wireless Remote Control:** Includes a detachable Bluetooth remote for convenient, hands-free photo and video capture (Note: Remote works only with phones, not cameras).

SETUP INSTRUCTIONS

1. Unfolding the Tripod

1. Hold the main body of the selfie stick.
2. Gently pull the bottom part downwards to extend the tripod legs.
3. Ensure the three legs are fully spread out to form a stable base on a flat surface. The reinforced tripod design with non-slip silicone pads provides enhanced stability.



Image: The enhanced tripod base, highlighting the durable aluminum alloy construction and non-slip silicone pads for stability.

2. Attaching Your Device

1. **For Smartphones:** Extend the phone holder clamps and securely place your smartphone within the adjustable grip. The holder supports phones from 6.6 cm to 9.1 cm in width.
2. **For Cameras/Action Cams/Webcams:** The top of the selfie stick features a standard 1/4" screw mount. Attach your compatible camera, action camera, or webcam by screwing it onto this mount.



Image: Illustration of the universal compatibility, showing how smartphones, cameras, and other devices can be mounted.

3. Pairing the Wireless Remote Control

1. Locate the detachable remote control.
2. Turn on the remote control (usually by pressing and holding a button until an indicator light flashes).
3. On your smartphone, go to Bluetooth settings and search for new devices.
4. Select "VIPsy" (or similar name) from the list of available devices to pair. The indicator light on the remote will stop flashing once successfully paired.
5. The remote control is compatible with iOS (5.1+) and Android (4.4+) smartphones.



Image: The detachable wireless remote control and a smartphone screen demonstrating the Bluetooth pairing process.

OPERATING INSTRUCTIONS

1. Adjusting Height and Angle

1. **Extending the Rod:** Pull the telescopic rod upwards to extend it to your desired height, up to 180 cm. Ensure each section is securely locked in place.
2. **Rotating the Phone Holder:** The phone holder can be rotated 360° horizontally to switch between portrait and landscape orientations.
3. **Tilting the Device:** Adjust the tilt angle of your device up to 90° vertically using the ball head mechanism to achieve the perfect shot.



Image: The selfie stick tripod fully extended to its maximum height of 180 cm (71 inches), demonstrating its reach for capturing wide shots.

2. Using the Wireless Remote

1. Once paired, open your smartphone's camera application.
2. Press the button on the remote control to trigger the camera shutter for photos or to start/stop video recording.
3. The remote allows you to capture content from a distance of up to 10 meters (33 feet).

MAINTENANCE

- **Cleaning:** Wipe the tripod and selfie stick with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.

- **Storage:** When not in use, fold the device to its compact size and store it in a dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** The remote control uses a Lithium-ion battery. If storing for an extended period, ensure the battery is partially charged.

TROUBLESHOOTING

- **Remote Control Not Connecting:**
 - Ensure the remote control is turned on and has sufficient battery.
 - Check your smartphone's Bluetooth settings to ensure Bluetooth is enabled and the remote is in pairing mode.
 - Try unpairing and re-pairing the remote control.
 - Ensure your phone's operating system is compatible (iOS 5.1+ or Android 4.4+).
- **Tripod Instability:**
 - Ensure the tripod legs are fully extended and spread out on a flat, stable surface.
 - Do not overload the tripod with devices heavier than recommended.
 - Avoid extending the telescopic rod to its maximum height in windy conditions.
- **Telescopic Rod Not Extending/Retracting Smoothly:**
 - Check for any obstructions or debris in the rod sections.
 - Ensure you are pulling/pushing directly along the axis of the rod.

SPECIFICATIONS

Feature	Detail
Brand	RISEOFLE
Model	Z17
Color	Black
Material	Aluminum
Minimum Height	31 cm (12.2 inches)
Maximum Height	180 cm (70.86 inches)
Item Weight	264 Grams (0.58 lbs)
Tripod Head Type	Ball head
Compatible Devices	Smartphone, Camera, Action Camera, Webcam
Smartphone Holder Width	6.6 cm - 9.1 cm (2.6 in - 3.6 in)
Remote Control Battery	Lithium-ion (1 C - included)
Special Features	Non-slip, Lightweight, Foldable, Telescopic, Detachable Remote Control
Included Components	Selfie stick tripod, Detachable remote control

WARRANTY INFORMATION

RISEOFLE offers a 12-month return guarantee for this product. This warranty covers manufacturing defects and product malfunctions under normal use.

CUSTOMER SUPPORT

For any product defects, operational issues, or dissatisfaction, please do not hesitate to contact RISEOFLE customer support. Refer to your purchase documentation or the retailer's website for specific contact details.