

[Manuals.plus](#) /

› [XINFUTE](#) /

› XINFUTE YKR-H/009E Remote Control User Manual

XINFUTE YKR-H/009E

XINFUTE YKR-H/009E Remote Control User Manual

For AUX Air Conditioner AC Units

INTRODUCTION

This manual provides comprehensive instructions for the XINFUTE YKR-H/009E remote control, specifically designed for use with AUX Air Conditioner (AC) units. Please read this manual carefully before use to ensure proper operation, maximize functionality, and maintain the longevity of your device.

SETUP

Battery Installation

The XINFUTE YKR-H/009E remote control requires two (2) AAA batteries for operation. Batteries are not included with the remote control.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

No pairing is required after battery installation; the remote is ready for immediate use with compatible AUX AC units.



Figure 1: Back view of the remote control with the battery compartment. To install batteries, slide the cover down and insert two AAA batteries according to polarity markings.

OPERATING INSTRUCTIONS

The remote control operates using infrared (IR) technology. Ensure there is a clear line of sight between the remote control and the AUX AC unit's receiver. The maximum effective range is approximately 5 meters.



Figure 2: Front view of the remote control, showing the LCD display and various function buttons.

Button Functions

- **ON/OFF (Red Button):** Powers the AC unit on or off.
- **SET TEMPERATURE (°C) Display:** Shows the current temperature setting.
- **Temperature Adjustment Arrows (Up/Down):** Increases or decreases the set temperature.
- **MODE:** Cycles through operating modes: AUTO, COOL, DRY, HEAT.
- **FAN:** Adjusts fan speed settings: FAN, HIGH, MID, LOW.
- **SLEEP:** Activates or deactivates sleep mode for comfortable overnight operation.
- **SWING:** Controls the louver swing function for air distribution.
- **CLEAN:** Initiates the self-cleaning function of the AC unit (if supported).
- **HEALTH:** Activates health-related functions (e.g., air purification, if supported).
- **SPEED:** Adjusts fan speed (alternative to FAN button, or for specific speed settings).
- **STRONG:** Activates a powerful cooling/heating mode for rapid temperature change.
- **FEELING:** Activates a mode that senses ambient temperature around the remote for optimized comfort.

- **DUST / FUNGUSPROOF / SCREEN:** These buttons may activate specific air quality or display functions depending on the AC model.
- **TIMER:** Sets the timer for automatic on/off operations.

MAINTENANCE

Cleaning the Remote Control

To clean the remote control, gently wipe its surface with a soft, dry cloth. Do not use liquid cleaners, abrasive materials, or chemical solvents, as these can damage the remote's finish or internal components.

Battery Replacement

Replace batteries when the remote control's response becomes sluggish or the display dims. Always replace both AAA batteries simultaneously with new ones. Remove batteries if the remote will not be used for an extended period to prevent leakage.

Storage

Store the remote control in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. Avoid dropping the remote or exposing it to strong impacts.

TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new AAA batteries.
 - Ensure there is a clear line of sight between the remote and the AC unit's receiver. Remove any obstructions.
 - Verify the remote is pointed directly at the AC unit.
- **Limited range:**
 - Ensure batteries are fresh.
 - Reduce the distance between the remote and the AC unit.
 - Check for strong light sources (e.g., direct sunlight, fluorescent lights) that might interfere with the infrared signal.

SPECIFICATIONS

- **Brand:** XINFUTE
- **Model Name:** YKR-H/009E
- **Compatible Devices:** AUX Air Conditioner AC units
- **Connectivity Technology:** Infrared
- **Power Source:** 2 x AAA batteries (not included)
- **Maximum Range:** 5 meters
- **Material:** ABS

- **Item Weight:** 0.08 Kilograms
- **Special Feature:** Ergonomic design
- **Quantity:** 1 x remote control
- **UPC:** 784853561023

WARRANTY AND SUPPORT

Warranty Information

This XINFUTE remote control comes with a one-year warranty from the date of purchase. This warranty covers manufacturing defects under normal use. Please retain your proof of purchase for warranty claims.

Customer Support

For any questions, concerns, or issues regarding your XINFUTE YKR-H/009E remote control, please contact our customer support. If you are not satisfied with your purchase, you may contact us within 24 hours of receipt for assistance.

For further support, please visit the [XINFUTE Store on Amazon](#).