

## LEKATO 3364

# LEKATO Universal Sustain Pedal (Model 3364) Instruction Manual

For Keyboards and Digital Pianos

## INTRODUCTION

---

The LEKATO Universal Sustain Pedal (Model 3364) is designed to provide a natural and responsive sustain effect for electronic keyboards and digital pianos. Featuring a robust construction, anti-slip design, and a polarity switch for broad compatibility, this pedal enhances your playing experience across various musical instruments.



Image: The LEKATO Universal Sustain Pedal, showcasing its design and 6.35mm plug.

## SETUP

1. **Unpack the Pedal:** Carefully remove the sustain pedal from its packaging.
2. **Locate the Sustain Input:** Identify the 1/4" (6.35mm) sustain pedal input jack on your electronic keyboard or digital piano. This is typically labeled 'Sustain', 'Damper', or 'Pedal'.
3. **Connect the Pedal:** Insert the 1/4" (6.35mm) input plug of the LEKATO sustain pedal firmly into the sustain input jack of your instrument.
4. **Adjust Polarity Switch:** The pedal features a polarity switch (N.O./N.C.) on its side. If the sustain effect is reversed (e.g., notes sustain when the pedal is not pressed, or do not sustain when pressed), toggle this switch to the opposite position. This ensures compatibility with various keyboard brands and models.
5. **Position the Pedal:** Place the pedal on the floor in a comfortable position for playing. The anti-slip silicone gaskets on the bottom will help stabilize the pedal during use.



Image: Connecting the 6.35mm sustain input plug to a digital piano.



Image: The underside of the pedal, highlighting the non-slip silicone gaskets for stability.



Image: A close-up view of the N.O./N.C. polarity switch on the side of the pedal.

## OPERATING INSTRUCTIONS

Once connected, the LEKATO sustain pedal operates like a traditional piano sustain pedal. Pressing the pedal will sustain the notes played on your instrument, and releasing it will stop the sustain effect.

- **Sustain Effect:** Press the pedal down with your foot to activate the sustain. The notes played will continue to sound even after you lift your fingers from the keys.
- **Release Effect:** Lift your foot from the pedal to deactivate the sustain. The notes will then decay naturally.
- **Quick Response:** The pedal is designed for quick response, ensuring that the sustain effect engages and disengages promptly with your foot movements.



Image: A musician using the LEKATO sustain pedal while playing a digital piano.

Your browser does not support the video tag.

Video: Demonstration of the LEKATO 1/4" 6.35mm Universal Sustain Pedal, showcasing its features and functionality.

## MAINTENANCE

Proper care will ensure the longevity and optimal performance of your LEKATO sustain pedal.

- **Cleaning:** Wipe the pedal's surface with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Avoid abrasive cleaners or solvents.
- **Storage:** Store the pedal in a dry environment, away from extreme temperatures and direct sunlight.
- **Cable Care:** Avoid sharp bends or kinks in the cable. Do not pull the cable to disconnect the pedal; always grasp the plug itself.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Sustain effect is reversed (e.g., always on, or off when pressed).	Incorrect polarity setting for your instrument.	Locate the N.O./N.C. polarity switch on the side of the pedal and toggle it to the opposite position. Test the pedal again.
No sustain effect when pedal is pressed.	<ul style="list-style-type: none"><li>• Pedal not fully plugged in.</li><li>• Incorrect polarity setting.</li><li>• Instrument's sustain input is faulty.</li><li>• Damaged pedal cable or internal components.</li></ul>	<ul style="list-style-type: none"><li>• Ensure the 1/4" plug is fully inserted into the instrument's sustain jack.</li><li>• Check the polarity switch (see above).</li><li>• Test with another known-working sustain pedal if available, or try the LEKATO pedal with another compatible instrument.</li><li>• If issues persist, contact customer support.</li></ul>
Pedal slides on the floor during use.	Insufficient grip on the floor surface.	Ensure the anti-slip silicone gaskets on the bottom of the pedal are clean and free of debris. Place the pedal on a non-slip mat if necessary.

## SPECIFICATIONS

- **Model:** 3364
- **Connector Type:** 1/4 inch (6.35mm) plug
- **Compatibility:** Universal, suitable for most electronic keyboards and digital pianos (e.g., Yamaha, Casio, Roland, Korg, Behringer, Moog)
- **Polarity:** Switchable (N.O./N.C.)
- **Cable Length:** 60 inches (1.5 meters)

- **Material:** Metal (pedal plate), Plastic (housing)
- **Color:** Black
- **Item Weight:** 14.4 ounces
- **Package Dimensions:** 10 x 3.31 x 2.72 inches



Image: Diagram showing the dimensions of the LEKATO sustain pedal.

## WARRANTY AND SUPPORT

For any questions regarding your LEKATO Universal Sustain Pedal, please contact our customer service. We are committed to providing satisfactory solutions and support for our products.

**Contact Information:** Please refer to the contact details provided with your purchase or visit the official LEKATO website for support.

© 2024 LEKATO. All rights reserved.