

Gosangom 3090009

Gosangom 6-Slice Commercial Toaster Instruction Manual

Model: 3090009

INTRODUCTION

Welcome to your new Gosangom 6-Slice Commercial Toaster. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your appliance. Please read it thoroughly before first use and retain it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before operating the toaster.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse the cord, plug, or toaster in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use attachments not recommended by the appliance manufacturer, as this may cause injuries.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, turn any control to 'off', then remove the plug from the wall outlet.
- Do not use the appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted into a toaster as they may involve a risk of fire or electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.

- Do not attempt to dislodge food when the toaster is plugged in.
- Do not operate unattended.

PRODUCT OVERVIEW

The Gosangom 6-Slice Commercial Toaster is designed for efficient toasting of various bread types. It features a durable stainless steel construction and adjustable timing for desired browning.



Figure 1: Front-side view of the Gosangom 6-Slice Commercial Toaster, showcasing its stainless steel finish and six toasting slots.

Components

- Toasting Slots (6)
- Timing Knob (0-5 minutes)
- Power Switch (On/Off/Cancel)
- Removable Crumb Tray
- Power Cord

SETUP

1. **Unpacking:** Carefully remove the toaster from its packaging. Retain packaging for storage or return if necessary.
2. **Placement:** Place the toaster on a stable, heat-resistant, and dry surface, away from flammable materials. Ensure adequate ventilation around the appliance.
3. **Initial Cleaning:** Before first use, wipe the exterior with a damp cloth. Do not immerse the toaster in water.
4. **First Use (Burn-off):** Operate the toaster empty on the highest setting (5 minutes) for a few minutes to burn off any manufacturing residues. A slight odor or smoke may occur; this is normal. Ensure the area is well-ventilated.

OPERATING INSTRUCTIONS

• **Easy to Use** •
Simple and Intuitive Operation Even for Beginners

⚠ Only the toaster is included.



1



Put the Toast in the Slot

2



Turn the Timing Knob

3



Press the Switch

Figure 2: Visual guide for operating the toaster: 1. Insert bread, 2. Turn timing knob, 3. Press power switch.

1. **Connect Power:** Plug the power cord into a standard AC110V, 60Hz electrical outlet.
2. **Insert Bread:** Place slices of bread into the toasting slots. The toaster accommodates up to 6 slices.



Figure 3: Close-up of the toasting slots, illustrating the internal heating elements and design for even toasting.

- 3. Set Toasting Time:** Rotate the timing knob to select the desired browning level. The timing range is 1 to 5 minutes.



Figure 4: Detail of the timing knob (0-5 minutes) and the red power switch.

· More Details ·



Figure 5: Guide to browning levels, showing toast from lightly toasted (1 min) to dark and crispy (5 mins).

4. **Start Toasting:** Press the power switch to begin the toasting cycle. The toaster will automatically pop up the toast when the selected time expires.
5. **Cancel Function:** To stop the toasting cycle at any time, press the power switch again.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your toaster.

1. **Unplug:** Always unplug the toaster from the power outlet and allow it to cool completely before cleaning.
2. **Crumb Tray:** Pull out the crumb tray located at the bottom of the toaster. Dispose of crumbs and wipe the tray clean with a damp cloth. Reinsert the tray securely.

• Heating Master •

Make Each Heating More Uniform & Ensure Fast Cooking of Toast



Figure 6: The toaster with its removable crumb tray extended for easy cleaning.

- Exterior:** Wipe the exterior of the toaster with a soft, damp cloth. Do not use abrasive cleaners or metal scouring pads, as these can scratch the stainless steel finish.
- Interior:** Do not attempt to clean the interior heating elements. If food becomes lodged, unplug the toaster, allow it to cool, and carefully invert it to dislodge the food. Do not use metal utensils.

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|---------------------------|---|---|
| Toaster does not turn on. | Not plugged in; power outlet malfunction; power switch not pressed. | Ensure the toaster is securely plugged in. Check the power outlet with another appliance. Press the power switch. |
| Toast is too light/dark. | Timing knob set incorrectly. | Adjust the timing knob to a higher setting for darker toast or a lower setting for lighter toast. |

| Problem | Possible Cause | Solution |
|-------------------------|---|--|
| Smoke or burning smell. | Crumbs accumulated; food lodged in slots; first use burn-off. | Unplug and allow to cool. Empty crumb tray. Carefully remove any lodged food (do not use metal). Ensure adequate ventilation during first use. |
| Toast does not pop up. | Mechanism jammed; faulty spring. | Unplug and allow to cool. Gently check for obstructions. If the issue persists, contact customer support. |

SPECIFICATIONS

• **Multiple Choices** •
Meet Different Taste Preferences



1 MIN

2 MINS

3 MINS

4 MINS

5 MINS



⚠ Only the toaster is included.

Figure 7: Dimensional overview of the toaster, including slot width and overall unit measurements.

Model: 3090009

Material: Stainless Steel

Color: Silver

Power: 1680W

Voltage: AC110V

Frequency: 60HZ

Timing Range: 1-5 minutes

Number of Slots: 6

Slot Width: 2.8 cm (1.1 inches)

Product Dimensions (L x W x H): 41 x 22 x 21.5 cm (16.1 x 8.7 x 8.5 inches)

Power Cord Length: 1.33 m (4.4 ft)

Net Weight: 5.6 kg (12.4 lbs)

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official Gosangom website.

Please have your model number (3090009) and purchase date available when contacting support.
