

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Chicco](#) /

› [Chicco Mike the Microphone Toy User Manual](#)

**Chicco 00012121000000**

# Chicco Mike the Microphone Toy User Manual

Model: 00012121000000

## INTRODUCTION

This manual provides comprehensive instructions for the Chicco Mike the Microphone Toy, designed for toddlers aged 18-36 months. Please read this manual carefully before use to ensure proper operation and safety. The Mike microphone offers four interactive game modes, amplifying your child's voice with fun effects, melodies, sounds, and flashing lights.

## SAFETY INFORMATION

**Please read the instructions and warnings in the package insert and on the product packaging before using this product.**

- Always supervise children during play.
- Ensure batteries are inserted correctly and securely.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the toy will not be used for an extended period.
- Keep the toy away from water and excessive moisture.
- Do not attempt to disassemble or modify the toy.

## WHAT'S IN THE Box

- 1 Chicco Mike the Microphone Toy

*Note: 3 AAA batteries are included with the product.*

## SETUP

### Battery Installation

1. Locate the battery compartment cover, typically on the back or bottom of the microphone.
2. Using a screwdriver (not included), loosen the screw on the battery compartment cover.
3. Remove the cover.
4. Insert 3 AAA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
5. Replace the cover and tighten the screw securely.



*Image: Front view of the Chicco Mike the Microphone Toy, showing the four colored buttons and the light-up top section.*

## OPERATING INSTRUCTIONS

---

The Chicco Mike the Microphone Toy features an intuitive design with four colored buttons, each corresponding to a different game mode or function. The microphone amplifies your child's voice and includes various fun effects, melodies, sounds, and flashing lights.

### Button Functions and Game Modes



*Image: Close-up of the microphone's control panel, highlighting the blue Play button, red REC button, green Alien Voice*

button, and yellow Speed Up Voice button.

### 1. Record Your Voice (Red REC Button):

Press the **red REC button** to begin recording your voice. Speak clearly into the microphone. Press the button again to stop recording.

### 2. Playback (Blue Play Button):

After recording, press the **blue Play button** to listen to your recorded voice. This allows children to hear themselves and enjoy their own "concerts."

### 3. Alien Voice Effect (Green Button):

Press the **green button** to activate the voice distortion effect, making your voice sound like a fun robot or alien. Speak into the microphone while this mode is active.

### 4. Speed Up Voice Effect (Yellow Button):

Press the **yellow button** to speed up your voice. This creates a high-pitched, fast-speaking effect, adding another layer of fun to vocal play.

## Additional Features

- **Voice Amplification:** The microphone naturally amplifies your child's voice, making them feel like a real performer.
- **Melodies and Sounds:** The toy includes various pre-programmed melodies and fun sounds that play during different modes.
- **Flashing Lights:** Integrated flashing lights enhance the concert experience, synchronizing with sounds and voice effects.
- **Ergonomic Grip:** Designed to be lightweight with an ergonomic handle, making it easy for small hands to hold.





*Image: A toddler holding the Chicco Mike the Microphone Toy, demonstrating its ergonomic design suitable for young children.*

## MAINTENANCE

- **Cleaning:** Wipe the toy with a soft, damp cloth. Do not immerse in water. Avoid using harsh chemicals or abrasive cleaners.
- **Storage:** Store the microphone in a cool, dry place away from direct sunlight when not in use.
- **Battery Care:** Remove batteries if the toy is not used for extended periods to prevent leakage.

## TROUBLESHOOTING

- **No Sound or Distorted Sound:**
  - Check if the batteries are correctly installed and not depleted. Replace with fresh AAA batteries if necessary.
  - Ensure the microphone is turned on (if applicable, though this model seems to activate with button presses).
  - Verify that the child is speaking directly into the microphone's pickup area.

- **Lights Not Flashing:**

- Check battery levels.
- Ensure the toy is active in a mode that triggers lights.

- **Toy Not Responding:**

- Remove and reinsert batteries to reset the toy.
- Ensure buttons are pressed firmly.

## SPECIFICATIONS

Model Number	00012121000000
Product Dimensions	2.76 x 2.76 x 7.87 inches
Item Weight	9.9 ounces
Recommended Age	18 months - 3 years
Batteries Required	3 AAA batteries (included)
Manufacturer	Artsana spa

## WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Chicco website. You can also visit the [Chicco Store on Amazon](#) for more product details and contact options.

## Related Documents - 00012121000000

	<p><a href="#">Chicco Turbo Team Turbotouch Toy Car - Interactive Play for Toddlers</a></p> <p>Discover the Chicco Turbo Team Turbotouch, an interactive toy car for children aged 18 months to 5 years. Featuring a unique 'Press &amp; Go!' mechanism and vibrant design, this toy offers engaging play. Includes manufacturer details, safety compliance, and multilingual product information.</p>
-------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

	<p><b><u><a href="#">Chicco Selfie Phone Instruction Manual and Safety Guide</a></u></b></p> <p>Comprehensive user manual for the Chicco Selfie Phone, a bilingual talking toy for children aged 6-36 months. Includes setup, operation, safety warnings, battery information, care instructions, and disposal guidelines.</p>
	<p><b><u><a href="#">Chicco Farm Book - Interactive Learning Toy for Toddlers</a></u></b></p> <p>Explore the world of farm animals with the Chicco Farm Book. This interactive toy offers stories, fun facts, and melodies for children aged 6-36 months. Learn about animals, their habitats, diets, young, and sounds.</p>
	<p><b><u><a href="#">Chicco Emotibee Toy: Instructions for Use and Safety Guide</a></u></b></p> <p>This document provides comprehensive instructions for the Chicco Emotibee toy, covering its features, operation, safety warnings, battery replacement, and care instructions. Designed for children aged 12-36 months.</p>
	<p><b><u><a href="#">Chicco Baby Rodeo &amp; Miss Baby Rodeo Instruction Manual</a></u></b></p> <p>Detailed instructions for assembling, using, and maintaining the Chicco Baby Rodeo and Miss Baby Rodeo toy. Includes safety warnings, component lists, and battery information.</p>
	<p><b><u><a href="#">Chicco Peekaboo Cat &amp; Peekaboo Pony - User Manual</a></u></b></p> <p>This document provides instructions for the Chicco Peekaboo Cat and Peekaboo Pony toys, including operation, battery replacement, cleaning, and warranty information. It is available in multiple languages.</p>