

BAKAJI 1

BAKAJI Folding Table with 4 Chairs Instruction Manual

Model: 1

INTRODUCTION

Thank you for choosing the BAKAJI Folding Table with 4 Chairs. This versatile set is designed for convenience and portability, ideal for various activities such as camping, picnics, garden use, or as an additional indoor surface. Constructed with an aluminum frame and Oxford fabric chairs, it offers a lightweight yet sturdy solution for your outdoor and indoor needs. This manual provides essential information for safe setup, operation, and maintenance of your product.

SAFETY INFORMATION

- Ensure all locking mechanisms are securely engaged before use to prevent collapse.
- Do not exceed the weight capacity of the table or chairs.
- Place the table on a flat, stable surface to avoid instability.
- Keep children away during setup and folding to prevent pinching injuries.
- Avoid placing hot items directly on the table surface without protection.
- Regularly inspect the product for any signs of wear or damage. Do not use if damaged.

PACKAGE CONTENTS

The BAKAJI Folding Table set includes:

- 1 x Folding Table
- 4 x Folding Chairs (stools)

Please check all components upon unpacking. If any parts are missing or damaged, contact customer support.

SETUP INSTRUCTIONS

1. Unfolding the Table



Figure 1: The BAKAJI folding table and chairs set, ready for use in an outdoor environment.

1. Place the folded table on a flat surface with the handle facing upwards.
2. Unlatch the side clips that hold the table halves together.
3. Gently open the table halves outwards until they lie flat.
4. Extend the table legs from their folded position. Ensure each leg clicks into place.
5. Adjust the table height by pressing the release buttons on each leg and sliding the leg extension to one of the three fixed height positions (54 cm, 62 cm, 68.5 cm). Ensure all four legs are set to the same height and locked securely.



Figure 2: Table height adjustment and ergonomic handle detail. The table offers three fixed height options: 54 cm, 62 cm, and 68.5 cm. The integrated handle facilitates easy transport when folded.

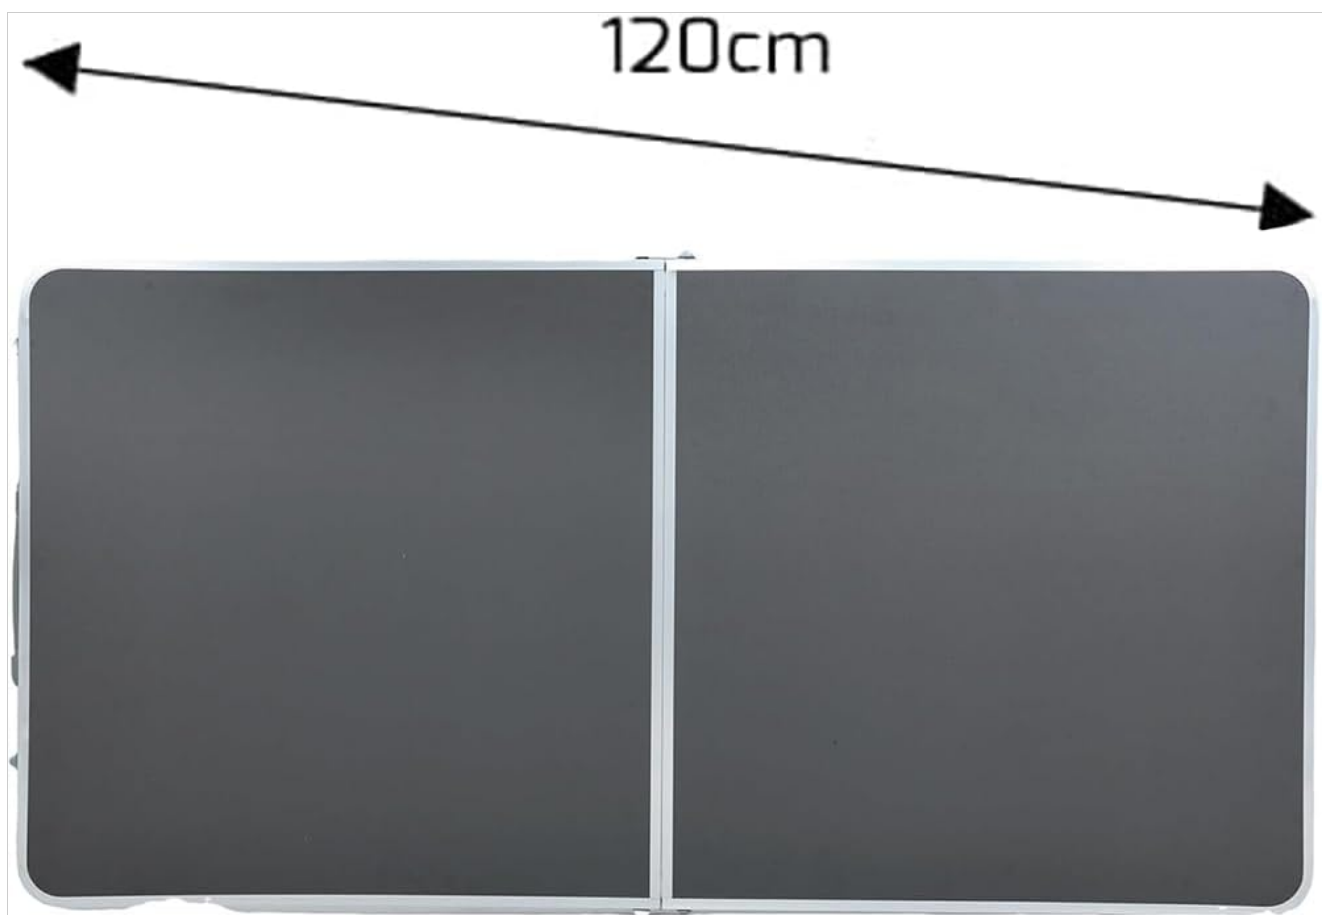


Figure 3: The table surface fully unfolded, measuring 120 cm in length.

2. Unfolding the Chairs

1. Remove the four folding chairs from the storage compartment within the folded table.
2. Grasp the chair frame and pull the legs apart until the seat fabric is taut and the chair is stable.
3. Ensure all four chairs are fully extended and stable before use.



Figure 4: The complete set, including the table and four chairs, ready for use.

OPERATING INSTRUCTIONS

This folding table and chair set is designed for versatile use:

- **Outdoor Use:** Ideal for camping, picnics, garden parties, or beach outings. Its weather-resistant properties make it suitable for various outdoor conditions.
- **Indoor Use:** Can serve as an auxiliary dining table, a craft table, a temporary desk, or for entertaining guests.
- **Portability:** When folded, the table transforms into a compact case with an ergonomic handle, allowing for easy transport and space-saving storage. The chairs store neatly inside the folded table.



Figure 5: The table and chairs folded into a compact, portable case for easy storage and transport.

MAINTENANCE

- **Cleaning:** The table surface and chair fabric can be easily cleaned with a damp cloth and mild soap. Avoid abrasive cleaners that may damage the finish.
- **Storage:** Store the table and chairs in a dry place when not in use to prolong their lifespan. Ensure they are clean and dry before folding for storage.
- **Inspection:** Periodically check all screws, joints, and locking mechanisms to ensure they are tight and functioning correctly. Tighten any loose fasteners as needed.
- **Weather Resistance:** While designed to be weather-resistant, prolonged exposure to extreme weather conditions (heavy rain, strong sun) may affect the product's durability.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Table feels unstable or wobbly.	<ul style="list-style-type: none">◦ Legs not fully extended or locked.◦ Uneven ground surface.◦ Height adjustment pins not fully engaged.	<ul style="list-style-type: none">◦ Ensure all leg extensions are fully pulled out and locked into place.◦ Move the table to a flat, even surface.◦ Verify that the height adjustment pins are securely engaged in their respective holes on all legs.
Table halves do not align perfectly when unfolded.	<ul style="list-style-type: none">◦ Hinges or locking mechanisms are stiff or misaligned.	<ul style="list-style-type: none">◦ Apply gentle, even pressure to flatten the table surface.◦ Check hinges for any obstructions.
Chairs feel uncomfortable or too low.	<ul style="list-style-type: none">◦ Chairs are designed as compact stools.◦ Table height might be too high for the stools.	<ul style="list-style-type: none">◦ The chairs are compact stools (35.5 cm height) intended for portability.◦ Consider using the table at its lowest height setting (54 cm) for better compatibility with the stools, or use alternative seating if higher comfort is required.

SPECIFICATIONS

- **Table Dimensions (unfolded):** 120 cm (Length) x 60 cm (Width) x 54/62/68.5 cm (Height adjustable)
- **Chair Dimensions:** Approximately 35.5 cm (Height)
- **Table Frame Material:** Aluminum
- **Chair Material:** Oxford Fabric
- **Product Weight:** 9 Kilograms
- **Color:** Gray
- **Features:** Foldable design, ergonomic handle, non-slip feet, weather-resistant.

WARRANTY AND SUPPORT

BAKAJI products are manufactured to high-quality standards. For any questions, concerns, or support needs regarding your folding table and chairs, please contact your retailer or the BAKAJI customer service department. Please retain your proof of purchase for any warranty claims.

For further assistance, please visit the official BAKAJI store or contact their support channels.