

[Manuals.plus](#) /

› [New Remotes](#) /

› Big Button TV and TV/Cable Remote Control User Manual

New Remotes cr3bcb

Big Button TV and TV/Cable Remote Control User Manual

Brand: New Remotes | Model: cr3bcb

INTRODUCTION

This manual provides detailed instructions for setting up, operating, and maintaining your New Remotes Big Button TV and TV/Cable Remote Control. Designed for simplicity and ease of use, this remote features large, clearly labeled buttons and a spill-proof, easy-to-clean surface, making it ideal for users seeking a straightforward control solution without complex menus or input options.



Figure 1: Front view of the Big Button TV and TV/Cable Remote Control, highlighting its large, easy-to-read buttons and simplified layout.

SETUP GUIDE

1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open it.
3. Insert two AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Figure 2: Angled view of the remote control, illustrating its ergonomic design and button placement.

2. Programming the Remote

This universal remote is designed for super simple setup and works with hundreds of TV brands and cable boxes. The most common method involves an automatic code search:

1. Ensure your TV or cable box is turned on.
2. Press and hold the **SETUP** button on the remote until the indicator light (if present) illuminates.
3. While holding **SETUP**, press the **TV POWER** button once. Release both buttons. The indicator light should blink.
4. Point the remote at your TV or cable box and repeatedly press the **TV POWER** button (or **CBL** button for cable box) slowly, about once every two seconds, until your device turns off.
5. Once the device turns off, immediately press the **ENTER** button to lock in the code. The indicator light should turn off.
6. Test the remote's functions (e.g., volume, channel) to ensure it controls your device correctly. If not, repeat the process.

Note: For specific brand codes or advanced programming, refer to the manufacturer's website or contact support.

OPERATING YOUR REMOTE

This remote is designed for straightforward operation, focusing on essential functions without complex menus or input options. Below are the primary button functions:

- **TV POWER:** Turns your television on or off.

- **Number Buttons (0-9):** Used for direct channel entry.
- **CH+ / CH-:** Changes channels up or down.
- **VOL+ / VOL-:** Adjusts the volume up or down.
- **SLEEP:** Activates the sleep timer function on your TV (if supported).
- **PREV. CH.:** Returns to the previously viewed channel.
- **CC:** Activates or deactivates Closed Captioning.
- **CBL:** Used for controlling a cable box (if programmed).
- **SETUP:** Used for programming the remote (as described in the Setup Guide).
- **ENTER:** Confirms selections, especially during programming.
- *****: This button may have various functions depending on the device it controls, often related to special features or input selection.

CARE AND MAINTENANCE

The Big Button Remote is designed to be spill-proof and easy to clean, making it suitable for various environments, including those requiring frequent sanitization. Follow these guidelines to maintain your remote:

- **Cleaning:** To clean the surface, use a soft, damp cloth with mild soap or a disinfectant wipe. Avoid abrasive cleaners or excessive moisture.
- **Spills:** In case of spills, wipe the remote immediately with a clean, dry cloth. The sealed design helps protect internal components.
- **Battery Replacement:** Replace batteries promptly when the remote's performance diminishes. Always use fresh AAA batteries.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

If you encounter issues with your remote control, try the following troubleshooting steps:

- **Remote Not Responding:**
 - Check if the batteries are inserted correctly and are not depleted. Replace them if necessary.
 - Ensure there are no obstructions between the remote and your TV/cable box.
 - Verify that the remote is pointed directly at the device's infrared sensor.
- **Remote Not Controlling Device After Setup:**
 - Repeat the programming steps carefully. It may take a few attempts to find the correct code.
 - Ensure you are pressing the correct device button (e.g., TV POWER for TV, CBL for cable box) during programming.
- **Some Buttons Not Working:**
 - This may indicate an incomplete programming. Try reprogramming the remote.
 - Ensure the button is not physically stuck or damaged.

If these steps do not resolve the issue, please contact customer support for further assistance.

PRODUCT SPECIFICATIONS

Feature	Detail
---------	--------

Model Number	cr3bcb
Brand	New Remotes
Compatible Devices	Television, Cable Box
Max Number of Supported Devices	1 (Universal for TV/Cable)
Power Source	2 x AAA Batteries (not included)
Special Features	Big Buttons, No Menu/Input, Spill-proof, Easy to Clean, Universal Compatibility
Color	Black
Item Weight	4 ounces (approx. 113 grams)
Package Dimensions	7.5 x 2.5 x 1 inches (approx. 19 x 6.35 x 2.54 cm)

WARRANTY AND SUPPORT

For information regarding warranty coverage, product registration, or technical support, please visit the official New Remotes website or contact their customer service department. Keep your purchase receipt as proof of purchase for any warranty claims. *Note: Specific warranty terms may vary. Please refer to the documentation provided with your purchase or the manufacturer's official channels for the most accurate and up-to-date information.*

© 2025 New Remotes. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question