

Yabano 510

Yabano Belgian Waffle Maker Model 510 Instruction Manual

Professional Rotating Waffle Iron with Double Flip Technology

1. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before operating the appliance.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.
13. Do not use appliance for other than intended use.

2. PRODUCT COMPONENTS

- **Non-Stick Cooking Plates:** Designed for easy release of waffles and quick cleanup.
- **360° Rotating Mechanism:** Ensures even heat distribution for perfectly cooked waffles.
- **Cool-Touch Handle:** Provides a safe and comfortable grip during operation.

- **Removable Drip Tray:** Catches excess batter, simplifying countertop cleanup.
- **Indicator Lights:** Signals when the unit is preheating (red) and ready to cook (green).
- **Power/Temperature Control:** Adjusts the heat level for desired waffle crispness.

3. SETUP

1. **Unpack:** Carefully remove the waffle maker and all accessories from the packaging.
2. **Clean:** Wipe down the non-stick cooking plates with a damp cloth. Ensure the removable drip tray is clean and properly inserted.
3. **Placement:** Place the waffle maker on a stable, heat-resistant surface.
4. **Power:** Plug the appliance into a standard 120V electrical outlet.

4. OPERATING INSTRUCTIONS

4.1 Preheating

- Turn the power/temperature control to your desired setting. The red indicator light will illuminate, signaling that the unit is heating.
- Wait for the green indicator light to turn on. This indicates the waffle maker has reached the optimal cooking temperature and is ready for batter.



Image: The Yabano Waffle Maker displaying its indicator lights (preheating and ready) and the removable drip tray for easy cleanup.

4.2 Adding Batter & Cooking

1. Once the green light is on, open one side of the waffle maker using the cool-touch handle.
2. Pour approximately 3/4 cup of waffle batter onto the center of the non-stick cooking plate. Do not overfill.
3. Close the waffle maker.
4. Immediately rotate the waffle maker 180 degrees using the handle. This ensures even distribution of batter and consistent cooking.
5. If making two waffles, repeat steps 1-3 for the other side.
6. Cook until the green indicator light illuminates again, signaling the waffle is done. Cooking time typically ranges

from 3-5 minutes depending on desired crispness.



Image: The Yabano Waffle Maker demonstrating its 360-degree rotation feature, allowing for simultaneous cooking of two Belgian waffles.

4.3 Removing Waffles

- Once cooked, unlock and open the waffle maker.
- Carefully remove the waffle using a non-metallic utensil (e.g., silicone spatula or wooden tongs) to avoid damaging the non-stick coating.
- Serve immediately or keep warm.

5. CLEANING AND MAINTENANCE

- **Cool Down:** Always unplug the waffle maker and allow it to cool completely before cleaning.
- **Drip Tray:** Remove the drip tray and wash it with warm, soapy water. Rinse and dry thoroughly.
- **Cooking Plates:** The non-stick plates are designed for easy cleaning. Wipe them with a damp cloth or sponge. For stubborn batter, use a small amount of cooking oil to soften it, then wipe clean. Do not use abrasive cleaners or metal scouring pads.
- **Exterior:** Wipe the exterior of the appliance with a damp cloth. Do not immerse the unit in water.
- **Storage:** Store the waffle maker in an upright position to save counter space.



Image: A waffle being easily removed from the non-stick plates of the Yabano Waffle Maker using tongs, highlighting the easy release and quick cleanup.

6. TROUBLESHOOTING

- **Waffle Maker Not Heating:** Ensure the appliance is properly plugged into a working outlet and the power/temperature control is turned on.
- **Waffles Sticking:** Ensure the cooking plates are clean and lightly greased (if necessary, though they are non-stick). Do not use metal utensils.
- **Uneven Cooking:** Ensure the waffle maker is rotated 180 degrees after adding batter to distribute heat evenly.
- **Waffles Not Crispy Enough:** Adjust the temperature control to a higher setting for a longer cooking time.

7. SPECIFICATIONS

Feature	Specification
Brand	Yabano
Model Number	510
Special Feature	Non Stick Coating
Color	Black
Material	Stainless Steel
Product Dimensions	14.17"D x 7.48"W x 7.32"H
Wattage	1400 watts
Item Weight	1.96 pounds (889 Grams)
Style	Double Flip Belgian Waffle Maker
Voltage	120 Volts
Number of Settings	1
Warranty Type	Limited Warranty

8. WARRANTY AND SUPPORT

The Yabano Belgian Waffle Maker Model 510 comes with a limited warranty. For detailed warranty information, product support, or to inquire about replacement parts, please refer to the contact information provided in your product packaging or visit the official Yabano website.

Please retain your proof of purchase for warranty claims.

