

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [NEWISION](#) /

> [NEWISION M10 Android 10-inch Tablet User Manual](#)

NEWISION M10

NEWISION M10 Android 10-inch Tablet User Manual

Model: M10

1. INTRODUCTION

This manual provides essential information for setting up, operating, and maintaining your NEWISION M10 Android 10-inch Tablet. Please read it thoroughly to ensure optimal performance and longevity of your device.



Image 1.1: The NEWISION M10 Android 10-inch Tablet, showcasing its display and sleek design.

Your browser does not support the video tag.

Video 1.1: An overview of the 10.1 inch Android 14 Tablet, highlighting its features and design.

2. WHAT'S IN THE BOX

Verify that all items are present in the package:

- 1 x 10.1 Inch Android 14 Tablet
- 1 x USB-C Cable
- 1 x Adapter
- 1 x User Manual

3. DEVICE LAYOUT

Familiarize yourself with the physical components of your tablet.



Image 3.1: Front and rear views of the NEWISION M10 tablet, showing camera placement and overall design.

- **Front Camera:** Located at the top center when held vertically.
- **Rear Camera:** Located on the back panel, typically in a corner.
- **Power Button:** Usually on the side edge. Press and hold to power on/off or restart.
- **Volume Buttons:** Adjacent to the power button, for adjusting audio levels.
- **USB-C Port:** For charging and data transfer.
- **3.5mm Headphone Jack:** For connecting wired headphones.
- **MicroSD Card Slot:** For expanding storage.
- **Speakers:** Dual speakers for audio output.

4. SETUP

4.1 Initial Charging

Before first use, fully charge the tablet. Connect the provided USB-C cable to the tablet's USB-C port and the adapter to a power outlet. The battery indicator on the screen will show charging status.

4.2 Power On/Off

- **To Power On:** Press and hold the Power button until the screen lights up.

- **To Power Off:** Press and hold the Power button until the power options appear, then select 'Power off'.
- **To Restart:** Press and hold the Power button until the power options appear, then select 'Restart'.

4.3 Initial Setup Wizard

Upon first power-on, the tablet will guide you through the initial setup process. This includes selecting your language, connecting to a Wi-Fi network, and signing in with your Google account. A Google account is required to download apps from the Google Play Store.

4.4 Wi-Fi Connection

To connect to a Wi-Fi network:

1. Go to **Settings > Network & internet > Wi-Fi**.
2. Toggle **Wi-Fi On**.
3. Select your desired network from the list.
4. Enter the password if prompted, then tap **Connect**.

5. OPERATING YOUR TABLET

5.1 Touchscreen Navigation

The tablet features a responsive touchscreen. Use the following gestures:

- **Tap:** To select an item or open an app.
- **Touch & Hold:** To access contextual menus or move items.
- **Swipe:** To scroll through pages or lists.
- **Pinch:** To zoom in or out on images and web pages.

5.2 App Management

Your tablet runs on Android 14 and is GMS certified, providing full access to the Google Play Store.



Image 5.1: Visual representation of the tablet's stable processor (A133 Quad Core 1.6GHz), 2GB RAM + 32GB ROM, expandable storage up to 1TB, and Bluetooth/2.4G WiFi capabilities.

- **Installing Apps:** Open the **Play Store** app, search for your desired app, and tap **Install**.
- **Uninstalling Apps:** Touch and hold the app icon on the home screen or app drawer, then drag it to 'Uninstall' or select 'App info' and choose 'Uninstall'.

5.3 Storage Expansion

The tablet comes with 32GB of internal storage, which can be expanded up to 1TB using a MicroSD card (not included).



Image 5.2: Diagram illustrating the tablet's 32GB ROM, 2+2GB expandable RAM, and Micro SD expansion capability up to 1TB.

1. Locate the MicroSD card slot on the side of the tablet.
2. Gently insert the MicroSD card into the slot until it clicks into place.
3. Follow any on-screen prompts to format the card if necessary.

5.4 Display Features

The 10.1-inch HD IPS screen offers a 1280x800 resolution and 178° wide viewing angles. It includes vision protection features and reading modes for extended use.

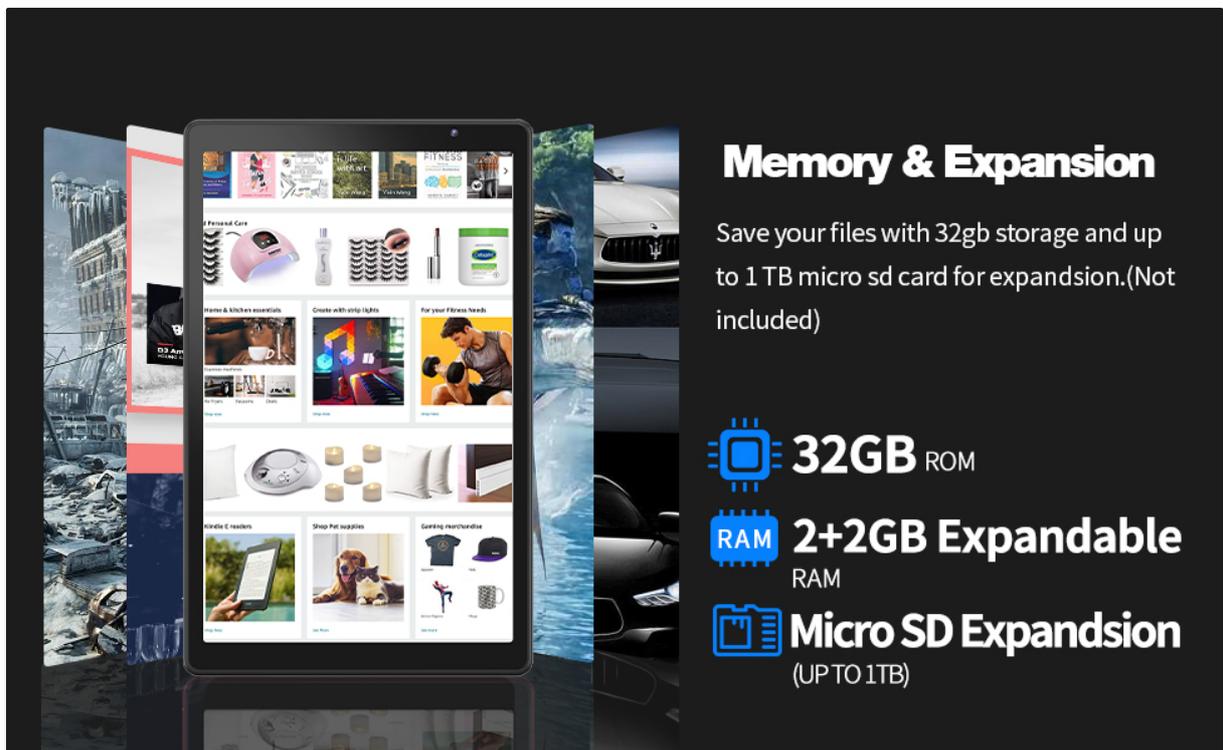


Image 5.3: Highlights of the 10.1-inch large screen, featuring HD 1280*800 resolution, IPS 178-degree viewing angle, and reading mode with eye protection.

5.5 Audio Features

The tablet is equipped with dual speakers for balanced sound. A 3.5mm headphone jack is available for private listening.

5.6 Parental Controls

Monitor usage and manage content with built-in parental control features. Set time limits and content filters to ensure a safe digital environment.

6. MAINTENANCE

6.1 Cleaning Your Tablet

- Use a soft, lint-free cloth to clean the screen and body.
- Avoid using harsh chemicals or abrasive materials.
- For stubborn smudges, lightly dampen the cloth with water or a screen-specific cleaner.

6.2 Battery Care

The 6000mAh battery provides approximately 6 hours of average use. To prolong battery life:

2025 Latest System-Android 14

Easy and Fast to Install
Different App

Some Applications Can Be
Encrypted and Private.

14
Android



Image 6.1: Key features of the NEWISION M10 tablet, including its 10.1-inch display, Android 14 OS, HD IPS screen, WiFi 6, Quad-Core processor, expandable RAM/ROM, 1TB expandable storage, and 6000mAh battery.

- Avoid extreme temperatures.
- Do not let the battery fully discharge frequently.
- Use the original charger and cable.
- Adjust screen brightness to a comfortable level.
- Close unused apps running in the background.



Image 6.2: The tablet connected to a charger via its Type-C port, indicating fast charging capability.

6.3 Software Updates

Regularly check for and install software updates to ensure your tablet has the latest features and security enhancements.

1. Go to **Settings > System > System update**.
2. Tap **Check for update** and follow the on-screen instructions.

7. TROUBLESHOOTING

If you encounter issues with your tablet, refer to the following common solutions:

- **Tablet not turning on:** Ensure the battery is charged. Connect the charger and try again. If unresponsive,

press and hold the power button for 10-15 seconds to force a restart.

- **Wi-Fi connectivity issues:** Check if Wi-Fi is enabled in settings. Restart your router and the tablet. Ensure you are within range of the Wi-Fi signal.
- **Slow performance:** Close unused apps. Clear cache for frequently used apps (Settings > Apps > [App Name] > Storage > Clear cache). Consider uninstalling unnecessary apps or moving large files to a MicroSD card.
- **Apps crashing:** Ensure the app is updated to the latest version. Clear the app's cache and data (Settings > Apps > [App Name] > Storage > Clear data). If the problem persists, uninstall and reinstall the app.
- **Screen unresponsive:** Restart the tablet. If the issue continues, contact support.

8. SPECIFICATIONS

Model	M10
Operating System	Android 14
Screen Size	10.1 Inches
Screen Resolution	1280x800 Pixels (HD IPS)
Processor	Quad-Core 1.6 GHz (Allwinner)
RAM	2 GB
Internal Storage	32 GB
Expandable Storage	Up to 1 TB via MicroSD card
Battery Capacity	6000mAh
Average Battery Life	6 Hours
Wireless Connectivity	WiFi 6 (802.11b), Bluetooth
Ports	USB-C, 3.5mm Headphone Jack
Item Weight	1.06 pounds
Product Dimensions	9 x 6.8 x 0.3 inches

9. WARRANTY AND SUPPORT

9.1 Warranty Information

Your NEWISION M10 tablet is backed by an included warranty. Please refer to the warranty card or packaging for specific terms and conditions regarding coverage and duration.

9.2 Customer Support

For further assistance, technical support, or warranty claims, please contact NEWISION customer service through the retailer where the product was purchased or visit the official NEWISION website for contact information.

