

PRETZI PB70-8COL-BLK

PRETZI 70-inch Modern Fireplace TV Stand Instruction Manual

Model: PB70-8COL-BLK

INTRODUCTION

Thank you for choosing the PRETZI 70-inch Modern Fireplace TV Stand. This manual provides essential information for the safe assembly, operation, and maintenance of your new entertainment center. Please read all instructions carefully before beginning assembly and retain this manual for future reference.

This product combines a 70-inch TV stand, suitable for televisions up to 80 inches, with a 36-inch electric fireplace. It features integrated LED lighting, ample storage, and a durable construction designed for long-lasting use.

SAFETY INFORMATION

WARNING: Failure to follow these safety instructions may result in fire, electric shock, or injury.

- Exercise caution when handling and assembling components due to the product's heavy weight.
- Do not attempt to assemble this unit alone. Two-person assembly is recommended for safety and ease.
- The product is delivered in two separate packages (fireplace insert and TV stand), which may arrive on different days. Ensure both packages are received before starting assembly.
- Be cautious around the electric fireplace to prevent burns. Do not touch the heating element directly.
- Ensure the power cord is not pinched or routed under the unit.
- Do not cover the fireplace's air vents.
- Keep flammable materials at least 3 feet (0.9 meters) away from the front of the fireplace.

PACKAGE CONTENTS

Before assembly, verify that all parts are present and undamaged. If any parts are missing or damaged, contact customer support immediately.

The product is shipped in two distinct packages:


1. **Package A:** TV Stand Components (MDF panels, particle board, stainless steel brackets, hardware, LED light

strip).

2. **Package B:** 36-inch Electric Fireplace Insert and Remote Control.

Refer to the detailed parts list included with your assembly instructions for specific component identification.

PRODUCT SIZE

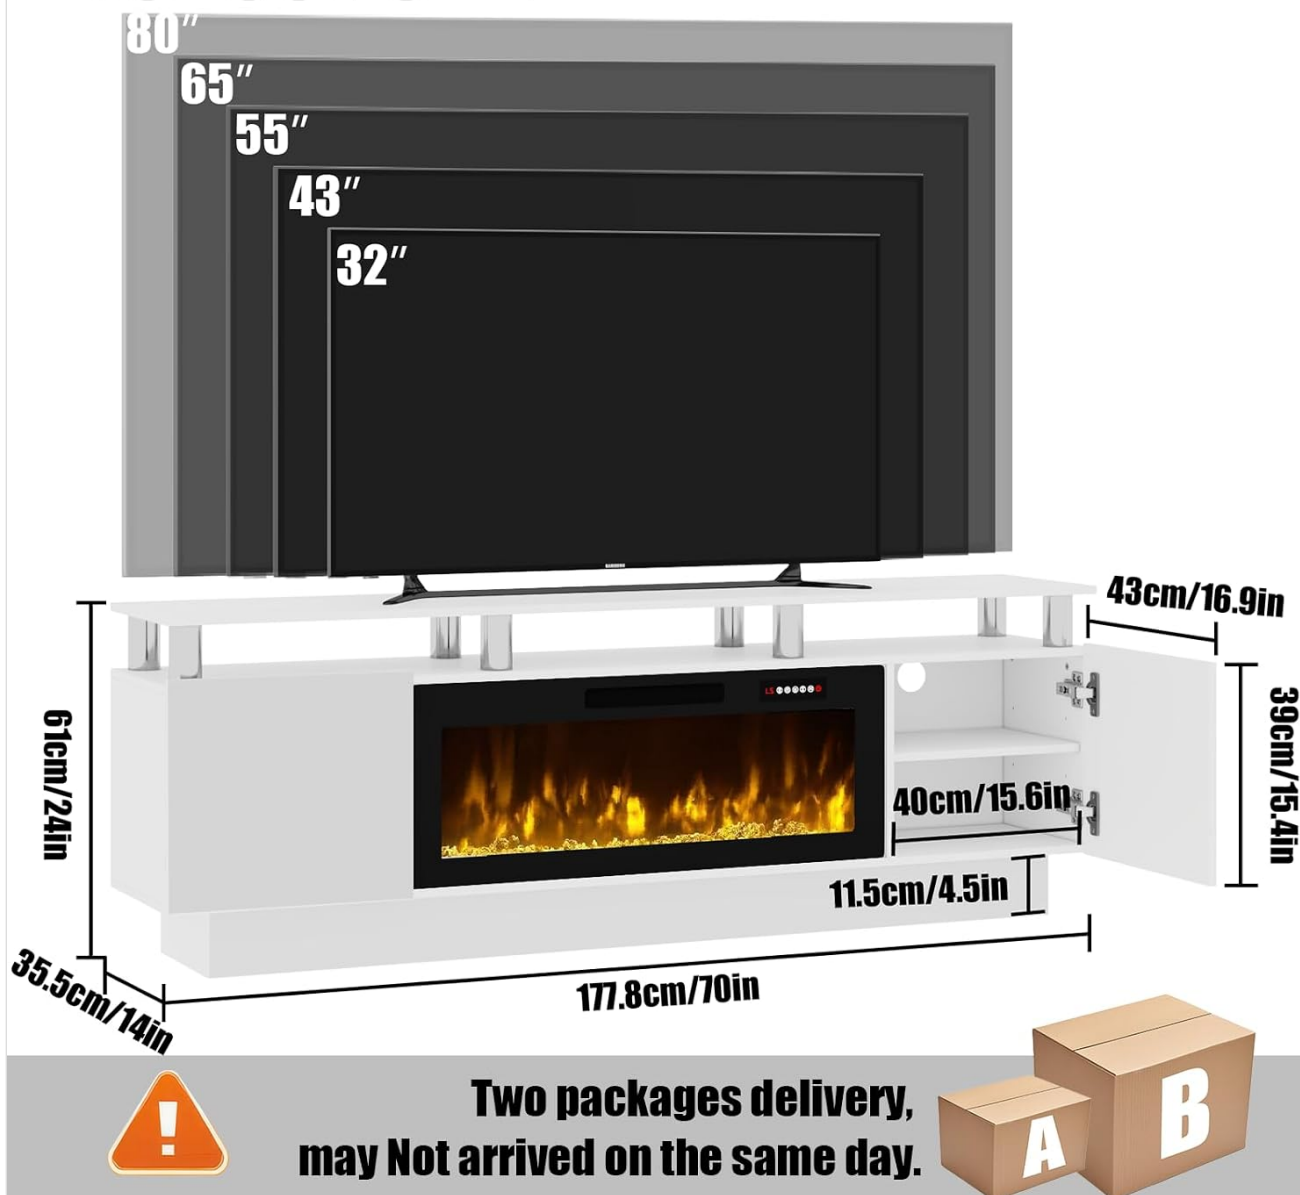

SETUP AND ASSEMBLY

Assembly requires two people. Follow the step-by-step instructions provided in the separate assembly guide. All parts are labeled, and pre-drilled holes are included for convenience.

Tools Required (Not Included):

- Phillips head screwdriver
- Hammer (for dowels, if applicable)

Assembly Steps Overview:

1. Unpack all components and verify against the parts list.

2. Assemble the main frame of the TV stand using the provided hardware.
3. Attach the stainless steel support brackets.
4. Install the storage cabinets and mirrored doors.
5. Integrate the 36-inch electric fireplace insert into the designated opening.
6. Install the LED light strip according to the instructions.
7. Ensure all connections are secure and the unit is stable before placing a television or other items on it.



Image: Detailed view of the TV stand's features, including cable management holes, adjustable storage cabinets, and the robust thickened base.

8 STAINLESS STEEL SUPPORTS



MORE STURDY

MORE STABILITY

MORE SPACE

Image: Close-up of the eight stainless steel supports, illustrating their contribution to the stand's sturdiness and stability.

OPERATING INSTRUCTIONS

Electric Fireplace Operation:

The electric fireplace can be operated via the control panel on the unit or the included remote control.

- **Power On/Off:** Press the power button to turn the fireplace on or off.
- **Heat Settings:** Select between 750W (low heat) and 1500W (high heat) modes for optimal warmth and energy efficiency.
- **Flame Effects:** Choose from 12 realistic 3D flame effects to customize the ambiance.
- **Flame Brightness:** Adjust the flame brightness through 5 levels (V1-V5) from darkest to brightest.
- **Timer Function:** Set the operational timer for 1 to 8 hours. The fireplace will automatically shut off after the set duration.
- **Overheating Protection:** The fireplace is equipped with an internal overheating protection feature for safety.



12 Flame Colors + 5 Level Flame Brightness

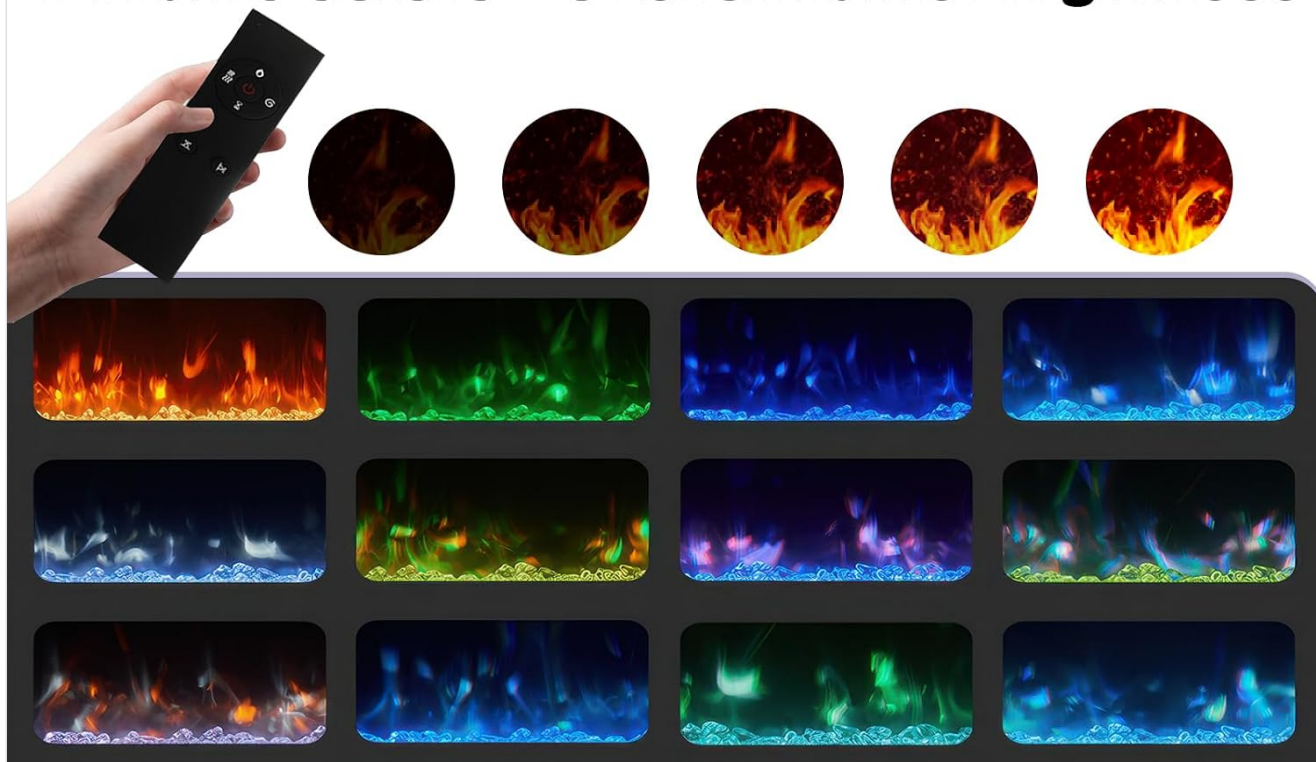


Image: Visual representation of the 12 distinct flame colors and 5 brightness levels available for the electric fireplace, controlled by the remote.

LED Light Operation:

The integrated LED lights offer customizable illumination for your entertainment area.

- **Color Selection:** Choose from 20 different LED color combinations to match your mood or decor.
- **Control:** The LED lights are typically controlled via a separate remote or a button on the unit. Refer to the specific LED light instructions for detailed operation.



Image: The TV stand illuminated by its LED lights, demonstrating the range of 20 color options and the remote control used for adjustment.

MAINTENANCE

Regular maintenance will ensure the longevity and appearance of your TV stand and fireplace.

- **Cleaning the TV Stand:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the high-gloss finish or wood grain particle board.
- **Cleaning the Fireplace:** Ensure the fireplace is turned off and unplugged before cleaning. Use a soft, dry cloth to clean the glass and exterior surfaces. Do not spray water directly onto the unit.
- **Dusting:** Regularly dust the unit to prevent buildup, especially around the fireplace vents.
- **Cable Management:** Periodically check cable holes to ensure wires remain organized and are not pinched.

TROUBLESHOOTING

If you encounter issues with your PRETZI TV Stand or electric fireplace, refer to the following common solutions:


Problem	Possible Cause	Solution
Fireplace does not turn on.	No power, power cord unplugged, circuit breaker tripped, unit overheated.	Check power outlet, ensure cord is securely plugged in, reset circuit breaker, allow unit to cool down.
No heat from fireplace.	Heat function not activated, low heat setting selected, thermostat setting too low.	Activate heat function, select 1500W setting, increase thermostat setting.
LED lights not working.	LED power cord unplugged, remote battery dead, LED strip damaged.	Check LED power connection, replace remote battery, contact support if damaged.
Unit is unstable.	Assembly not complete, hardware loose, uneven floor.	Recheck all connections and tighten hardware, move to a level surface or use shims.

For issues not listed here, or if troubleshooting steps do not resolve the problem, please contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	PRETZI
Model Number	PB70-8COL-BLK
TV Stand Dimensions (L x W x H)	70 x 14 x 24 inches (177.8 x 35.5 x 61 cm)
Electric Fireplace Dimensions (H x W)	13.31 x 36 inches (33.8 x 91.4 cm)
Recommended TV Size	Up to 80 inches
Tabletop Load Capacity	250 lbs
Item Weight	76.7 pounds
Material	MDF, Particle Board, Alloy Steel (Stainless Steel Brackets)
Fireplace Heat Settings	750W / 1500W
Flame Effects	12 colors, 5 brightness levels
LED Lights	20 color combinations
Special Features	Adjustable Flame, Adjustable Thermostat, Dimmer, Multicolor Flame, Overheating Protection, Cable Management

PRODUCT SIZE

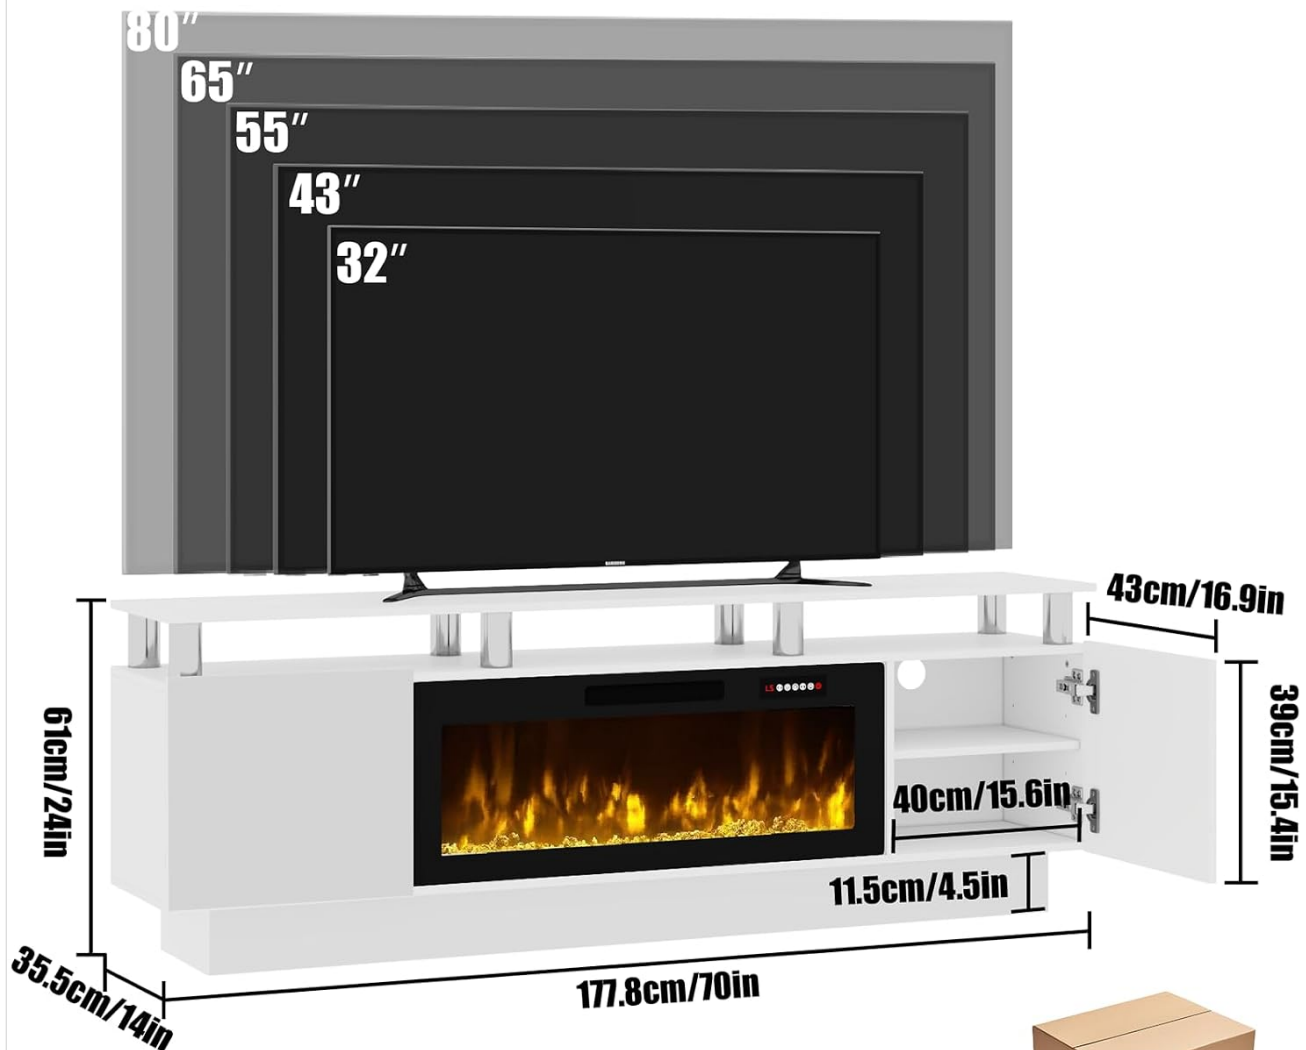

**Two packages delivery,
may Not arrived on the same day.**



Image: Detailed product size diagram for the 70-inch TV stand and the 36-inch electric fireplace, including compatible TV sizes.

WARRANTY AND SUPPORT

PRETZI products are designed for quality and durability. For specific warranty details, please refer to the warranty card included with your purchase or contact customer support.

If you require assistance with assembly, operation, or have any questions regarding your product, our customer support team is available to help.

Customer Support:

- Available 24 hours for assistance.
- Please refer to the contact information provided in your product packaging or on the official PRETZI website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question