



Manuals.plus /

› Akozon /

› Akozon Mini Theremin Musical Instrument Kit User Manual

Akozon Akozon7pkyecr5di

Akozon Mini Theremin Musical Instrument Kit User Manual


INTRODUCTION

Welcome to your Akozon Mini Theremin Musical Instrument Kit. This manual provides essential information for setting up, operating, and maintaining your device. Please read these instructions carefully before use to ensure optimal performance and longevity of your instrument.

PRODUCT OVERVIEW

The Akozon Mini Theremin is a compact musical instrument designed for creating unique sounds through electromagnetic fields. It features an interactive screen display, adjustable tuning, and a variety of instrument types and tones, offering a versatile musical experience.

- Adjustable tuning settings for diverse sound creation.
- Compact and portable design for use anywhere.
- Interactive screen display provides real-time feedback.
- Detailed display information includes waveform, timing, frequency, volume, and corresponding piano pitch (display can be disabled).
- Offers 20 distinct instrument types and 70 tones.
- Conveniently powered via a Type-C USB interface.

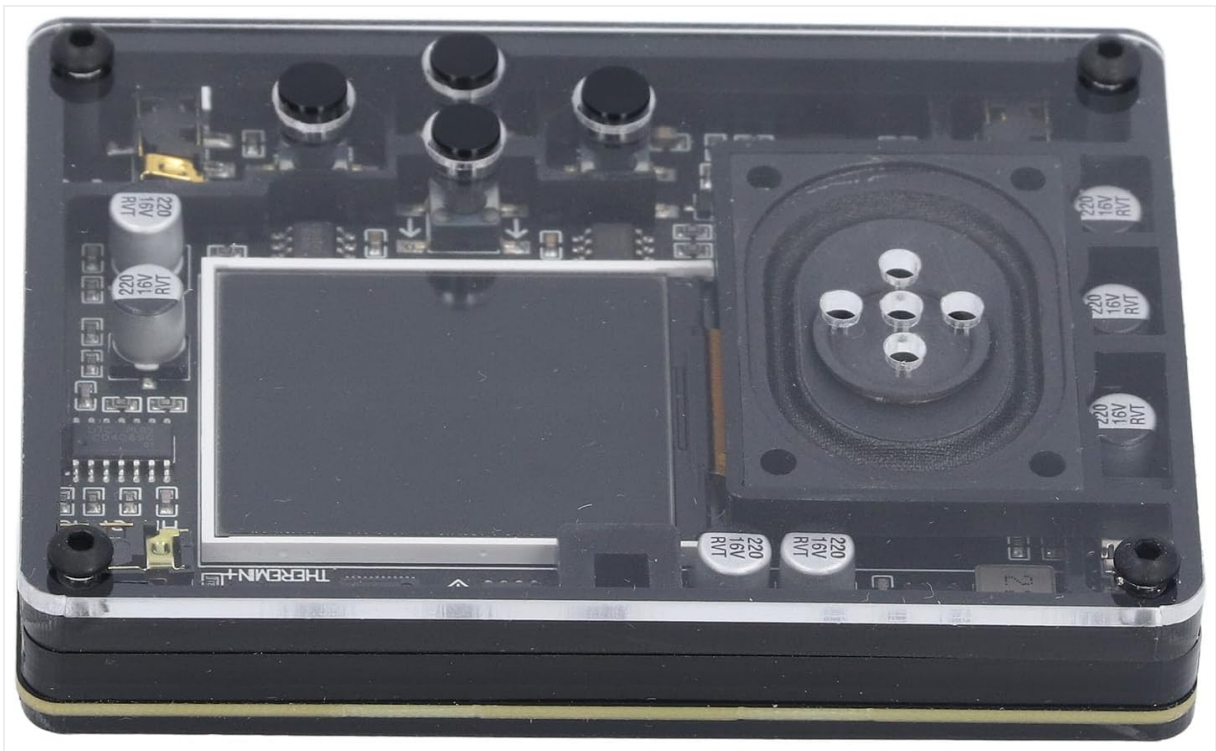

Front view of the Akozon Mini Theremin, showcasing its compact design and integrated speaker.

PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- 1 x Theremin Module
- 1 x Type C USB Cable
- 2 x Antennas
- 1 x User Manual (this document)



Image showing the complete package contents: the Theremin module, two antennas, and a Type-C USB cable.

SETUP INSTRUCTIONS

Connecting the Antennas

The Theremin operates using two antennas, which are crucial for detecting hand movements to control pitch and volume.

1. Locate the two antenna ports on the side of the Theremin module.
2. Carefully insert each antenna into its respective port. Ensure they are securely connected to prevent signal loss.



Side view of the Akozon Mini Theremin with one antenna attached, illustrating the connection point.

Powering the Device

The Theremin is powered via a standard Type-C USB interface.

1. Connect the provided Type-C USB cable to the Theremin's Type-C port.
2. Connect the other end of the USB cable to a compatible USB power source (e.g., computer USB port, USB wall adapter).
3. The device will power on automatically once connected to a power source.



Close-up view of the Akozon Mini Theremin's Type-C USB power port.

OPERATING INSTRUCTIONS

Basic Operation

The Theremin is played by moving your hands in the air around its antennas. One antenna typically controls pitch, and the other controls volume. Experiment with hand proximity and movement to produce

different sounds.

The interactive screen display provides real-time visual feedback on your performance, aiding in control and understanding of the sound output.

Screen Display Information

The screen can display the following information to assist with your musical endeavors:

- Waveform of the sound being produced.
- Time and Frequency (this display can be turned off if preferred).
- Current Volume level.
- Corresponding Piano Pitch for easy reference.

Use the control buttons located near the screen to navigate menus and adjust display settings according to your preference.

Adjusting Tones and Instrument Types

The device offers a wide range of sonic possibilities with 20 different instrument types and 70 tones. Refer to the on-screen menu for options to select and adjust these settings. This allows you to customize your sound and explore various musical textures.

MAINTENANCE

Cleaning

To maintain the appearance and functionality of your Theremin, use a soft, dry cloth to gently clean the exterior. Avoid using liquid cleaners, solvents, or abrasive materials, as these can damage the device's surface or internal components.

Storage

Store the device in a cool, dry place away from direct sunlight, high humidity, and extreme temperatures. For extended storage periods, it is recommended to disconnect the antennas and the power cable.

TROUBLESHOOTING

No Sound Output

- **Power Check:** Ensure the device is properly powered on and the Type-C USB cable is securely connected to a working power source.
- **Antenna Connection:** Verify that both antennas are securely inserted into their respective ports. Loose connections can prevent proper operation.
- **Volume Settings:** Check that the volume settings on the device are not set to minimum or muted.
- **Hand Position:** Confirm your hands are positioned correctly near the antennas. The Theremin requires specific hand movements to generate sound.



Angled view of the Akozon Mini Theremin, showing the speaker and control buttons, useful for troubleshooting sound issues.

Display Not Working

- **Power Supply:** Ensure the device is receiving power.
- **Display Settings:** Check if the display has been intentionally turned off via the device's settings menu.
- **Persistent Issue:** If the display remains unresponsive after checking the above, contact customer support for further assistance.

SPECIFICATIONS

Feature	Detail
Item Model Number	Akozon7pkyecr5di
Item Weight	8.2 ounces
Package Dimensions	6.69 x 6.3 x 1.97 inches
Power Supply	Type C interface
Instrument Types	20
Tones	70
Display Content	Waveform, time and frequency (can be turned off), volume and corresponding piano pitch
Batteries Required	No

WARRANTY AND SUPPORT

Warranty Information

This product comes with a standard manufacturer's warranty. Please refer to the warranty card or documentation included in your package for specific terms, conditions, and duration of the warranty.

Customer Support

For technical assistance, troubleshooting not covered in this manual, or warranty claims, please contact Akozon customer support. You can find more information and contact details by visiting the official Akozon store on Amazon:

[Akozon Store on Amazon](#)