



Manuals.plus /

› **Lumiset /**

› Musical Fishing Game for Kids | Fun & Educational Fish Catching Toy | Musical Board | STEM Learning & Motor Skills | 21 Fishes & 4 Fishing Rod

Lumiset LT-GOFSHNG

Musical Fishing Game Instruction Manual

Model: LT-GOFSHNG

INTRODUCTION

The Lumiset Musical Fishing Game is an interactive toy designed to provide engaging entertainment for children. This game helps develop essential skills such as hand-eye coordination, reflexes, and motor skills through a fun fish-catching activity. The game board features spinning fish that open and close their mouths, adding a dynamic challenge to playtime.



Image: The Lumiset Musical Fishing Game, showing the yellow circular board with colorful fish and a fishing rod.

SAFETY INFORMATION

Please read all safety warnings before use to ensure a safe play environment.

- **Not suitable for children under 36 months** due to small parts which may present a choking hazard.
- **Small parts:** Keep away from young children who may put objects in their mouths.
- **Choking hazards:** Ensure all small components are securely attached and supervised during play.
- **Hair entanglement:** Hair entanglement may occur if a child's head is too close to the motorized unit of this toy. Ensure children maintain a safe distance from moving parts.

PACKAGE CONTENTS

Verify that all components listed below are included in your package:

- 1 x Musical Unit / Rotating Game Board

- 4 x Fishing Rods
- 21 x Fish (20 standard fish in 4 different colors, and 1 Jackpot Fish)



Image: Visual representation of the game components, including the main board, four fishing rods, and various colorful fish.

SETUP

1. Battery Installation:

The game requires 2 "AA" batteries (not included). Locate the battery compartment on the underside of the game board. Use a screwdriver to open the compartment, insert the batteries according to the polarity indicators (+/-), and then securely close the compartment.

Dimensions



Image: Underside view of the game board indicating the battery compartment and overall dimensions.

2. Place the Fish:

Carefully place the 21 fish into the designated slots on the game board. Ensure they are seated properly so their mouths can open and close freely.

3. Prepare Fishing Rods:

Distribute the four fishing rods among the players. Each rod has a small hook designed to catch the fish.

OPERATING INSTRUCTIONS

Follow these steps to play the Musical Fishing Game:

- Power On:** Locate the ON/OFF switch on the side of the game board. Slide the switch to the "ON" position. The game board will begin to rotate, and the fish will start opening and closing their mouths.
- Activate Music:** Next to the ON/OFF switch, there is a separate switch or button for the music. Activate it to play the accompanying musical tunes, enhancing the game experience.



Image: Detailed view of the power switch and music speaker on the game board.

3. How to Play:

- As the game board rotates, use your fishing rod to hook the fish when their mouths are open.
- Aim to catch as many fish as possible before the game ends or time runs out (if playing with a timer).
- The player who successfully catches the most fish wins the round.

Musical Fish Catching Game with Rotating Board



**Hand - Eye
Coordination**



**Spatial
Awareness**



**Boosts
Concentration**



**Social
Well - being**

Image: A child's hand holding a fishing rod, demonstrating the interactive play of catching fish from the rotating board.



Image: The fishing game board surrounded by musical notes, highlighting its musical feature.

4. **Power Off:** When finished playing, slide the ON/OFF switch to the "OFF" position to conserve battery life.

MAINTENANCE

Proper care will extend the life of your Musical Fishing Game:

- **Cleaning:** Wipe the game board and components with a soft, dry cloth. Do not use abrasive cleaners or immerse the unit in water.
- **Storage:** Store the game in a cool, dry place away from direct sunlight when not in use.
- **Battery Care:** Remove batteries if the toy will not be used for an extended period to prevent battery leakage.

TROUBLESHOOTING

If you encounter any issues, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Game does not turn on or rotate.	Batteries are dead or incorrectly installed. ON/OFF switch is not fully engaged.	Check and replace batteries if necessary. Ensure correct polarity. Confirm the ON/OFF switch is pushed completely to the "ON" position.
Fish mouths are not opening/closing properly.	Fish are not seated correctly in their slots. Obstruction in the mechanism.	Ensure each fish is properly placed in its slot. Check for any debris or foreign objects obstructing the fish movement.
Music is not playing.	Music switch is off. Low batteries.	Ensure the music switch is in the "ON" position. Replace batteries if they are low, as this can affect sound output.

SPECIFICATIONS

Feature	Detail
Product Dimensions	30 x 30 x 3 cm (L x W x H)
Item Weight	500 g
Model Number	LT-GOFSHNG
Recommended Age	4 years and up
Number of Players	2-4
Material Type	Plastic
Color	Yellow
Batteries Required	Yes (2 x AA batteries)
Batteries Included	No
Assembly Required	No
Included Components	Musical Unit, Rotating Game Board, 4 Fishing Rods

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official Lumiset website. Keep your purchase receipt as proof of purchase.

