



[Manuals.plus](#) /

> [JOLGRDWS](#) /

> Remote Control RAV491 ZF30320 User Manual for YAMAHA AV Receiver Radio Player HTR-4066 RX-V475 RX-V373 RAV494 RX-V479 RX-V565

JOLGRDWS JOLGRDWS

Remote Control RAV491 ZF30320 User Manual

MODEL: JOLGRDWS RAV491 ZF30320

Brand: JOLGRDWS

1. Introduction

This user manual provides comprehensive instructions for the JOLGRDWS RAV491 ZF30320 remote control. This remote is designed as a replacement or supplementary controller for various YAMAHA AV receivers and radio players, including models HTR-4066, RX-V475, RX-V373, RAV494, RX-V479, and RAV565. It offers dedicated menu navigation buttons and stable performance, ensuring a seamless control experience for your audio-visual equipment.



Figure 1: Front view of the JOLGRDWS RAV491 ZF30320 remote control, showing all buttons and layout.

2. Setup

2.1 Battery Installation

The remote control requires two (2) AAA batteries for operation. Batteries are not included with the remote control.

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Figure 2: Back view of the remote control with the battery compartment open, showing battery placement.

2.2 Initial Use and Pairing

This remote control is designed to work out-of-the-box with compatible YAMAHA AV receivers and radio players. No programming or complex setup is required. Once batteries are installed, the remote is ready for use.

- Point the remote control towards your YAMAHA AV receiver or radio player.
- Press any function button (e.g., Power, Volume Up) to test its operation.
- If the device does not respond, ensure the batteries are correctly inserted and have sufficient charge.

3. Operating Instructions

The remote control features a standard layout for intuitive operation of your YAMAHA AV receiver. Below are descriptions of key button groups and their functions.

3.1 Power and Input Selection

- **SOURCE / RECEIVER:** Used to power on/off the receiver and switch between different input sources.
- **HDMI 1-4, AV 1-4, AUDIO 1-2:** Direct buttons for selecting specific HDMI, AV, or Audio input channels.
- **USB, V-AUX:** Selects USB or auxiliary video/audio inputs.

3.2 Menu Navigation and Control

- **SETUP:** Accesses the main setup menu of the receiver.
- **OPTION:** Displays context-sensitive options for the current function.
- **Arrow Buttons (Up, Down, Left, Right):** Navigate through menus and adjust settings.
- **ENTER:** Confirms selections within menus.
- **RETURN:** Goes back to the previous menu or screen.
- **DISPLAY:** Changes the information displayed on the receiver's screen.

3.3 Volume and Mute

- **VOLUME (+/-):** Increases or decreases the master volume level.
- **MUTE:** Toggles the audio output on and off.

3.4 Scene Selection

- **BD/DVD, TV, CD, RADIO:** These buttons allow for quick selection of pre-configured "SCENE" settings, optimizing audio and video for specific activities.

3.5 Playback Controls

- **HOME:** Returns to the main home screen or menu.
- **Playback Buttons (Play, Pause, Stop, Fast Forward, Rewind, Skip):** Control media playback for connected devices.



Figure 3: Angled view of the remote control, highlighting the ergonomic design and button arrangement.

4. Maintenance

4.1 Cleaning the Remote Control

To maintain the remote control's appearance and functionality, clean it regularly.

- Use a soft, dry cloth to wipe the surface of the remote control.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid excessive moisture.
- Do not use harsh chemicals, solvents, or abrasive cleaning agents, as these can damage the remote's finish or internal components.

4.2 Battery Replacement

Replace batteries when the remote control's response becomes sluggish or it stops functioning. Refer to Section 2.1 for detailed battery installation instructions.

4.3 Storage

When not in use for extended periods, store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. Remove batteries if storing for several months to prevent leakage.

5. Troubleshooting

If you experience issues with your remote control, try the following troubleshooting steps:

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace old or depleted batteries with new AAA batteries.
 - Ensure there are no obstructions between the remote control and the receiver's infrared sensor.
 - Make sure you are within the effective operating range of the remote control.
- **Buttons not working:**
 - Clean the remote control's surface, especially around the buttons, to remove any dirt or debris that might be preventing proper contact.
 - If only specific buttons are not working, the remote might be damaged.
- **Short operating range:**
 - Replace batteries with new ones. Low battery power can reduce the remote's effective range.
 - Ensure the receiver's IR sensor is clean and not obstructed.

6. Specifications

Feature	Detail
Product Name	Remote Control
Model	RAV491 ZF30320 (Compatible with YAMAHA HTR-4066, RX-V475, RX-V373, RAV494, RX-V479, RAV565)
Brand	JOLGRDWS
Material	ABS
Color	One Color (As pictured)
Power Source	2 x AAA Batteries (not included)
Dimensions	1 x 1 x 1 cm (approximate)
Item Weight	50 g (approximate)
Programming Required	No

7. Warranty and Support

Information regarding warranty and customer support for this product is typically provided by the seller or manufacturer at the point of purchase. Please refer to your purchase documentation or contact the seller directly for details on warranty coverage and support options.

For technical inquiries related to your YAMAHA AV receiver or radio player, please consult the original user manual for your YAMAHA device or visit the official YAMAHA support website.



© 2024 JOLGRDWS. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.