

[Manuals.plus](#) /

> [AIKE](#) /

> AIKE Commercial Foam Soap Dispenser and Air Wiper Compact Wall Mount Hand Dryer Bundle User Manual

## AIKE AK1006F & AK2630

# AIKE Commercial Foam Soap Dispenser & Hand Dryer Bundle User Manual

Models: AK1006F (Soap Dispenser) & AK2630 (Hand Dryer)

Brand: AIKE

## INTRODUCTION

---

This user manual provides comprehensive instructions for the installation, operation, and maintenance of your AIKE Manual Commercial Foam Soap Dispenser (Model AK1006F) and AIKE Air Wiper Compact Wall Mount Hand Dryer (Model AK2630). This bundle is designed for multi-faceted use in public and high-traffic commercial environments, offering durability and a modern aesthetic.



Image: The AIKE Commercial Foam Soap Dispenser (left) and the AIKE Air Wiper Compact Wall Mount Hand Dryer (right), both in black, presented as a bundle.

## SAFETY INFORMATION

---

- Read all instructions carefully before installation and operation.
- Ensure the power supply for the hand dryer matches the specifications (AC110V).
- Do not immerse the hand dryer or soap dispenser in water or other liquids.
- Disconnect power to the hand dryer before performing any maintenance or cleaning.
- Use only specialized foaming soap with the foam soap dispenser. Using other types of soap may cause damage or malfunction.
- Keep hands and foreign objects away from the hand dryer's air outlet during operation.
- Installation should be performed by qualified personnel if electrical wiring is involved.

## PRODUCT OVERVIEW

---

### AIKE Manual Commercial Foam Soap Dispenser (Model AK1006F)

This manual foam soap dispenser features a durable ABS plastic construction and a key locking system for security. It has a large 27 oz capacity and dispenses rich, luxurious foam with a single push of a large button.



Image: A hand pressing the large push button on the AIKE Manual Foam Soap Dispenser, with foam being dispensed into the hand.

# 2 OPTIONS FOR MOUNTING

AIKE



Screw and Anchors



Nail-Free Sticker



Image: A collage showing detailed features of the AIKE Manual Foam Soap Dispenser, including its durable ABS plastic, key locking system, and large push button for perfect pour.

## AIKE Air Wiper Compact Wall Mount Hand Dryer (Model AK2630)

The AIKE AK2630 hand dryer is a compact, powerful unit designed for quick and efficient hand drying. It features automatic heating, over-time, and overload protection, ensuring safe and reliable operation. The unit includes "POWER" and "CHECK" indicator lights.



Image: The AIKE Hand Dryer in operation, with blue air streams drying hands placed beneath it. The "POWER" and "CHECK" indicator lights are visible.



Image: A graphic illustrating the "Fast Dry in 10-15s" capability with a hand under the dryer, and "Smart-warm Wind" with red and blue air streams indicating temperature control.

## SETUP

---

### 1. AIKE Manual Commercial Foam Soap Dispenser (Model AK1006F) Installation

1. **Choose Location:** Select a suitable wall location, ensuring it is at an appropriate height for users and away from direct water spray.
2. **Mounting Options:**
  - **Screw and Anchors:** Mark the drilling points on the wall using the dispenser as a template. Drill holes, insert anchors, and secure the dispenser with screws.
  - **Nail-Free Sticker:** Ensure the wall surface is clean and dry. Apply the nail-free sticker firmly to the back of the dispenser and press the dispenser against the wall for the recommended time to ensure adhesion.
3. **Fill with Soap:** Unlock the dispenser using the provided key. Open the top cover and carefully pour specialized

foaming soap into the reservoir. Close the cover and lock it.

# DETAIL FEATURES

- ① Durable ABS Plastic
- ② Key Locking System
- ③ Large Button One Push, Perfect Pour

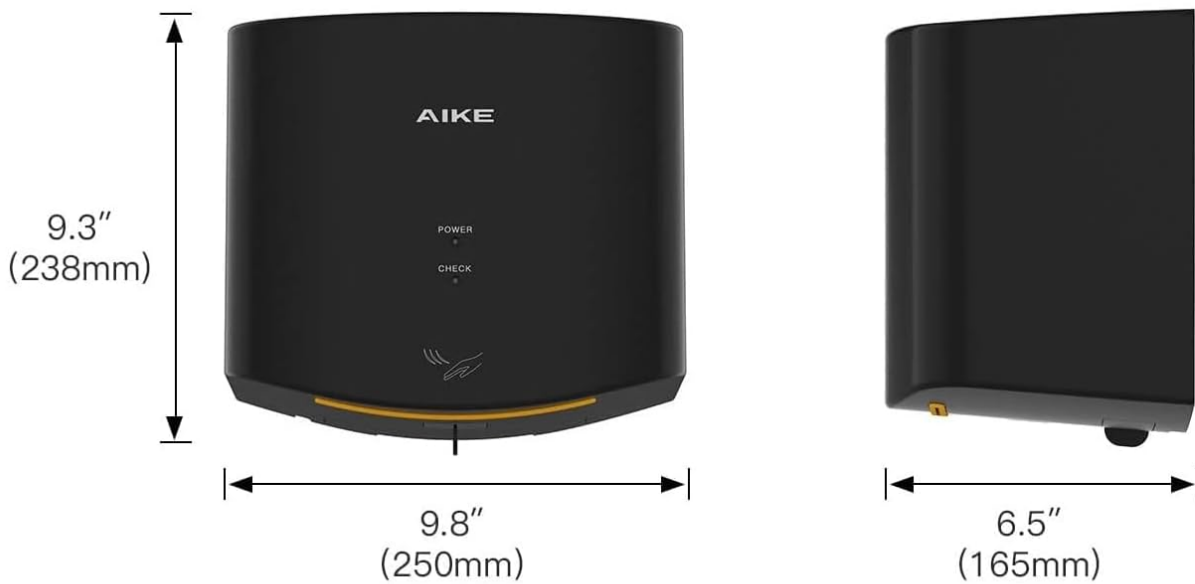


Image: A diagram illustrating two mounting options for the AIKE Manual Foam Soap Dispenser: using screws and anchors, or a nail-free sticker. Dimensions are also shown.

## 2. AIKE Air Wiper Compact Wall Mount Hand Dryer (Model AK2630) Installation

1. **Choose Location:** Select a suitable wall location, ensuring adequate space for hand drying and proper air circulation.
2. **Mounting:** Mark drilling points on the wall. Drill holes, insert wall anchors, and secure the hand dryer firmly to the wall using appropriate screws.
3. **Power Connection:** Plug the hand dryer's power cord into a standard AC110V electrical outlet. Ensure the outlet is properly grounded.

## PARAMETERS / AK2630S



Model	AK2630S	Material	ABS
Volatge	AC110V	Frequency	50Hz
Input	1400W	Power Cord	60 inch
Air velocity	100.8m <sup>3</sup> /h	Weight	8.2 lbs
Size	9.3"H x 9.8"W x 6.5"D	Noise Level	67 db

Feature: Automatic heating, over time & overload protection

Image: A diagram showing the dimensions of the AIKE Hand Dryer (9.3" H x 9.8" W x 6.5" D) and a table of its technical parameters.

## OPERATING INSTRUCTIONS

### 1. AIKE Manual Commercial Foam Soap Dispenser (Model AK1006F)

1. Place your hand under the dispenser's nozzle.
2. Press the large "PUSH" button firmly to dispense foam soap into your palm.
3. Rub hands together thoroughly and rinse with water.

### 2. AIKE Air Wiper Compact Wall Mount Hand Dryer (Model AK2630)

1. Ensure the hand dryer is plugged in and the "POWER" indicator light is red.
2. Place your hands under the air outlet. The sensor will detect your hands, and the "CHECK" indicator light will turn green, activating the dryer.
3. Move your hands slowly back and forth under the air stream for optimal drying. The dryer is designed for fast drying in 10-15 seconds.

4. Remove your hands from the sensor area to stop the dryer. The "CHECK" light will turn off.

## MAINTENANCE

---

- **Regular Cleaning:** Wipe down the exterior surfaces of both the soap dispenser and hand dryer with a soft, damp cloth and mild, non-abrasive cleaner. Do not use harsh chemicals or abrasive materials.
- **Soap Dispenser Refill:** Refill the soap dispenser when the soap level is low. Always use specialized foaming soap.
- **Hand Dryer Filter (if applicable):** Periodically check and clean the air filter (if accessible) to ensure optimal performance and air quality. Refer to the product diagram for filter location.
- **Power Disconnection:** Always unplug the hand dryer from the power outlet before cleaning or performing any maintenance.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Hand Dryer Not Activating	No power; Sensor obstructed; Hands not positioned correctly.	Check power connection; Clear any obstructions from sensor; Reposition hands directly under the sensor.
Hand Dryer Air Weak	Blocked air intake/outlet; Dirty air filter.	Ensure air vents are clear; Clean or replace air filter.
Soap Dispenser Not Dispensing	Empty reservoir; Clogged nozzle; Incorrect soap type.	Refill with specialized foaming soap; Clean the nozzle; Ensure only foaming soap is used.
Soap Dispenser Leaking	Overfilled; Damaged seal.	Do not overfill; Contact customer support if seal is damaged.

## SPECIFICATIONS

---

### AIKE Air Wiper Compact Wall Mount Hand Dryer (Model AK2630)

**Model:** AK2630S

**Material:** ABS

**Voltage:** AC110V

**Frequency:** 50Hz

**Input:** 1400W

**Power Cord:** 60 inch

**Air Velocity:** 100.8m<sup>3</sup>/h

**Weight:** 8.2 lbs

**Noise Level:** 67 db

**Size:** 9.3"H x 9.8"W x 6.5"D

**Features:** Automatic heating, over time & overload protection

### AIKE Manual Commercial Foam Soap Dispenser (Model AK1006F)

**Model:** AK1006F

**Material:** Plastic

**Capacity:** 27 oz

**Features:** Durable ABS Plastic, Key Locking System, Large Button One Push, Perfect Pour

## WARRANTY AND SUPPORT

---

AIKE products come with a manufacturer warranty. For detailed warranty information and support, please refer to the AIKE store front page on Amazon. We are committed to providing assistance and ensuring your satisfaction with our products.

For further assistance, please visit the official AIKE Store:[AIKE Store on Amazon](#)

