

LEXiBOOK RL800AV1

LEXiBOOK Marvel Avengers Nightlight Alarm Clock RL800AV1 User Manual

1. INTRODUCTION

Thank you for choosing the LEXiBOOK Marvel Avengers Nightlight Alarm Clock, Model RL800AV1. This device combines the functionality of an alarm clock with a captivating nightlight feature, inspired by the heroic universe of the Avengers. Designed for ease of use, it offers personalized wake-up experiences with various sounds and melodies, a backlit LCD screen, and a convenient snooze function. This manual provides detailed instructions to help you set up and operate your new alarm clock.



Figure 1: Front view of the LEXIBOOK Marvel Avengers Nightlight Alarm Clock.

2. SAFETY INFORMATION

Please read and understand all safety instructions before using this product. Keep this manual for future reference.

- **Battery Safety:** This device requires 3 x AA/LR6 batteries (not included). Ensure batteries are inserted with correct polarity (+/-). Do not mix old and new batteries, or different types of batteries. Remove exhausted batteries promptly. Do not dispose of batteries in fire.
- **Choking Hazard:** Keep small parts and packaging materials away from children to prevent choking.
- **Placement:** Place the alarm clock on a stable, flat surface. Avoid placing it near heat sources, direct sunlight, or in excessively humid environments.
- **Cleaning:** Clean the device with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.

3. PACKAGE CONTENTS

Upon unpacking, please ensure all items are present:

- 1 x LEXiBOOK Marvel Avengers Nightlight Alarm Clock (Model RL800AV1)
- 1 x User Manual

4. PRODUCT OVERVIEW

Familiarize yourself with the various parts and controls of your alarm clock:

4.1 Front Panel

- **LCD Screen:** Displays time, alarm status, and other indicators.
- **Volume/Light Buttons (+/-):** Adjusts volume, sets time/alarm values, and controls LCD backlight.
- **Sound Preview Button:** Activates a preview of the selected alarm sound.

4.2 Top Panel

- **Captain America Figure:** Functions as the snooze button and activates the nightlight.

4.3 Rear Panel

- **Time Set Button (Clock Icon):** Used to enter time setting mode.
- **Alarm Set Button (Bell Icon):** Used to enter alarm setting mode.
- **Battery Compartment:** Holds 3 x AA/LR6 batteries.



Figure 2: Rear view of the alarm clock, highlighting control buttons.

5. SETUP

5.1 Battery Installation

1. Locate the battery compartment on the rear of the alarm clock.
2. Open the battery compartment cover.
3. Insert 3 x AA/LR6 batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

5.2 Setting Current Time

1. Press and hold the **Time Set Button** (clock icon) on the rear panel until the hour digits start flashing.

2. Use the **+/- Buttons** on the front panel to adjust the hour.
3. Press the **Time Set Button** again to switch to minute adjustment. The minute digits will flash.
4. Use the **+/- Buttons** to adjust the minutes.
5. Press the **Time Set Button** a third time to confirm the time and exit time setting mode.

6. OPERATING INSTRUCTIONS

6.1 Setting the Alarm

1. Press and hold the **Alarm Set Button** (bell icon) on the rear panel until the alarm hour digits start flashing.
2. Use the **+/- Buttons** on the front panel to adjust the alarm hour.
3. Press the **Alarm Set Button** again to switch to alarm minute adjustment. The alarm minute digits will flash.
4. Use the **+/- Buttons** to adjust the alarm minutes.
5. Press the **Alarm Set Button** a third time to confirm the alarm time and exit alarm setting mode. The alarm icon will appear on the LCD screen, indicating the alarm is active.

6.2 Selecting Alarm Sounds and Melodies

1. While in alarm setting mode (after setting minutes), press the **Alarm Set Button** again to cycle through the 6 available Avengers-inspired sounds and melodies.
2. Each press will play a preview of the sound. Stop on your desired sound.
3. Press the **Alarm Set Button** one more time to confirm your selection and exit.

6.3 Adjusting Alarm Volume

1. While in alarm setting mode (after selecting the melody), press the **Alarm Set Button** again to enter volume adjustment.
2. Use the **+/- Buttons** on the front panel to increase or decrease the alarm volume.
3. Press the **Alarm Set Button** one more time to confirm the volume and exit.

6.4 Snooze Function

When the alarm sounds, press down on the **Captain America Figure** on top of the clock to activate the snooze function. The alarm will temporarily stop and sound again after a few minutes.

6.5 Nightlight Function

To activate the nightlight, press down on the **Captain America Figure**. The figure will illuminate, providing a soft glow. Press again to turn it off.



Figure 3: Captain America figure illuminated as a nightlight.

6.6 LCD Screen Backlight

You can choose to leave the LCD screen backlight on or off during the night for a glare-free experience. Refer to the specific instructions in the full manual for detailed steps on this setting.

7. MAINTENANCE

- **Cleaning:** Wipe the alarm clock with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- **Battery Replacement:** When the low battery indicator appears on the LCD screen, replace all 3 x AA/LR6 batteries with new ones.
- **Storage:** If not in use for an extended period, remove the batteries to prevent leakage and store the device in a cool, dry place.

8. TROUBLESHOOTING

If you encounter any issues with your alarm clock, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Display is blank or dim.	Low or dead batteries. Incorrect battery installation.	Replace batteries with new ones. Check battery polarity.
Alarm does not sound.	Alarm not set or deactivated. Volume too low.	Ensure alarm is set and the alarm icon is visible on the LCD. Increase alarm volume.
Nightlight not working.	Low batteries. Feature not activated.	Replace batteries. Press the Captain America figure to activate.
Buttons are unresponsive.	Low batteries. Temporary software glitch.	Replace batteries. Remove batteries for 1 minute and reinsert to reset.

9. SPECIFICATIONS

- **Brand:** LEXiBOOK
- **Model:** RL800AV1

- **Display Type:** Digital LCD
- **Power Source:** 3 x AA/LR6 batteries (not included)
- **Product Dimensions:** 3.5"W x 7.1"H
- **Item Weight:** 0.49 Pounds
- **Special Features:** Nightlight, Alarm, Snooze, 6 Sounds/Melodies, Backlit LCD Screen, Low Battery Indicator
- **Material:** Plastic

10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official LEXIBOOK website. Keep your proof of purchase for any warranty claims.