

[Manuals.plus](#) /

› [ODK](#) /

› ODK Reversible L-Shaped Gaming Desk User Manual

ODK ZJZ-SBWJCZ

ODK Reversible L-Shaped Gaming Desk User Manual

Model: ZJZ-SBWJCZ

INTRODUCTION

Thank you for choosing the ODK Reversible L-Shaped Gaming Desk. This manual provides essential information for the assembly, operation, and maintenance of your new desk. Designed for both gaming and work, this desk offers a flexible layout, ample storage, and integrated power solutions to enhance your experience.



Figure 1: ODK L-Shaped Gaming Desk in a typical setup.

SAFETY INFORMATION

- Secure the table to the wall using the provided anti-tip kit to prevent it from tipping over.
- Do not exceed the weight limit of the desk. Refer to the specifications section for details.
- Ensure all electrical connections are secure and follow local electrical safety guidelines.
- Keep liquids away from electrical outlets and devices.

SETUP AND ASSEMBLY

The ODK L-Shaped Gaming Desk is designed for straightforward assembly. All necessary tools are typically included. Please follow these general steps:

1. **Unpack and Verify Components:** Carefully unpack all parts and compare them with the included parts list to ensure nothing is missing or damaged.
2. **Identify Desk Orientation:** Decide whether you want the longer side of the L-shape on the left or right. The desk is reversible to suit your space.
3. **Assemble Frame:** Begin by assembling the metal frame components according to the detailed instructions provided

in your package. Ensure all screws are finger-tight before final tightening.

4. **Attach Desktop Panels:** Secure the desktop panels to the assembled frame. Pay attention to the alignment for a seamless surface.
5. **Install Shelves:** Attach the storage shelves. Note that the height of these shelves is adjustable, allowing you to customize your storage space.
6. **Connect Power Strip:** Integrate the built-in power strip into its designated slot. Ensure the power cord is routed safely and is not pinched.
7. **Final Tightening:** Once all components are in place, systematically tighten all screws to ensure the desk is stable and secure.
8. **Install Anti-Tip Kit:** For safety, secure the desk to the wall using the anti-tip hardware provided.

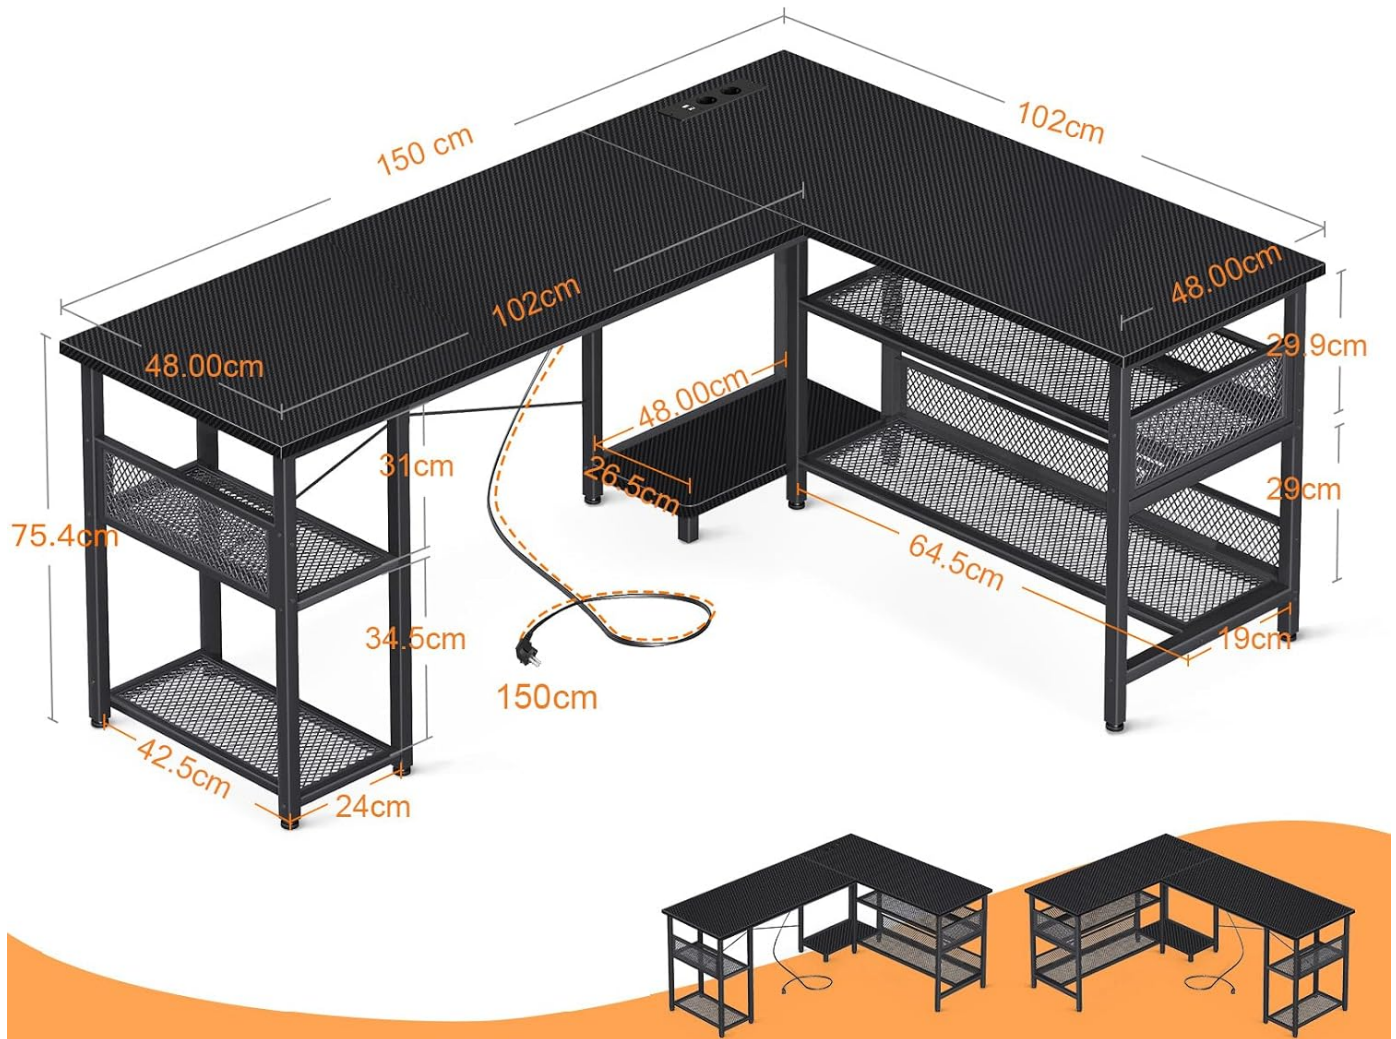


Figure 2: Desk dimensions for planning your setup.



Figure 3: The desk can be configured with the L-shape on either side.

OPERATING INSTRUCTIONS

Your ODK L-Shaped Gaming Desk is designed for versatile use, providing ample space for your gaming rig, multiple monitors, and work essentials.

Using the Integrated Power Supply

The desk features a built-in power strip with 2 standard AC outlets and 2 USB ports (5V/2.1A) for convenient charging of your electronic devices. Simply plug the desk's main power cord into a wall outlet. You can then plug your monitors, gaming consoles, phone chargers, and other peripherals directly into the desk's integrated outlets.



Barre d'alimentation encastrée

| 2 prises CA et 2 ports USB



2 prises de courant
alternatif 220-250V/15A



2 ports USB
5V/2.1A



Cordon d'alimentation
200CM



Figure 4: Integrated power strip for convenient device charging.

Utilizing Storage Space

The desk includes generous shelving units. These shelves are ideal for storing gaming accessories, books, office supplies, and other items. The height of the shelves can be adjusted during assembly to accommodate items of various sizes, optimizing your storage and organization.



Un vaste espace de rangement

| Parfait pour organiser vos objets



Figure 5: Adjustable shelves provide versatile storage options.



Figure 6: The desk provides a spacious work surface for various activities.

MAINTENANCE

To ensure the longevity and appearance of your ODK L-Shaped Gaming Desk, follow these maintenance guidelines:

- **Cleaning:** Wipe the desk surface with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- **Spills:** Immediately wipe up any spills to prevent staining or damage to the desktop material.
- **Tighten Fasteners:** Periodically check and tighten all screws and bolts to maintain stability and prevent wobbling.
- **Cable Management:** Regularly inspect the power cord and connections for any signs of wear or damage. Ensure cables are neatly managed to prevent tripping hazards and damage.

TROUBLESHOOTING

If you encounter any issues with your ODK L-Shaped Gaming Desk, refer to the following common troubleshooting tips:

Problem	Possible Cause	Solution
Desk is wobbly	Loose screws; uneven floor; improper assembly	Ensure all screws are fully tightened. Adjust leveling feet if present. Review assembly instructions.

Problem	Possible Cause	Solution
Integrated power strip not working	Desk not plugged in; circuit breaker tripped; faulty connection	Check if the desk's main power cord is securely plugged into a working wall outlet. Check your home's circuit breaker. Ensure all internal connections to the power strip are secure.
Missing parts upon arrival	Packaging error; transit damage	Contact ODK customer support immediately with your order details and a list of missing parts.

SPECIFICATIONS

Feature	Detail
Brand	ODK
Model Number	ZJZ-SBWJCZ
Color	Carbon Black
Product Dimensions (L x W x H)	150 x 102 x 75.4 cm
Item Weight	19.9 Kilograms
Special Feature	Integrated USB Outlet
Finish Type	Laminated
Mounting Type	Corner Mount
Included Components	2 Outlets and 2 USB Ports
Product Category	Commercial

WARRANTY AND SUPPORT

ODK is committed to providing excellent customer support. If you have any questions regarding your L-shaped desk, including assembly, operation, or warranty claims, please do not hesitate to contact us. We aim to respond to all inquiries within 24 hours.

For assistance, please refer to the contact information provided with your purchase or visit the official ODK website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DXKRFNGV>

More documents and user manuals: <https://manuals.plus/>