

[Manuals.plus](#) /

› [QPLAY](#) /

› QPLAY Comfo Max T70E 7-in-1 Folding Tricycle User Manual

QPLAY T70E

QPLAY Comfo Max T70E 7-in-1 Folding Tricycle User Manual

Model: T70E | Brand: QPLAY

1. IMPORTANT SAFETY INFORMATION

Please read this entire manual before assembly and use of the QPLAY Comfo Max T70E Tricycle. Failure to follow these instructions could result in serious injury to your child.

- **Adult Supervision Required:** Always supervise your child when using the tricycle. Never leave a child unattended.
- **Age and Weight Limits:** Suitable for children aged 10 months to 6 years. Maximum load capacity is 25 kg (55 lbs). Do not exceed this weight limit.
- **Harness Use:** Always secure your child with the 5-point safety harness. Ensure it is adjusted snugly.
- **Protective Gear:** Ensure your child wears a helmet and other protective gear (e.g., knee pads, elbow pads) when riding in cycling modes.
- **Safe Environment:** Use on flat, even surfaces away from traffic, steep inclines, stairs, swimming pools, and other hazards.
- **Brake System:** Always engage the linked-brake system when the tricycle is stationary or when loading/unloading your child.
- **Regular Checks:** Before each use, check that all fasteners are securely tightened and that no parts are damaged or missing.
- **Folding Mechanism:** Keep children clear of the tricycle when folding or unfolding to prevent pinching injuries.

2. PRODUCT OVERVIEW

The QPLAY Comfo Max T70E is a versatile 7-in-1 folding tricycle designed to adapt to your child's growth from 10 months to 6 years. It offers multiple modes for comfort, safety, and convenience.



Image 2.1: The QPLAY Comfo Max T70E 7-in-1 Folding Tricycle, shown in Coffee color with canopy and pushbar attached.

Key Features:

- **7-in-1 Transforming Design:** Adapts through 7 growth stages for children aged 10 to 72 months.
- **Swivel & Reclining High-Back Seat:** Provides ergonomic comfort and flexibility, allowing the seat to face forward or backward.
- **Adjustable Backrest:** Enhances comfort for naps and play.
- **Extendable UV Canopy:** Protects your child from sun exposure.
- **5-Point Safety Harness:** Ensures secure rides with top-tier safety features.
- **Shock-Absorbing EVA Wheels:** 11" front and 9" rear wheels for smooth rides on various terrains.
- **Linked-Brake System:** Reliable stopping power for enhanced safety.

- **Height-Adjustable Pushbar:** Offers easy parent control and smooth transitions between riding modes.
- **Foldable Handlebar with Clutch:** Allows for easy folding and parent steering control.
- **Detachable Storage Bag:** Convenient for carrying essentials.



Image 2.2: Visual representation of key features: 360° seat rotation, foldable frame, detachable backpack, and cup holder.

3. SETUP AND ASSEMBLY

The QPLAY Comfo Max T70E requires assembly. Please refer to the detailed assembly instructions provided in the physical manual included with your product for step-by-step guidance. Ensure all components are present and undamaged before beginning assembly.

Included Components: 1 Unit (Tricycle components)

Tools Required: No special tools are typically required for assembly, as most connections are designed for quick, tool-free setup.

Initial Inspection:

- Unpack all parts and verify against the parts list in your physical manual.
- Check for any signs of damage during shipping. Do not use if damaged.
- Ensure all protective packaging materials are removed.

4. OPERATING INSTRUCTIONS

4.1. 7-in-1 Transformation Modes

The QPLAY Comfo Max T70E adapts to your child's development through seven distinct modes. Transitioning between modes typically involves adjusting or removing components like the pushbar, canopy, safety bar, and pedals.



Image 4.1: Illustration of the 7-in-1 transformation modes, adapting from 10 months to 72 months.

1. **10-18 Months: Face-to-Face Interactive Push Mode:** Seat faces parent, child is secured, parent pushes.
2. **12-18 Months: Regular Push Mode (Stage 1):** Seat faces forward, child secured, parent pushes.
3. **12-18 Months: Regular Push Mode (Stage 2):** Similar to Stage 1, with minor adjustments.
4. **18-24 Months: Auxiliary Cycling Mode:** Child can begin to use pedals, parent still controls steering with pushbar.
5. **24-36 Months: Cycling Mode (Stage 1):** Child steers and pedals, parent pushbar may still be attached for assistance.
6. **24-36 Months: Cycling Mode (Stage 2):** More independent cycling, pushbar may be removed.
7. **36-72 Months: Cycling Mode (Stage 3):** Fully independent tricycle, all parent-assist components removed.

Refer to your physical manual for specific instructions on how to transition between each mode.

4.2. Seat Rotation and Recline

The seat can rotate 360 degrees, allowing your child to face forward or backward. It also features an adjustable recline for comfort.



360° Seat Rotating

rotating seat, face forward or backward. Adjustable backrest.

7 (in) 1

7-in-1 Trike.



10-18M

Face to face
interactive
push mode.



12-18M

Regular
push mode.



12-18M

Regular
push mode.



18-24M

Auxiliary
cycling mode.



24-36M

Cycling mode.

24-36M

Cycling mode.

36-72M

Cycling mode.

Image 4.2: The seat can be rotated 360 degrees to face forward or backward, with an adjustable backrest.

- **To Rotate the Seat:** Locate the seat rotation lever or button (consult your manual for exact location). Engage the mechanism, rotate the seat to the desired direction, and ensure it locks securely into place.
- **To Recline the Backrest:** Use the recline adjustment mechanism, typically a lever or strap behind the seat, to set the desired recline angle.

4.3. Pushbar and Steering Control

The height-adjustable pushbar allows parents to steer the tricycle. The front wheel features a clutch mechanism to disengage child steering when parent control is desired.

- **Adjusting Pushbar Height:** Press the adjustment buttons on the sides of the pushbar and slide it to the desired height. Release to lock.
- **Engaging/Disengaging Front Wheel Clutch:** Locate the clutch button or lever on the front wheel. Engage it to allow parent steering (child's pedals will spin freely) or disengage it for child steering.

4.4. Folding and Portability

The tricycle features a foldable frame for compact storage and transport.



Image 4.3: The tricycle's foldable design allows for easy storage and portability, fitting into a car trunk.

- **Folding Procedure:** Consult your physical manual for the specific steps to fold the tricycle. Ensure all detachable parts (canopy, storage bag) are removed first.
- **Storage:** Store the folded tricycle in a dry, safe place away from direct sunlight and extreme temperatures.

5. MAINTENANCE

- **Cleaning:** Clean the tricycle regularly with a damp cloth and mild soap. Do not use abrasive cleaners or solvents.
- **Fabric Parts:** The canopy and seat fabrics can be spot cleaned. Refer to the care labels for specific washing instructions if removable.

- **Wheel Maintenance:** Check wheels periodically for wear and tear. Ensure they spin freely and are free of debris.
- **Fasteners:** Regularly check all screws, bolts, and other fasteners to ensure they are tight. Tighten as necessary.
- **Storage:** When not in use, store the tricycle in a clean, dry place to prevent rust and damage.

6. TROUBLESHOOTING

- **Tricycle does not steer correctly:**
 - Check if the front wheel clutch is engaged/disengaged as desired.
 - Ensure the pushbar is securely attached and locked in place.
 - Inspect the steering mechanism for any obstructions or damage.
- **Wheels are stiff or noisy:**
 - Check for debris (e.g., hair, string) wrapped around the axles.
 - Ensure wheels are properly attached and not rubbing against the frame.
- **Folding mechanism is difficult to operate:**
 - Ensure all safety locks are disengaged as per the folding instructions.
 - Check for any obstructions preventing the frame from folding smoothly.
- **Harness is difficult to adjust:**
 - Ensure straps are not twisted.
 - Refer to the manual for correct harness adjustment procedure.

If you encounter issues not listed here or if troubleshooting steps do not resolve the problem, please contact customer support.

7. SPECIFICATIONS

Detachable & Portable



Image 7.1: Detailed product parameters and dimensions.

Feature	Detail
Model Number	T70E
Manufacturer Recommended Age	10 months - 6 years
Max Load	25 kg
Product Dimensions (LxWxH)	108 x 53 x 108 cm
Item Weight	10.2 kg

Feature	Detail
Material Type(s)	Metal, Plastic, Polyester
Assembly Required	Yes
Batteries Required	No
Country of Origin	Germany

8. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or contact the retailer where the product was purchased. QPLAY GmbH is the manufacturer.

If you have any questions, require assistance with assembly, or need to report a defect, please contact QPLAY customer support or your local distributor. Contact details can typically be found on the product packaging or the manufacturer's official website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question