

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [WIKICO](#) /

› [WIKICO 6K Digital Camera User Manual](#)

WIKICO WD02

WIKICO 6K Digital Camera User Manual

Model: WD02

INTRODUCTION

Thank you for purchasing the WIKICO 6K Digital Camera. This camera is designed for both photography and video enthusiasts, offering 6K recording and 64MP photos with advanced features like 16X digital zoom, a 3-inch 180° flip screen, and Wi-Fi connectivity. This manual provides detailed instructions to help you get started and make the most of your new camera.

SAFETY INFORMATION

- Do not expose the camera to extreme temperatures, humidity, or dust.
- Avoid dropping or subjecting the camera to strong impacts.
- Keep the camera and accessories out of reach of children.
- Use only WIKICO approved batteries and charging accessories.
- Do not attempt to disassemble or modify the camera. This will void the warranty.
- Clean the camera body with a soft, dry cloth. For the lens, use a specialized lens cleaning cloth.

PACKAGE CONTENTS

Please check that all the following items are included in your package:

Digital Camera Product List



Image: The WIKICO 6K Digital Camera and its complete set of accessories, including lenses, batteries, charger, and cables.

- WIKICO 6K Digital Camera (1)
- 1500mAh Rechargeable Batteries (2)
- Dual Battery Charger (1)
- 32GB TF Card (1)
- USB Cable (1)
- Power Adapter (1)
- Wide-Angle Lens (1)
- Macro Lens (1)
- Wrist Strap (1)
- Instruction Manual (1)

PRODUCT OVERVIEW

Familiarize yourself with the camera's components and controls.

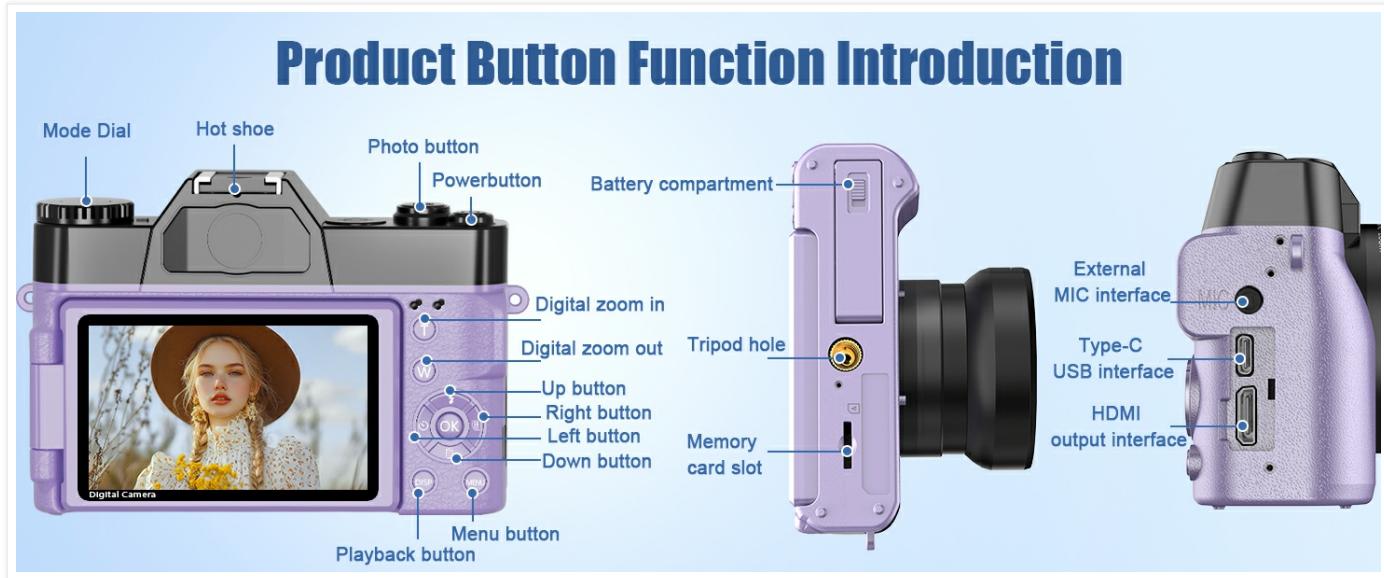


Image: Detailed diagram showing the various buttons, ports, and features of the WIKICO 6K Digital Camera, including the mode dial, hot shoe, power button, battery compartment, digital zoom controls, tripod hole, memory card slot, USB interface, HDMI output, and external MIC interface.

Camera Components:

- Mode Dial:** Selects shooting modes (Photo, Video, Time-lapse, etc.).
- Hot Shoe:** For attaching external accessories like microphones or flashes (not included).
- Power Button:** Turns the camera on or off.
- Shutter Button:** Press halfway to autofocus, fully to capture a photo or start/stop video recording.
- Battery Compartment:** Houses the rechargeable battery.
- Digital Zoom In/Out:** Adjusts digital zoom level.
- Tripod Hole:** For mounting the camera on a tripod.
- Memory Card Slot:** Insert the TF card here.
- Type-C USB Interface:** For charging and data transfer.
- HDMI Output Interface:** For connecting to an external display.
- External MIC Interface:** For connecting an external microphone.
- Flip Screen:** 3-inch LCD screen that can rotate 180 degrees.
- Built-in Fill Light:** Provides additional illumination in low-light conditions.

SETUP

1. Battery Installation and Charging

The camera comes with two 1500mAh rechargeable batteries. Ensure batteries are fully charged before first use.

1. Open the battery compartment cover on the bottom of the camera.
2. Insert a charged battery, ensuring the correct orientation as indicated inside the compartment.
3. Close the battery compartment cover securely.
4. To charge, insert the battery into the dual battery charger or connect the camera directly via the USB cable to a power adapter or power bank. The charging indicator will show the charging status.

Multiple fast charging options

Comes with 2 rechargeable batteries and a charging stand for hassle-free charging, or you can charge the camera directly via USB cable using a power socket or power bank.



Image: Illustration of the camera being charged directly via USB cable and batteries being charged in the dual battery charger.

2. Memory Card Installation

A 32GB TF card is included. The camera supports TF cards up to 128GB.

1. Locate the memory card slot on the side of the camera.
2. Insert the TF card with the metal contacts facing the front of the camera until it clicks into place.
3. To remove, gently press the card until it pops out.

3. Attaching Lenses

The camera comes with a detachable 52mm wide-angle lens and a macro lens.

1. Align the lens with the camera's lens mount.
2. Gently twist the lens clockwise until it locks into place.
3. To remove, twist counter-clockwise and detach.

OPERATING INSTRUCTIONS

1. Powering On/Off

Press and hold the Power button to turn the camera on or off.

2. Basic Photography

Upgraded Spin Digital Dial

Multi-function & Easy to Use for Beginner Photography



Image: Close-up of the camera's mode dial, illustrating various shooting modes such as photo, video, time-lapse, continuous shooting, and self-timer.

- **Selecting Modes:** Rotate the Mode Dial on top of the camera to select between Photo Mode, Video Mode, Time-lapse, and other options.
- **Autofocus:** In Photo Mode, press the Shutter button halfway down. The camera will automatically focus on the subject.
- **Capturing Photos:** Once focused, press the Shutter button fully to take a picture.
- **Digital Zoom:** Use the Digital Zoom In/Out buttons to adjust the 16X digital zoom.

Innovative 64MP Autofocus Camera

Press the Shutter halfway to autofocus for sharper and clear images



Image: Comparison showing the effect of autofocus, with a clear, sharp image on the left and a blurred image on the right, demonstrating the camera's autofocus capability.

16x Digital Zoom

easily capture distant scenes, magnify details, and maintain clear image quality.



Image: Three images demonstrating the 16x digital zoom capability, showing a subject at 4x, 8x, and 16x magnification.

3. Video Recording

- Switch the Mode Dial to Video Mode.
- Press the Shutter button to start recording. Press again to stop.
- **Pause Function:** During recording, press the OK button to pause the video. Press again to resume.
- **Loop Recording:** This feature allows the camera to continuously record, overwriting the oldest files when the memory card is full. Enable this in the camera settings if desired.
- **Record While Charging:** The camera supports recording while connected to a power source via USB, ensuring extended recording times.



Image: The WIKICO 6K Digital Camera displaying a video recording on its flip screen, with a person in the background, highlighting its video capabilities.

4. Using the 180° Flip Screen

The 3-inch LCD screen can be flipped 180 degrees, making it ideal for vlogging and self-portraits.

- Gently pull the screen outwards and rotate it to your desired angle.
- When the screen is facing forward, the camera automatically enters selfie mode.

5. Webcam Functionality

Connect the camera to your computer via the USB cable to use it as a webcam for live streaming, video calls, or online meetings.

1. Connect the camera to your computer using the provided USB cable.
2. Select 'Webcam Mode' on the camera's screen if prompted.
3. Your computer should recognize the camera as a webcam. Select it in your video conferencing or streaming software.



Image: A person using the WIKICO 6K Digital Camera as a webcam connected to a laptop, demonstrating its use for live streaming or video calls.

6. Applying Filters and Beauty Mode

Enhance your photos and videos with built-in filters and the beauty mode.

- **Filters:** Navigate to the camera's menu and select 'Filters' to browse and apply various artistic filter styles.
- **Beauty Mode:** Activate the 'Beauty Mode' in the settings to automatically enhance portraits for a refined and flawless look.

21 Filter Styles

Choose freely and enjoy the options



Image: Examples of various filter styles available on the camera, including Black and White, Negative, Nostalgia, Warm, Cool, and Bright.

Smart Beauty Mode: Refined & Flawless Look

Powered by advanced facial recognition technology, it intelligently enhances skin texture and facial proportions, creating a radiant and three-dimensional effect. Every selfie looks more polished and sophisticated!



Image: A side-by-side comparison of a portrait 'pre-facialisation' and 'after beautifying' using the camera's Smart Beauty Mode.

7. Advanced Shooting Modes

The camera offers several advanced shooting modes for various scenarios:

- **Continuous Shooting:** Captures a rapid sequence of photos.
- **Timer:** Sets a delay before taking a photo (e.g., 3s, 5s, 10s).
- **Auto Shooting:** Automatically takes photos at set intervals.
- **Single Shot:** Takes one photo per shutter press.
- **Time-lapse Video:** Records frames at set intervals to create a sped-up video.
- **Slow Motion:** Records video at a higher frame rate for slow-motion playback.

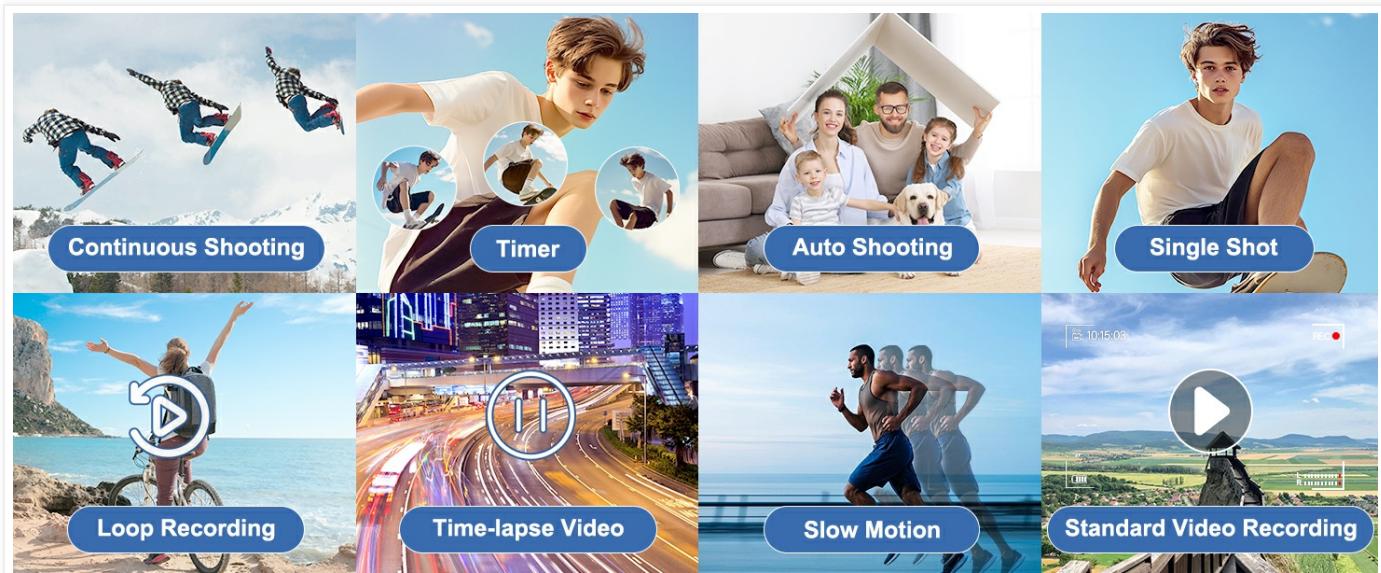


Image: A collage of images demonstrating different shooting modes: Continuous Shooting, Timer, Auto Shooting, Single Shot, Loop Recording, Time-lapse Video, Slow Motion, and Standard Video Recording.

8. Wi-Fi Connectivity and Data Transfer

The built-in Wi-Fi function allows for easy transfer of photos and videos to your smartphone or computer.

1. Enable Wi-Fi in the camera's settings.
2. On your smartphone, connect to the camera's Wi-Fi network (SSID and password will be displayed on the camera screen).
3. Use the dedicated camera app (if available, check product documentation for app name) to browse, download, and share your media.
4. Alternatively, connect the camera to a computer via USB cable for direct file transfer.



Image: The camera connected to a laptop via USB cable and also showing a Wi-Fi signal icon, illustrating both wired and wireless data transfer options.

MAINTENANCE

- **Cleaning the Camera Body:** Use a soft, lint-free cloth to wipe the camera body. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals or solvents.
- **Cleaning the Lens:** Use a lens brush to remove dust, then gently wipe with a microfiber lens cleaning cloth. For smudges, use a specialized lens cleaning solution applied to the cloth, not directly to the lens.

- **Cleaning the Screen:** Use a soft, dry microfiber cloth. Avoid pressing too hard.
- **Storage:** When not in use for extended periods, remove the battery and store the camera in a cool, dry place, away from direct sunlight and extreme temperatures. Use a desiccant packet if storing in a humid environment.
- **Battery Care:** Store batteries in a cool, dry place. If not used for a long time, charge and discharge them periodically to maintain battery health.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not turn on.	Battery is dead or not inserted correctly.	Charge the battery or reinsert it correctly.
Cannot take photos/videos.	Memory card is full, locked, or not inserted.	Insert a TF card, check if it's locked, or delete some files.
Images are blurry.	Lens is dirty; camera not focused; insufficient light.	Clean the lens; ensure autofocus is engaged; use the built-in fill light or shoot in better lighting.
Wi-Fi connection fails.	Incorrect password; camera Wi-Fi not enabled.	Verify password; ensure Wi-Fi is enabled on camera and device.
Short battery life.	Battery not fully charged; frequent use of power-intensive features.	Ensure battery is fully charged; reduce screen brightness; limit continuous video recording.

SPECIFICATIONS

Feature	Specification
Brand	WIKICO
Model Name	WX02-6K
Model Number	WD02
Photo Sensor Resolution	64 MP
Video Resolution	6144 x 3160 (6K)
Optical Zoom	1x
Digital Zoom	16x
Screen Size	3 Inches (180° Flip Screen)
Connectivity Technology	Wi-Fi, USB Type-C, HDMI
Storage Media	TF Card (up to 128GB, 32GB included)
Battery Type	Lithium Ion Rechargeable (2x 1500mAh included)
Supported File Format	JPEG, MP4

Feature	Specification
Image Stabilization	Digital
Lens Type	Wide Angle, Macro (52mm)
Item Weight	611 Grams
Color	Purple



WARRANTY AND SUPPORT

WIKICO products are designed for reliability and performance. For warranty information, please refer to the warranty card included in your product packaging or visit the official WIKICO website. If you encounter any issues or have questions not covered in this manual, please contact WIKICO customer support through the contact information provided on our website or your purchase platform.

Online Support: For the latest FAQs, software updates, and additional resources, please visit the WIKICO official support page.



Related Documents - WD02

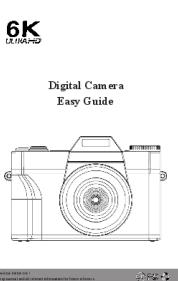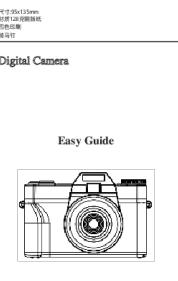	<p>Easy Guide for 6K ULTRAHD Digital Camera</p> <p>This easy guide provides essential information for operating the 6K ULTRAHD Digital Camera, covering setup, usage, connectivity, and troubleshooting.</p>
	<p>Digital Camera Easy Guide: Setup, Operation, and Troubleshooting</p> <p>This easy guide provides comprehensive instructions for operating your digital camera, covering setup, basic functions, advanced features, troubleshooting, and maintenance. It details camera parts, charging, shooting modes, playback, computer connectivity, and app usage.</p>
	<p>RAVPower FileHub RP-WD02: Windows System Instructions</p> <p>Comprehensive guide to downloading, installing, and using the RAVPower FileHub RP-WD02 on a Windows system, covering file management, network settings, and system configurations.</p>

	<p><u>WOLFANG WD02 Dash Camera User Manual</u></p> <p>Comprehensive user manual for the WOLFANG WD02 Dash Camera, covering package contents, camera overview, specifications, warnings, operation instructions, and warranty information.</p>
	<p><u>Kawasaki KRX1000 Windshield Installation and Care Guide - Falcon Ridge</u></p> <p>Detailed instructions for installing the Falcon Ridge windshield on a Kawasaki KRX1000. Includes a parts list, required tools, and important safety notices for a smooth and correct installation.</p>
	<p><u>RAVPower RP-WD02 FileHub: Android Setup and Usage Guide</u></p> <p>Comprehensive instructions for setting up and using the RAVPower RP-WD02 FileHub with Android devices, covering file transfer, music playback, photo sharing, and Wi-Fi hotspot functionality.</p>