

[Manuals.plus](#) /

> [CERAMAX](#) /

> CERAMAX Electric Hot Pot with Lid and Steamer, 1.6 Quarts, Model 6707 User Manual

CERAMAX 6707

CERAMAX Electric Hot Pot with Lid and Steamer User Manual

Model: 6707 | Brand: CERAMAX

1. INTRODUCTION

Thank you for purchasing the CERAMAX Electric Hot Pot. This appliance is designed for versatile cooking, offering convenience for preparing various meals in compact spaces. Please read this manual thoroughly before use to ensure safe and efficient operation. Keep this manual for future reference.



Image 1.1: The CERAMAX Electric Hot Pot with a fried egg, showcasing its non-stick interior and compact design.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance body in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer support for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to “off”, then remove plug from wall outlet.
- Do not use appliance for other than intended use.

3. PRODUCT COMPONENTS

The CERAMAX Electric Hot Pot package includes the following items:

- Electric Hot Pot (1.6 Quarts / 1.5 Liters capacity)
- Tempered Glass Lid
- Steamer Insert
- Power Cord

What's Included




Image 3.1: All included components of the CERAMAX Electric Hot Pot, featuring the main pot, glass lid, steamer insert, and power cord.

4. SETUP

Before first use, follow these steps to prepare your electric hot pot:

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for storage or future transport.
2. **Inspect:** Check the appliance for any signs of damage. Do not use if damaged.
3. **Clean:** Wash the hot pot interior, tempered glass lid, and steamer insert with warm, soapy water. Rinse thoroughly and dry completely before use. The main body of the hot pot should not be immersed in water.
4. **Placement:** Place the hot pot on a stable, flat, heat-resistant surface away from flammable materials. Ensure there is adequate ventilation around the appliance.
5. **Connect Power:** Insert the power cord into the appliance's power inlet, then plug the other end into a standard electrical outlet.

Portable Kitchen in a Pot

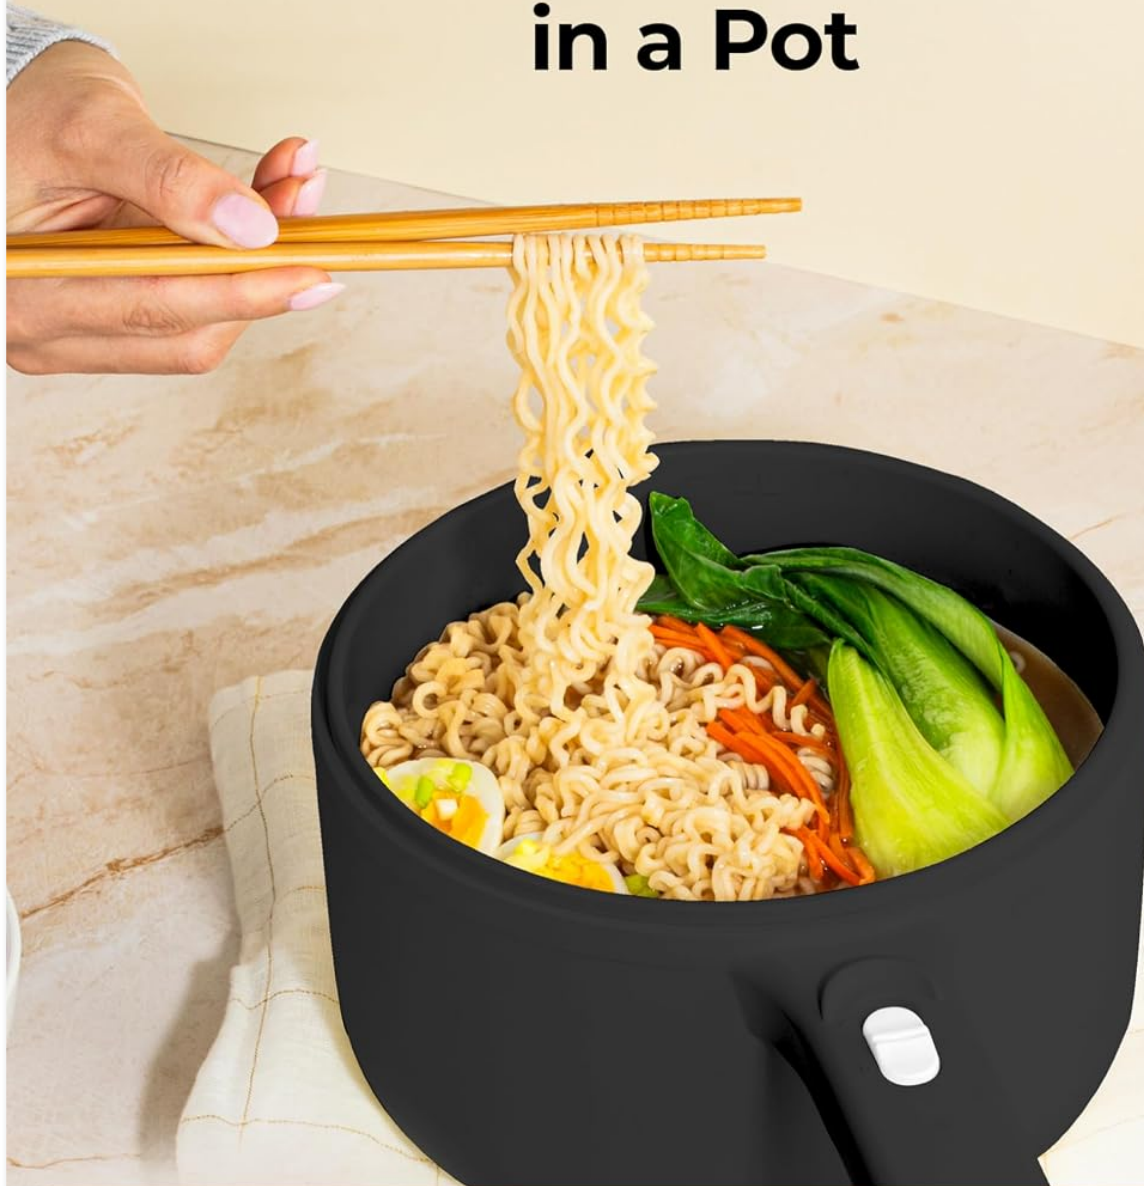

Just Plug it In and Use Anywhere



Dorm Room



Rv



Tailgate

Image 4.1: The electric hot pot in use, demonstrating its portability for various environments like dorm rooms, RVs, or camping.

5. OPERATING INSTRUCTIONS

General Operation

The CERAMAX Electric Hot Pot features two temperature settings for versatile cooking:

- **Low (300°F):** Ideal for simmering, keeping food warm, or gentle cooking.
- **High (350°F):** Suitable for boiling, frying, and faster cooking.

To operate, simply plug in the appliance and select your desired temperature setting using the control switch located on the handle. An indicator light will illuminate when the unit is heating.

Cook Meals Quicker

Heats Up Quicker Than a Typical Oven or Fry Pan



Image 5.1: The electric hot pot with its steamer insert, highlighting the two available temperature settings for cooking.

Cooking Functions

This appliance is designed to handle a variety of cooking tasks:

- **Boiling:** Fill the pot with water or broth, select the high temperature setting, and bring to a boil for pasta, ramen, or soups.

- **Steaming:** Place water in the main pot, insert the steamer tray with your desired food (vegetables, dumplings), and cover with the lid. Use the high setting to generate steam.
- **Frying/Sautéing:** Add a small amount of oil (if desired, though the non-stick surface often requires none) to the pot. Select the high temperature setting and add ingredients like eggs, stir-fries, or sear meats.
- **Simmering:** After boiling or frying, switch to the low temperature setting to gently simmer stews or keep food warm.

For All Your Favorite Dishes

FRY EGGS



SEAR MEATS



BOIL SOUPS



STEAM
VEGETABLES



1.5 LITERS CAPACITY

Image 5.2: Examples of various dishes that can be prepared using the electric hot pot, including frying, searing, boiling, and steaming.

6. CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your CERAMAX Electric Hot Pot.

1. **Unplug and Cool:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Clean Interior:** The non-stick ceramic interior can be easily cleaned with a soft sponge or cloth and warm, soapy water. Avoid abrasive cleaners or scouring pads that could damage the non-stick coating.
3. **Clean Exterior:** Wipe the exterior of the hot pot with a damp cloth. Do not immerse the main body of the hot pot in water or any other liquid.
4. **Lid and Steamer:** The tempered glass lid and steamer insert are dishwasher safe or can be hand-washed with warm, soapy water.
5. **Drying:** Ensure all parts are thoroughly dry before storing or next use.
6. **Storage:** Store the appliance in a dry place.

Nonstick Ceramic Interior



No Oil or
Butter Needed



Easy
to Clean



Made
Without PFOA



Image 6.1: The non-stick ceramic interior allows for easy food release and simplifies the cleaning process.

7. TROUBLESHOOTING

If you encounter any issues with your electric hot pot, please refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in correctly. Power outlet malfunction.	Ensure the power cord is securely plugged into both the appliance and a working electrical outlet. Test the outlet with another appliance.
Food is sticking to the pot.	Insufficient oil (if required for recipe). Temperature too high/low.	Add a small amount of cooking oil or butter. Adjust temperature setting as needed for the specific food. Ensure the non-stick coating is not damaged.
Appliance heats slowly.	Low temperature setting selected. Overfilling the pot.	Switch to the high temperature setting for faster heating. Do not exceed the maximum fill line.
Steam escaping from lid.	Lid not properly seated. Normal operation for steaming.	Ensure the lid is placed correctly on the pot. Some steam release is normal during cooking, especially when boiling or steaming.

8. SPECIFICATIONS

- **Brand:** CERAMAX
- **Model Number:** 6707
- **Capacity:** 1.5 Liters (1.6 Quarts)
- **Material:** Ceramic (Non-Stick Finish)
- **Color:** Black
- **Product Dimensions:** 14"D x 5"W x 8"H
- **Item Weight:** 1.55 Kilograms (3.41 pounds)
- **Temperature Settings:** 300°F, 350°F
- **Manufacturer:** E Mishan & Sons
- **UPC:** 080313067075

9. WARRANTY AND SUPPORT

The CERAMAX Electric Hot Pot is designed for durability and performance. For specific warranty details, please refer to the warranty card included with your purchase or contact the manufacturer directly. If you have any questions or require technical assistance, please reach out to CERAMAX customer support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DXMNN9JK>

More documents and user manuals: <https://manuals.plus/>