

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [CXK](#) /

› **CXK N7 Neckband Bluetooth Headphones User Manual**

CXK N7

CXK N7 Neckband Bluetooth Headphones User Manual

Model: N7

INTRODUCTION

Thank you for choosing the CXK N7 Neckband Bluetooth Headphones. This manual provides detailed instructions on how to set up, operate, and maintain your headphones to ensure optimal performance and longevity. Please read this manual carefully before using the product.

PACKAGE CONTENTS

Please check the package for the following items:

- CXK N7 Neckband Bluetooth Headphones
- USB Charging Cable
- Multiple Sizes of Ear Tips (S, M, L)
- Multiple Sizes of Ear Wings (S, M)
- User Manual



Image: CXK N7 Neckband Bluetooth Headphones, showcasing the main unit.

PRODUCT OVERVIEW

The CXK N7 headphones feature a flexible neckband design with in-ear earbuds, an integrated control panel, and a microphone for hands-free calls.

Components:

- **Neckband:** Flexible and skin-friendly silicone band that rests around your neck.
- **Earbuds:** In-ear design with soft ear tips and ear wings for a secure fit.
- **Control Panel:** Located on the neckband, housing power, volume, and multi-function buttons.
- **Microphone:** Integrated for clear voice calls.
- **Charging Port:** USB-C port for recharging the device.

Multi-size Eartips



(On Headphones)

Please choose the appropriate earplugs according to the size of the earholes



(On Headphones)



Image: Detailed view of the control panel buttons and their functions.

SETUP

1. Charging the Headphones

1. Connect the provided USB charging cable to the charging port on the headphone's control panel.
2. Connect the other end of the USB cable to a standard USB power adapter (not included) or a computer's USB port.
3. The indicator light will show charging status (refer to LED indicator section for details).
4. A full charge provides approximately 80 hours of playtime. A quick 10-minute charge can provide up to 15 hours of playback.



80 Hrs Playtime of A Full Charge

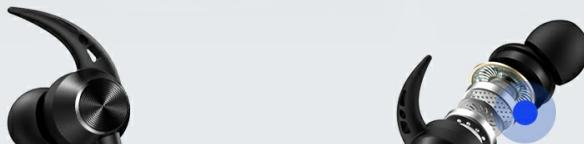


Image: Illustration of the quick charging capability.

2. Bluetooth Pairing

1. Ensure the headphones are fully charged.
2. Press and hold the Power button on the control panel for approximately 3-5 seconds until the LED indicator flashes blue and red, indicating pairing mode.
3. On your device (smartphone, tablet, computer), enable Bluetooth and search for available devices.
4. Select "CXK N7" from the list of found devices.
5. Once paired, the LED indicator will flash blue slowly, and you will hear an audible confirmation.
6. The headphones will automatically reconnect to the last paired device when powered on, if the device's Bluetooth is active and within range.

3. Wearing the Headphones

For optimal sound quality and comfort, choose the correct size ear tips and ear wings.

1. Select the ear tips (S, M, L) that provide a snug fit in your ear canal.
2. Select the ear wings (S, M) that comfortably secure the earbuds in your outer ear.
3. Place the neckband around your neck, allowing the earbuds to hang freely.
4. Insert the earbuds into your ears, adjusting the ear wings for a secure and comfortable fit.



Image: Proper wearing of the headphones with ear tips and ear wings for a secure fit.

Featherlight Fit



Image: Selection of ear tips and ear wings for customized comfort.

OPERATING INSTRUCTIONS

Basic Controls:

- **Power On/Off:** Press and hold the Power button for 3 seconds.
- **Play/Pause:** Single click the Multi-function button (center button).
- **Volume Up:** Single click the '+' button.
- **Volume Down:** Single click the '-' button.
- **Next Track:** Double click the '+' button.
- **Previous Track:** Double click the '-' button.
- **Answer/End Call:** Single click the Multi-function button during an incoming call or active call.
- **Reject Call:** Press and hold the Multi-function button for 2 seconds during an incoming call.
- **Voice Assistant:** Press and hold the Multi-function button for 2 seconds (when not on a call).



Image: Demonstrating clear call functionality with the integrated microphone.

Magnetic Earbuds

The earbuds feature a magnetic design, allowing them to snap together when not in use. This helps prevent tangling and keeps them securely around your neck.

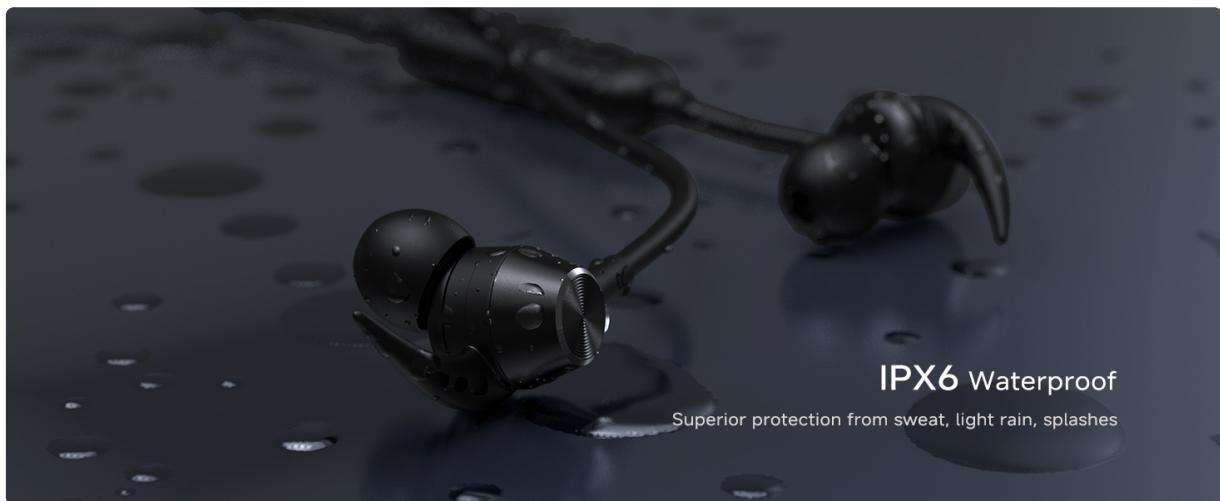


Image: The magnetic earbuds feature, showing them connected.

MAINTENANCE

Cleaning

- Wipe the headphones with a soft, dry, lint-free cloth.
- For ear tips and ear wings, remove them from the earbuds and clean with mild soap and water if necessary. Ensure they are completely dry before reattaching.
- Do not use abrasive cleaners or solvents.

Storage

- Store the headphones in a cool, dry place away from direct sunlight and extreme temperatures.
- Avoid storing with sharp objects that could damage the cables or earbuds.

Water Resistance (IPX6)

The CXK N7 headphones are rated IPX6 waterproof, meaning they are protected against high-pressure water jets from any direction. This makes them suitable for use during workouts, light rain, and protection

from splashes. They are not designed for submersion in water.



Image: Visual representation of the IPX6 waterproof rating.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Headphones do not power on.	Low battery.	Charge the headphones fully.
Cannot pair with device.	Bluetooth is off on device; headphones not in pairing mode; too far from device.	Ensure Bluetooth is on. Put headphones in pairing mode. Move closer to device. Forget device and re-pair.
No sound or poor sound quality.	Volume too low; improper fit; device not connected; audio source issue.	Increase volume on headphones and device. Adjust ear tips/wings for a secure fit. Ensure headphones are connected. Check audio source.
Microphone not working.	Device settings; microphone blocked.	Check device's audio input settings. Ensure microphone is not covered.

SPECIFICATIONS

Feature	Specification
Model Name	N7
Connectivity Technology	Wireless (Bluetooth)
Bluetooth Version	5.3
Battery Life	80 Hours

Feature	Specification
Water Resistance Level	IPX6 (Waterproof)
Earpiece Shape	In-Ear
Material	Silicone
Frequency Range	20 Hz - 20,000 Hz
Item Weight	0.08 Kilograms (2.89 ounces)
Noise Control	Passive Noise Cancellation
Compatible Devices	Smartphones, Laptops, Desktops, Tablets, Smart Speakers, Televisions, Car Audio Systems



WARRANTY AND SUPPORT

CXK products are designed and manufactured to the highest quality standards. For warranty information or technical support, please refer to the warranty card included with your purchase or contact CXK customer service through the retailer where you purchased the product. Please retain your proof of purchase for warranty claims.

© 2025 CXK. All rights reserved.

Related Documents - N7

	<p><u>N7 Wireless Headphones User Manual and Specifications</u></p> <p>Comprehensive user manual for N7 wireless headphones, covering specifications, product features, controls, charging, pairing, warranty, safety guidelines, and FCC compliance.</p>
	<p><u>CT13 Wireless Earbuds User Manual</u></p> <p>Comprehensive user manual for the CT13 Wireless Earbuds, covering setup, operation, troubleshooting, and specifications. Learn how to pair, charge, and use all features of your CT13 earbuds.</p>
	<p><u>N7 Wireless Headphones User Manual and Specifications</u></p> <p>Comprehensive user manual for N7 wireless headphones, covering specifications, product features, controls, charging, pairing, warranty, safety guidelines, and FCC compliance.</p>

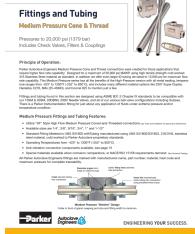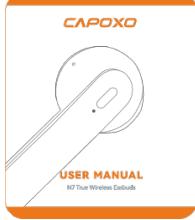	<p>Parker Medium Pressure Cone & Thread Fittings and Tubing Catalog</p> <p>Comprehensive catalog detailing Parker Autoclave Engineers' Medium Pressure Cone & Thread fittings, tubing, check valves, filters, and couplings. Includes specifications, materials, dimensions, and assembly instructions for high-pressure applications up to 20,000 psi.</p>
	<p>CAPOXO N7 True Wireless Earbuds User Manual Bluetooth 5.3 Headphones</p> <p>Comprehensive user manual for CAPOXO N7 True Wireless Earbuds. Learn about setup, operations, charging, Bluetooth connection, and troubleshooting for your N7 earbuds.</p>
<p>Warranty Terms</p> <p>1. The warranty period for this product is 1 year. 2. During the warranty period, if the product fails under normal use according to the instruction manual, we will provide free return and exchange. 3. During the warranty period, if any of the following circumstances occur, you will not be able to enjoy the warranty service: (1) Failure to provide this warranty and valid purchase receipt. (2) Damage caused by improper use, improper storage, or unauthorized disassembly or repair by third parties. (3) Failure or damage caused by transportation, moving, or falling after purchase. (4) Failure and damage caused by other unavoidable external factors.</p>	<p>COOLCRAZY N7 Front Dash Camera Warranty Terms and Conditions</p> <p>Official warranty terms for the COOLCRAZY N7 Front Dash Camera. Details include the 1-year warranty period, free return/exchange policy, and specific exclusions for coverage.</p>