

[manuals.plus](#) /

- › [Tzone](#) /
- › [Tzone HTD701 Temperature and Humidity Data Logger User Manual](#)

Tzone HTD701

Tzone HTD701 Temperature and Humidity Data Logger User Manual

Model: HTD701 | Brand: Tzone

1. INTRODUCTION

The Tzone HTD701 is a digital temperature and humidity data logger designed for precise environmental monitoring. It simultaneously measures and records ambient temperature, dew point, wet bulb temperature, and relative humidity. Featuring a USB interface for automatic report generation and an intuitive display, it is suitable for various applications including laboratories, HVAC systems, greenhouses, and freezers.

2. PACKAGE CONTENTS

PACKAGE CONTENT

- 1*Temp Humidity Data Logger
- 1*Temp Humidity Probe
- 1*USB Cable
- 1*User Manual
- 1*Calibration Report
- 1*Portable Box



Verify that all items are present in the package:

- 1 x Tzone HTD701 Temperature and Humidity Data Logger
- 1 x Temperature and Humidity Probe
- 1 x USB Type-C Cable
- 1 x User Manual
- 1 x Calibration Certificate
- 1 x Portable Storage Box

This image displays the complete contents of the Tzone HTD701 package, including the main data logger unit, the external temperature and humidity probe, a USB-C cable for data transfer, the user manual, a calibration certificate, and a protective portable box.

3. PRODUCT OVERVIEW



The HTD701 features an intuitive design with clearly labeled components for ease of use:

- **LCD Screen Display:** Shows current readings, settings, and data trends.
- **ON/OFF/Backlight Key:** Powers the device on/off and controls screen backlight.
- **Back Key:** Navigates back through menus.
- **Multi-function Key:** Used for various menu selections and confirmations.
- **Data Hold:** Freezes the current display readings.
- **Max/Min/Avg Value:** Displays maximum, minimum, and average recorded values.
- **Temp Unit Switch:** Toggles between °C, °F, and K temperature units.
- **Battery Box:** Houses the 3 AA batteries.
- **Temp & RH Probe:** External sensor for temperature and relative humidity measurements.
- **USB Port:** For data transfer and power supply.

This image provides a detailed view of the Tzone HTD701 data logger, highlighting its various buttons, the LCD screen, the external temperature and humidity probe, and other key features. Dimensions are also indicated.

4. FEATURES

- **Simultaneous Measurement:** Records ambient temperature (-40°C to 125°C), dew point (-40°C to 80°C), wet bulb temperature (-40°C to 80°C), and relative humidity (0 to 100% RH).
- **Automatic Report Generation:** Connect via USB to automatically generate TXT/CSV/XLS/PDF data reports without requiring special software.
- **Large Data Capacity:** Stores up to 49,920 groups of data.
- **Adjustable Parameters:** Easily set temperature and humidity alarm ranges, auto-off mode, backlight time, and logging intervals.
- **Sound Alarms:** Audible alerts when temperature or humidity exceeds set limits.
- **Backlight Display:** Ensures clear readability in low-light conditions.
- **Humanized Design:** Anti-slip and anti-collision casing, foldable stand, and hanging design for versatile placement.
- **Temperature Unit Switching:** Supports °C, °F, and K units.



This image illustrates the multi-functional aspects of the data logger, including data hold, auto-off, low power consumption, LCD display, and backlight.

HUMANIZED DESIGN



Battery Replaceable



Power Supply via USB Cable



Flexible Angle Adjustment



Hanging Design

This image highlights the user-friendly design elements such as replaceable batteries, USB power option, a flexible stand, and a hanging feature.

5. SETUP AND INSTALLATION

- Battery Installation:** Open the battery compartment on the back of the device and insert 3 AA batteries, ensuring correct polarity.
- Probe Connection:** Connect the temperature and humidity probe to the designated port on the top of the data logger. Ensure a secure connection.
- Power On:** Press the ON/OFF button to power on the device. The LCD screen will illuminate.
- Initial Placement:** Place the data logger in the desired monitoring location. Utilize the foldable stand for desktop use or the hanging design for elevated placement.
- Probe Placement:** Carefully place the temperature and humidity probe within the area where measurements are to be taken. Ensure the probe is not obstructed and has adequate air circulation.

Your browser does not support the video tag.

This video demonstrates the unboxing and initial setup of the Tzone HTD701 data logger, showing how to connect the probe and power on the device.

Your browser does not support the video tag.

This video provides a visual guide on connecting the external probe and placing it in a measurement environment, such as

6. OPERATION

- Viewing Current Data:** Upon powering on, the LCD will display current temperature, humidity, and a graph of recent data.
- Switching Display Modes:** Use the navigation buttons to cycle through different display modes, including dew point and wet bulb temperature readings.
- Data Hold:** Press the 'HOLD' button to freeze the current readings on the screen. Press again to release.
- Max/Min/Avg:** Press the 'MAX/MIN/AVG' button to view the maximum, minimum, and average recorded values.
- Temperature Unit Switch:** Press the '°C/°F/K' button to change the temperature unit between Celsius, Fahrenheit, and Kelvin.



This image shows the Tzone HTD701 data logger actively monitoring and displaying temperature and humidity data, along with a graphical representation of the trends.

7. DATA LOGGING AND REPORTING

- Setting Logging Parameters:** Navigate to the 'Logging' menu to set the logging interval, start time, and file format (TXT, CSV, XLS, PDF).
- Starting Logging:** Select 'Start Logging' from the menu to begin recording data. The device will log data at the set interval.
- Stopping Logging:** To stop logging, navigate back to the 'Logging' menu and select 'Stop Logging'. Confirm your choice.
- Data Transfer:** Connect the data logger to a computer using the provided USB Type-C cable. The device will automatically generate data reports in the selected format.
- Accessing Reports:** The generated reports can be found as removable storage on your computer. No special software is required for report generation.



This image demonstrates the Tzone HTD701 data logger connected to a laptop, showcasing its ability to automatically generate data reports in various formats (TXT, CSV, XLS, PDF) without the need for additional software.

8. ALARMS AND SETTINGS

- Accessing Settings:** Navigate to the 'Menu' on the device and select 'Settings' to adjust various parameters.

- Setting Alarm Limits:** In the 'Alert' menu, set the upper and lower limits for temperature and humidity. If readings exceed these limits, an audible alarm will sound.
- Auto-Off Mode:** Configure the auto-off duration to conserve battery life.
- Backlight Time:** Adjust the duration for which the screen backlight remains active.
- Calibration:** The device comes with a calibration certificate. Refer to the 'Calibration' menu for any advanced calibration needs, if applicable.



This image shows the Tzone HTD701 data logger's menu interface, illustrating how users can access and adjust various parameters such as sound settings, logging options, auto-off, alert thresholds, and calibration. A sound alarm icon is also visible.

9. SPECIFICATIONS

Parameter	Value
Temperature Measurement Range (Environmental)	-40°C to 125°C
Temperature Measurement Range (Dew Point)	-40°C to 80°C
Temperature Measurement Range (Wet Bulb)	-40°C to 80°C

Parameter	Value
Relative Humidity Measurement Range	0 to 100% RH
Temperature Units	°C / °F / K
Data Storage Capacity	49,920 groups
Resolution	0.1
Measurement Rate	1 time/second
Power Source	3 x 1.5V AA Batteries (included)
Connectivity	USB Type-C
Item Weight	2.35 pounds
Package Dimensions	10.83 x 8.82 x 3.11 inches

SPECIFICATIONS



Temperature Measurement Range:

- 40°C to 125°C (Environmental)
- 40°C to 80°C (Dew Point)
- 40°C to 80°C (Wet Bulb)

Relative Humidity Measurement Range:

0~100% RH

Temperature Unit: °C/°F/K

Data Storage Capacity: 49920 Groups

Resolution: 0.1

Measurement Rate: 1 time/second

This image visually summarizes the key technical specifications of the Tzone HTD701 data logger.

10. MAINTENANCE

- **Cleaning:** Wipe the device and probe with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries when the low battery indicator appears on the screen to ensure continuous operation and data integrity.
- **Storage:** When not in use for extended periods, remove the batteries and store the device in its portable box in a cool, dry place away from direct sunlight and extreme temperatures.
- **Probe Care:** Handle the external probe with care. Avoid bending or damaging the cable and sensor tip.

11. TROUBLESHOOTING

- **Device Not Powering On:**
 - Check if batteries are correctly installed and have sufficient charge. Replace if necessary.
- **Inaccurate Readings:**
 - Ensure the probe is clean and free from dust or debris.
 - Verify the probe is securely connected to the main unit.
 - Allow the device to stabilize in the measurement environment for a few minutes.
- **Data Not Logging:**
 - Check logging settings to ensure a logging interval is set and logging has been initiated.
 - Verify that the device has sufficient memory capacity.
- **USB Connection Issues:**
 - Ensure the USB cable is properly connected to both the device and the computer.
 - Try a different USB port on your computer.
- **Alarm Not Sounding:**
 - Check the 'Alert' settings to ensure alarm limits are correctly configured and the alarm mode is enabled.
 - Verify the device's volume settings.

12. WARRANTY AND SUPPORT

Tzone products are covered by a standard manufacturer's warranty. For specific warranty details, technical support, or service inquiries, please refer to the contact information provided in the product packaging or visit the official Tzone website. Keep your purchase receipt as proof of purchase for warranty claims.