

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ZINGBIRD](#) /

› [ZINGBIRD X15 Wireless Earbuds User Manual](#)

ZINGBIRD X15

ZINGBIRD X15 Wireless Earbuds User Manual

Model: X15 | Brand: ZINGBIRD

INTRODUCTION

Welcome to the ZINGBIRD X15 Wireless Earbuds user manual. These earbuds feature advanced Bluetooth 5.4 technology, enhanced ENC noise cancellation, dual charging options (Type-C and wireless), an LED power display, and IPX7 waterproof rating. Designed for comfort and superior sound quality, they are compatible with a wide range of devices including smartphones, laptops, and tablets.

WHAT'S IN THE Box

- Wireless Earbuds (ZINGBIRD X15)
- Charging Case
- Type-C Cable
- User Manual
- Eartips (3 sizes: S, M, L)



Image: All components included in the ZINGBIRD X15 Wireless Earbuds package.

SETUP AND FIRST USE

Charging the Earbuds and Case

Before first use, ensure both the earbuds and the charging case are fully charged. The charging case features an LED display to show battery levels. You can charge the case using the provided Type-C cable or via wireless charging.

Support Wireless Charging Fast Charging



Image: The ZINGBIRD X15 charging case supporting both Type-C and wireless charging.

Your browser does not support the video tag.

Video: Demonstrates the LED power display and auto-pairing feature of the X15 Wireless Earbuds, including quick wireless charging.

Pairing with Your Device

The earbuds automatically enter pairing mode when removed from the charging case. Open your device's Bluetooth settings and select "X15" from the list of available devices to connect.

Your browser does not support the video tag.

Video: An unboxing and review video demonstrating the pairing process with an iPhone, highlighting the ease of connection and comfort of the earbuds.

OPERATING INSTRUCTIONS

Smart Touch Controls

The ZINGBIRD X15 earbuds feature intuitive touch controls for easy management of music and calls. Refer to the table below for specific functions:

Action	Function
Single Tap (either earbud)	Play/Pause music
Double Tap (right earbud)	Next Track
Double Tap (left earbud)	Previous Track
Triple Tap (right earbud)	Increase Volume
Triple Tap (left earbud)	Decrease Volume
Double Tap (either earbud)	Answer/End Call
Long Tap (2s, either earbud)	Reject Call / Enable Voice Assistant (on music time)

Smart Touch Control



Image: Visual representation of the smart touch controls on the earbud.

Your browser does not support the video tag.

Video: Demonstrates various touch controls for music playback and call management.

Audio Quality and Comfort

The X15 earbuds are equipped with dual 14.2mm low-distortion composite dynamic drivers for exceptional sound. The ergonomic design and included multiple ear tip sizes ensure a secure and comfortable fit for extended listening periods.

Ultra-light, Comfortable to Wear



Ergonomic
design



Touch
Control

Image: Illustrates the comfortable fit and lightweight design of the earbuds, along with the different ear tip sizes.

Immersive Stereo Sound

13mm Speaker



Image: The earbuds and case displayed on a wet surface, showcasing their IPX7 water resistance.

MAINTENANCE

To ensure the longevity and optimal performance of your ZINGBIRD X15 earbuds, follow these maintenance guidelines:

- Cleaning:** Regularly wipe the earbuds and charging case with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals or abrasive materials.
- Water Resistance:** The earbuds are IPX7 waterproof, meaning they can withstand submersion in up to 1 meter of water for 30 minutes. However, the charging case is not waterproof. Always ensure the earbuds are dry before placing them back into the charging case to prevent damage.
- Storage:** Store the earbuds in their charging case when not in use to protect them from dust and physical damage.

TROUBLESHOOTING

If you encounter any issues with your ZINGBIRD X15 earbuds, try the following solutions:

- **No Sound/Connection Issues:**

- Ensure earbuds are charged.
- Turn off and on Bluetooth on your device.
- Forget "X15" from your device's Bluetooth list and re-pair.
- Ensure earbuds are within the 15-meter range of your device.

- **Earbuds Not Charging:**

- Check if the charging cable is securely connected to both the case and the power source.
- Ensure the charging case itself has power (check LED display).
- Clean the charging contacts on both the earbuds and the case.
- If using wireless charging, ensure the case is properly aligned on the charging pad.

- **Poor Sound Quality:**

- Adjust the ear tips for a snug fit.
- Clean any debris from the earbud speakers.
- Ensure there are no obstructions between the earbuds and your device.

SPECIFICATIONS

Feature	Detail
Model Name	X15
Brand	ZINGBIRD
Connectivity Technology	Wireless (Bluetooth 5.4)
Wireless Communication Technology	Bluetooth
Battery Life	6 hours (earbuds), 60 hours (with charging case)
Charging Options	Type-C, Wireless Charging
Water Resistance Level	IPX7 Waterproof
Control Type	Touch, Volume Control
Frequency Response	20 KHz
Impedance	32 Ohm
Noise Control	Sound Isolation (ENC Noise Cancellation)
Item Weight	1.4 Ounces

Feature	Detail
Product Dimensions	2.4 x 1 x 1.8 inches
Material	Plastic, Metal, Acrylonitrile Butadiene Styrene (ABS)

WARRANTY AND SUPPORT

ZINGBIRD offers a lifetime warranty for the X15 Wireless Earbuds. For any support inquiries, technical assistance, or warranty claims, please contact ZINGBIRD customer service through their official channels. Information on how to contact ZINGBIRD can be found on the warranty card included in your product packaging or by visiting the ZINGBIRD store on Amazon.

You can visit the [ZINGBIRD Store](#) for more information.

© 2025 ZINGBIRD. All rights reserved.