

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Monster](#) /

› [Monster Open Touch Pro 100 Open Ear Headphones User Manual](#)

## Monster Open Touch Pro 100


# Monster Open Touch Pro 100 Open Ear Headphones User Manual

Model: MH22205

## INTRODUCTION

Thank you for choosing the Monster Open Touch Pro 100 Open Ear Headphones. This manual provides essential information for setting up, operating, and maintaining your new earbuds. Please read it carefully to ensure optimal performance and longevity of your device.

The Monster Open Touch Pro 100 features an innovative open-ear design, a multi-touch smart charging case with an LED full-color screen, and support for TF card playback, allowing for a versatile and comfortable listening experience.

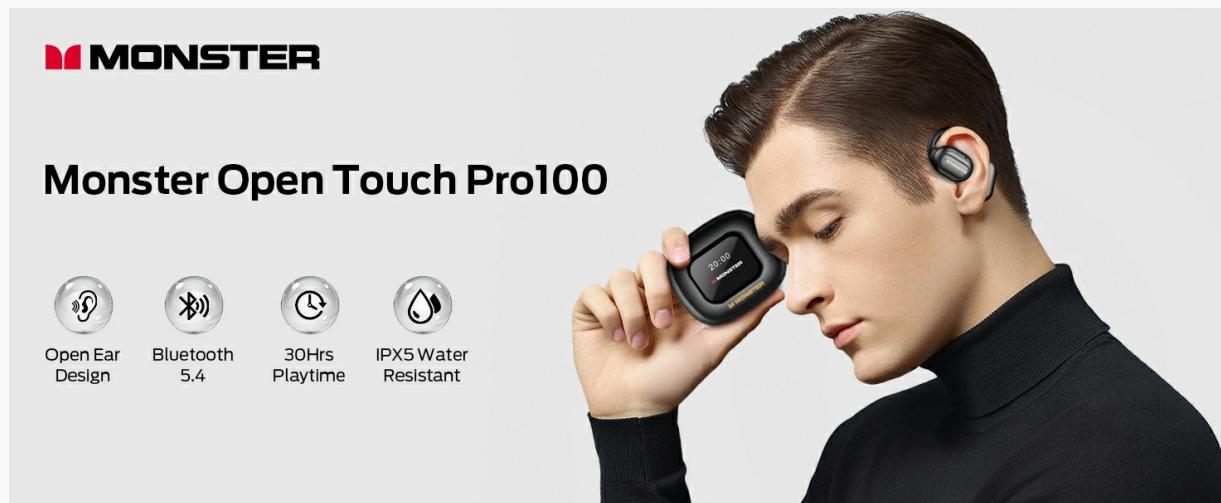

*Image: The Monster Open Touch Pro 100 earbuds and their smart charging case, highlighting the product's design and key features.*

## SAFETY INFORMATION

- Do not disassemble or modify the product. This may cause malfunction or damage.
- Keep the device away from extreme temperatures, humidity, and corrosive substances.
- Avoid prolonged exposure to high volume levels to prevent hearing damage.

- The open-ear design allows you to hear your surroundings, but always exercise caution in environments requiring full attention.
- The earbuds are IPX5 water-resistant; however, the charging case is not waterproof. Avoid exposing the charging case to liquids.
- Dispose of batteries and electronic components responsibly according to local regulations.

## PACKAGE CONTENTS

Please check that all items are present in your package:

- Monster Open Touch Pro 100 Earbuds (Left and Right)
- Smart Charging Case
- USB-C Charging Cable
- User Manual

## PRODUCT OVERVIEW

### Earbuds



*Image: An exploded view illustrating the 16.2mm large driver and composite titanium nano diaphragm within the earbud, responsible for sound production.*

- **Open-Ear Design:** Allows you to hear ambient sounds while enjoying audio, enhancing safety and comfort.
- **16.2mm Large Drivers:** Deliver clear and detailed sound quality.
- **ENC Noise Cancellation:** Ensures clear conversations by intelligently adjusting for environmental changes during calls.
- **Ergonomic Ear-Hook:** Crafted from skin-friendly silicone for secure and comfortable wear.

## Smart Charging Case



*Image: The smart charging case with its LED full-color touch screen, showing icons for music playback, volume, EQ modes, language settings, and other controls.*

- **LED Full-Color Smart Screen:** Provides intuitive control over music playback, track switching, volume adjustment, and various settings.
- **TF Card Slot:** Supports independent MP3 playback without needing a phone or network (TF card not included).
- **Charging Functionality:** Recharges earbuds and extends total playback time.

## SETUP


### 1. Charging the Device

1. Place the earbuds into the charging case.
2. Connect the USB-C charging cable to the charging port on the case and a power source.
3. The LED screen on the case will indicate charging status. Ensure the case is fully charged before first use.

### 2. Bluetooth Pairing

1. Open the charging case. The earbuds will automatically enter pairing mode.
2. On your device (smartphone, tablet, PC), enable Bluetooth.
3. Search for "Monster Open Touch Pro 100" in the list of available Bluetooth devices.
4. Select the device to connect. A voice prompt will confirm successful pairing.

### 3. Inserting a TF Card (Optional)

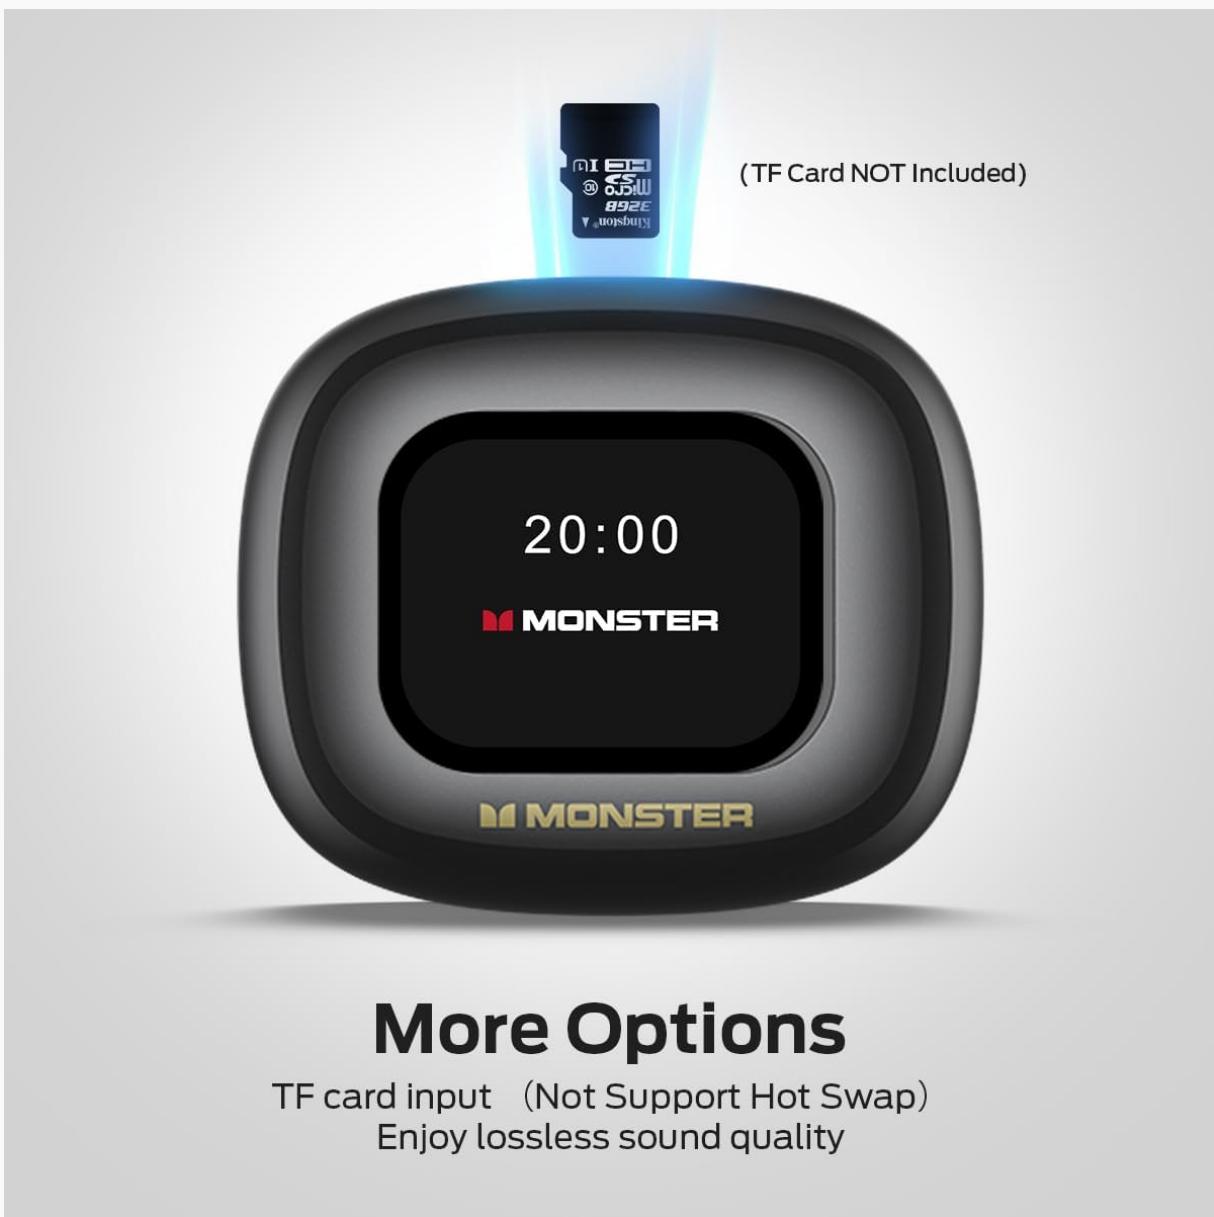

## More Options

TF card input (Not Support Hot Swap)  
Enjoy lossless sound quality

*Image: The smart charging case with a TF card being inserted into its dedicated slot, enabling independent music playback.*

1. Locate the TF card slot on the charging case.
2. Gently insert a TF card (not included) into the slot until it clicks into place.
3. The earbuds can now play music directly from the TF card without a connected device. Note: Hot-swapping TF cards is not supported.

## OPERATING INSTRUCTIONS

### Earbud Controls




*Image: A visual guide detailing the touch controls on the earbuds for various functions like playback, calls, and voice assistant activation.*

- **Play/Pause:** Click 1 time (Left or Right earbud).
- **Next Song:** Click 2 times (Right earbud).
- **Previous Song:** Click 3 times (Left or Right earbud).
- **Answer Call:** Click 2 times (Left or Right earbud).
- **Hang Up Call:** Hold for 3 seconds (Left or Right earbud).
- **Activate Voice Assistant:** Hold for 2 seconds (Left or Right earbud).

### Smart Charging Case Controls

The LED full-color touch screen on the charging case provides access to advanced features:

- **Music Playback:** Control tracks and volume directly from the screen.
- **EQ Modes:** Select from multiple equalizer presets (e.g., Rock, Pop, Normal, Jazz, Classic) to customize your listening experience.

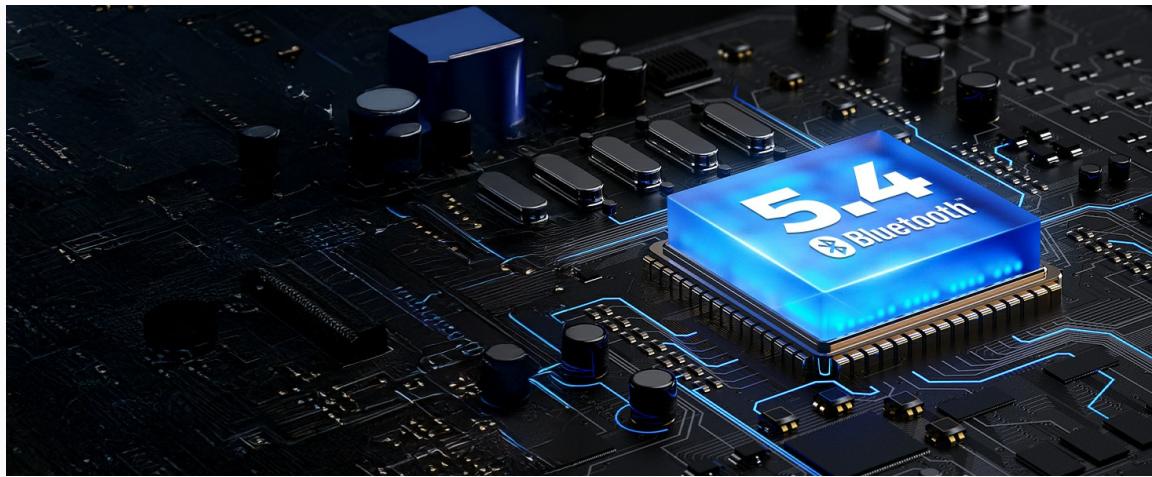

*Image: The smart charging case displaying various EQ modes, allowing users to select different sound profiles for their audio.*

- **Language Switch:** Change the system language (e.g., English, Chinese).



*Image: The charging case screen showing the option to switch between different languages, such as English and Chinese.*

- **Find My Earphone:** Utilize this function to locate misplaced earbuds.
- **Remote Camera Shutter:** Use the case as a remote shutter button for your smartphone camera.



*Image: The smart charging case being used as a remote shutter for a smartphone camera, demonstrating its additional utility.*

## Independent MP3 Mode

When a TF card with music files is inserted into the charging case, the earbuds can function as an independent MP3 player. This allows you to enjoy music without needing to connect to a smartphone or other device.

## MAINTENANCE

---

### Cleaning

- Wipe the earbuds and charging case with a soft, dry, lint-free cloth.
- Do not use harsh chemicals, cleaning solvents, or strong detergents.
- Ensure charging contacts on both earbuds and case are clean and dry.

### Storage

- Store the earbuds in their charging case when not in use to protect them and keep them charged.
- Store in a cool, dry place away from direct sunlight and extreme temperatures.

### Water Resistance



# IPX5 Waterproof Performance

\*Charging case is not waterproof\*

*Image: A person engaged in physical activity while wearing the earbuds, demonstrating their IPX5 waterproof performance against sweat and light rain.*

The earbuds have an IPX5 waterproof rating, protecting them from sweat and light rain. This rating applies only to the earbuds, not the charging case. Do not submerge the earbuds in water or expose the charging case to liquids.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Earbuds not pairing	Earbuds are out of range or not in pairing mode.	Ensure earbuds are in the case, open the lid to activate pairing. Check Bluetooth on your device.
No sound	Volume too low, earbuds not connected, or media paused.	Increase volume on your device and earbuds. Reconnect Bluetooth. Check media playback status.
Charging case not charging	Cable or power source issue.	Try a different USB-C cable or power adapter. Ensure connections are secure.

Problem	Possible Cause	Solution
TF card music not playing	TF card not inserted correctly or no compatible files.	Reinsert TF card. Ensure music files are in a supported format.

## SPECIFICATIONS

Feature	Detail
Model Name	MH22205
Brand	Monster
Form Factor	Open Ear
Connectivity Technology	Wireless (Bluetooth 5.4)
Driver Size	16.2mm
Battery Life (Earbuds)	Up to 8 hours
Total Playback Time (with Case)	Up to 30 hours
Water Resistance	IPX5 (Earbuds only)
Item Weight	10.6 ounces (total)
Package Dimensions	5.28 x 4.53 x 1.93 inches

## WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Monster website. Keep your proof of purchase for warranty claims.