

Monster MH22227

Monster Open Ear AC510 Earbuds User Manual

Model: MH22227

INTRODUCTION

Thank you for choosing the Monster Open Ear AC510 Earbuds. This manual provides detailed instructions on how to set up, operate, maintain, and troubleshoot your new wireless earbuds. Please read this manual thoroughly before use to ensure optimal performance and longevity of your device.

PRODUCT OVERVIEW

The Monster Open Ear AC510 Earbuds are designed for comfort and high-quality audio, featuring an open-ear design, Bluetooth 6.0 connectivity, AI intelligent noise reduction, and IPX6 waterproofing.

Package Contents

- Monster Open Ear AC510 Earbuds (L/R)
- Charging Case
- USB-C Charging Cable
- Lanyard
- Quick Start Guide



ENC Call Noise Reduction

Call noise cancellation with a single MEMS microphone for clear conversations.



Image: All components included in the Monster Open Ear AC510 Earbuds package.

SETUP

1. Charging the Earbuds and Case

Before first use, fully charge the earbuds and the charging case. Connect the USB-C charging cable to the charging port on the case and a power source. The indicator lights on the case will show the charging status. A full charge for the case takes approximately 2 hours, providing up to 30 hours of total playback time with the earbuds.

- Earbuds Playtime: Up to 6 hours on a single charge.
- Total Playtime with Charging Case: Up to 30 hours.

Up to 30 Hours Playtime

All-day usage duration, enjoy the freedom of non-stop entertainment

Fully Charged

2H



Earbuds

6H



Charging Case

30H



Image: Battery life and charging duration details for the earbuds and charging case.

2. Bluetooth Pairing

To pair your Monster Open Ear AC510 Earbuds with your device:

1. Ensure the earbuds are charged.
2. Open the charging case. The earbuds will automatically enter pairing mode, indicated by a flashing light.
3. On your device (smartphone, tablet, laptop), go to Bluetooth settings.
4. Search for "Monster Open Ear AC510" in the list of available devices.
5. Select it to connect. Once connected, a voice prompt will confirm the successful pairing, and the earbud lights will turn off or show a steady light.

Upgraded Bluetooth 6.0



Image: Bluetooth 6.0 quick connect process with a smartphone.

OPERATING INSTRUCTIONS

1. Wearing the Earbuds

The Monster Open Ear AC510 earbuds feature a 360° biomimetic fit and are made of liquid skin-friendly silicone. To ensure the best wearing comfort and sound quality:

1. Gently place the earbud onto your ear.
2. Rotate the earbud slightly to adjust it for a comfortable and secure fit. The ear pressure sensing technology will automatically adjust the fit.

Monster Open Ear AC510 Touch Control

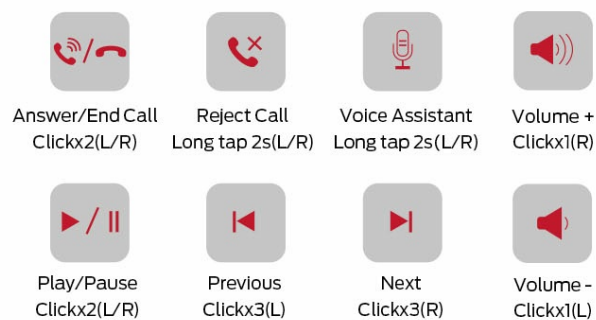


Image: Step-by-step guide on how to wear the Monster Open Ear AC510 earbuds.

2. Touch Controls

The earbuds feature smart touch controls for easy management of calls and music playback:

Action	Control
Answer/End Call	Click 2 times (L/R)
Reject Call	Long tap 2 seconds (L/R)
Voice Assistant	Long tap 2 seconds (L/R)
Volume +	Click 1 time (R)
Volume -	Click 1 time (L)
Play/Pause	Click 2 times (L/R)
Previous Track	Click 3 times (L)
Next Track	Click 3 times (R)



Image: Comprehensive guide to the touch controls on the Monster Open Ear AC510 earbuds.

MAINTENANCE

Cleaning and Care

- Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth.
- Do not use abrasive cleaners, alcohol, or chemical solvents.
- Keep the charging contacts on both the earbuds and the case clean to ensure proper charging.

Water Resistance (IPX6)

The Monster Open Ear AC510 Earbuds are IPX6 waterproof, meaning they are protected against powerful water jets. This makes them suitable for use during workouts and in light rain. However, they are not designed for submersion in water.

- Avoid prolonged exposure to water.
- Do not use them while swimming or showering.
- Ensure earbuds are dry before placing them back in the charging case to prevent damage.



Pure Monster Sound

13mm Speaker Dynamic Audio

Image: IPX6 waterproof capabilities, highlighting resistance to rain, sweat, and splashes.

TROUBLESHOOTING

If you encounter issues with your earbuds, please refer to the following common solutions:

No Sound / Disconnection

- Ensure earbuds are charged.
- Check Bluetooth connection on your device. Try turning Bluetooth off and on again.
- Move closer to your device to avoid interference.
- Try re-pairing the earbuds with your device.

Earbuds Not Charging

- Ensure the charging case is charged.

- Check that the earbuds are correctly seated in the charging case.
- Clean the charging contacts on both the earbuds and the case with a dry cotton swab.
- Try a different USB-C cable and power adapter.

Touch Controls Not Responding

- Ensure your fingers are clean and dry when touching the control area.
- Restart the earbuds by placing them in the case and closing it, then taking them out again.

SPECIFICATIONS

Feature	Detail
Model Name	MH22227
Connectivity Technology	Wireless (Bluetooth 6.0)
Ear Placement	Open Ear
Control Method	Touch
Water Resistance Level	IPX6
Noise Control	Adaptive Noise Cancellation (AI Intelligent Noise Reduction)
Material	Silicone
Item Weight	5.3 ounces
Manufacturer	Monster

WARRANTY AND SUPPORT

Monster products are built with quality and reliability in mind. For warranty information and customer support, please refer to the warranty card included in your product packaging or visit the official Monster website. If you experience any issues not covered in this manual, please contact Monster customer service for assistance.

For further assistance, you may visit the [Monster Store on Amazon](#).