

[Manuals.plus](#) /

› [TECKNET](#) /

› TECKNET Wireless Mouse Rechargeable: User Manual

TECKNET B0DXQ1T5VW

TECKNET Wireless Mouse Rechargeable: User Manual

Model: B0DXQ1T5VW

1. INTRODUCTION

This manual provides instructions for the TECKNET Wireless Mouse, Model B0DXQ1T5VW. Please read this manual thoroughly before using the product to ensure proper operation and to understand its features. Keep this manual for future reference.

2. PACKAGE CONTENTS

- TECKNET Wireless Mouse
- USB Receiver (stored in the mouse battery compartment)
- USB Charging Cable
- User Manual (this document)

3. PRODUCT OVERVIEW

Familiarize yourself with the various components of your TECKNET Wireless Mouse.

6-DPI Adjustments

Precision That Adapts With You

1000 DPI

1600 DPI

2400 DPI

3200 DPI

4800 DPI

6400 DPI

6400 DPI



Image 3.1: Overview of the TECKNET Wireless Mouse components, including Left Button, Right Button, Scroll Switch, DPI Switch Button, Forward Button, Backward Button, and Charging Port. The USB Receiver and Power Switch are located on the underside.

- **Left Button:** Standard click function.
- **Right Button:** Context menu function.
- **Scroll Switch (Scroll Wheel):** For vertical scrolling and middle-click function.
- **DPI Switch Button:** Adjusts cursor sensitivity (DPI).

- **Forward Button:** Navigates forward in web browsers or file explorers.
- **Backward Button:** Navigates backward in web browsers or file explorers.
- **Charging Port:** Connects the USB charging cable.
- **USB Receiver:** Connects the mouse wirelessly to your computer.
- **Power Switch:** Turns the mouse On/Off.

4. SETUP AND INSTALLATION

Follow these steps to set up your TECKNET Wireless Mouse.

1. **Locate the USB Receiver:** The USB receiver is stored in a compartment on the underside of the mouse. Gently slide open the cover to retrieve it.
2. **Insert the USB Receiver:** Plug the USB receiver into an available USB port on your computer.
3. **Power On the Mouse:** Locate the power switch on the underside of the mouse and slide it to the "ON" position.
4. **Automatic Connection:** The mouse will automatically connect to your computer. No additional drivers are typically required for Windows, Mac, Chrome OS, or Linux systems.



Image 4.1: The TECKNET Wireless Mouse positioned next to a laptop, illustrating the USB receiver plugged into a USB port for immediate use.

5. OPERATING INSTRUCTIONS

5.1 DPI Adjustment

The mouse features 6 adjustable DPI levels, allowing you to customize cursor sensitivity for different tasks. Press the DPI Switch Button (located behind the scroll wheel) to cycle through the available settings.

- Available DPI settings: 1000, 1600, 2400, 3200, 4800, 6400 DPI.
- Higher DPI settings result in faster cursor movement, suitable for gaming or large displays.
- Lower DPI settings provide more precise control, ideal for detailed work or general office use.

Ergonomic Design



Windows



Linux



Chrome OS



MAC OS

Image 5.1: Visual representation of the TECKNET Wireless Mouse's 6-DPI adjustment feature, displaying settings from 1000 DPI to 6400 DPI.

5.2 Silent Operation

The mouse is designed with quiet click buttons and a smooth scroll wheel to minimize operational noise. This feature makes it suitable for environments where noise reduction is important, such as libraries, offices, or during late-night use.

A young man with light brown hair, wearing a white t-shirt, is sitting at a white desk, focused on his work. He is using a black TECKNET Wireless Mouse with his right hand and a white keyboard with his left. In the background, a young woman with blonde hair, also in a white t-shirt, is sitting on a light-colored sofa, reading a book. The room is bright and airy, with large windows in the background. The overall atmosphere is calm and professional.

Silent Click

Quiet Clicks, Peaceful Workspace



8,000,000 Clicks & Counting

Image 5.2: A user operating the TECKNET Wireless Mouse in a quiet setting, highlighting its silent click feature for a peaceful workspace.

6. CHARGING THE MOUSE

The TECKNET Wireless Mouse is equipped with a built-in 800mAh rechargeable battery.

- **Charging Time:** A full charge typically takes approximately 1.5 hours.
- **Battery Life:** A single full charge can provide up to 3 months of usage, depending on usage patterns.
- **Charging Procedure:** Connect the provided USB charging cable to the mouse's charging port and to a USB power source (e.g., computer USB port, USB wall adapter). An indicator light on the mouse will typically show charging status.

Rechargeable Wireless Mouse

Long Lasting Battery Life

8000mAh



Image 6.1: The TECKNET Wireless Mouse being charged via its USB cable, with an overlay indicating a 1.5-hour full charge provides up to 3 months of working time.

7. MAINTENANCE

To ensure the longevity and optimal performance of your mouse, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the mouse surface. For stubborn dirt, a slightly damp cloth can be used, ensuring no moisture enters the internal components.
- **Storage:** When not in use for extended periods, turn off the mouse using the power switch to conserve battery life. Store the USB receiver inside the mouse's designated compartment to prevent loss.
- **Avoid Extreme Conditions:** Do not expose the mouse to extreme temperatures, direct sunlight, or high humidity.
- **Handle with Care:** Avoid dropping the mouse or subjecting it to strong impacts.

8. TROUBLESHOOTING

If you encounter issues with your TECKNET Wireless Mouse, refer to the following common solutions:

Problem	Solution
Mouse not responding	◦ Ensure the mouse is powered on. ◦ Check if the USB receiver is securely plugged into a working USB port. Try a different USB port. ◦ Recharge the mouse battery. ◦ Restart your computer.
Cursor movement is erratic or slow	◦ Clean the optical sensor on the underside of the mouse. ◦ Ensure you are using the mouse on a suitable surface (non-reflective, non-transparent). ◦ Adjust the DPI setting using the DPI Switch Button. ◦ Check for interference from other wireless devices.
Forward/Backward buttons not working	◦ These buttons are typically supported by most operating systems and web browsers. Ensure your application supports these functions. ◦ Check for any specific software or driver conflicts on your system.

9. SPECIFICATIONS

- **Model:** B0DXQ1T5VW
- **Connectivity:** 2.4G Wireless (USB Receiver)
- **DPI Levels:** 1000, 1600, 2400, 3200, 4800, 6400 DPI
- **Buttons:** 6 (Left, Right, Scroll Wheel, DPI Switch, Forward, Backward)
- **Battery:** Built-in 800mAh Rechargeable
- **Charging Time:** Approximately 1.5 hours
- **Battery Life:** Up to 3 months (depending on usage)
- **Operating Range:** Up to 49 feet (15 meters)
- **Movement Detection Technology:** Optical
- **Special Feature:** Soundless (Silent Click)
- **Compatibility:** Windows, Mac, Chrome OS, Linux
- **Item Weight:** 5 ounces
- **Package Dimensions:** 5 x 3.98 x 1.93 inches

10. WARRANTY AND SUPPORT

TECKNET provides a 36-month (3-year) warranty for this product, ensuring long-term reliability and peace of mind. For technical assistance, warranty claims, or any product-related inquiries, please contact TECKNET customer support through their official channels or visit their website for more information.

Contact Information: Refer to the TECKNET official website or product packaging for the most current support contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question