

[manuals.plus](#) /› [Sharp](#) /› [SHARP QW-V1014A-BK Dishwasher User Manual](#)

## Sharp QW-V1014A-BK

# SHARP QW-V1014A-BK Dishwasher User Manual

**MODEL: QW-V1014A-BK**

## 1. Introduction

Thank you for choosing the SHARP QW-V1014A-BK Dishwasher. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your appliance. Please read these instructions carefully before using the dishwasher and keep them for future reference.

## 2. Safety Instructions

To reduce the risk of fire, electric shock, or injury when using your dishwasher, follow these basic precautions:

- Read all instructions before using the appliance.
- This appliance must be grounded. Connect only to a properly grounded outlet.
- Do not operate the dishwasher if it has a damaged power cord or plug, or if it is not working properly.
- Keep children away from detergent and rinse aid.
- Do not allow children to play in or on the dishwasher.
- Use only detergents and rinse aids recommended for automatic dishwashers.
- Do not wash plastic items unless they are marked 'dishwasher safe'.
- Load sharp items so they are not likely to damage the door seal or tub.
- Do not tamper with controls.
- Always disconnect the appliance from the power supply before cleaning or performing maintenance.

## 3. Product Overview

The SHARP QW-V1014A-BK is a 60 cm freestanding dishwasher designed for 14 place settings. It features an Inverter motor, a digital touch LED display, and a stainless steel tub for durability. The appliance incorporates advanced technologies such as Ecobox, Auto-Door, Water Box, and a Turbidity sensor for efficient and effective cleaning.



Figure 1: Front view of the SHARP QW-V1014A-BK Dishwasher, showcasing its black finish and sleek design.



Figure 2: Interior view of the SHARP QW-V1014A-BK Dishwasher, showing the baskets, spray arms, and filter system.

## 4. Setup and Installation

---

## 4.1 UNPACKING

Carefully remove all packaging materials. Inspect the dishwasher for any damage. Report any damage to your retailer immediately.

## 4.2 PLACEMENT

Place the dishwasher on a firm, level floor. Ensure it is positioned near a water supply, drain, and electrical outlet. Avoid placing it near heat sources.

## 4.3 WATER CONNECTION

Connect the water inlet hose to a cold water supply with a minimum pressure of 0.04 MPa and a maximum of 1 MPa. Ensure the drain hose is properly connected to a suitable drain system, preventing kinks or blockages.

## 4.4 ELECTRICAL CONNECTION

Connect the dishwasher to a dedicated 220V, 50Hz grounded electrical outlet. Do not use extension cords or adapters.

## 4.5 SALT AND RINSE AID FILLING

Before first use, fill the salt dispenser with dishwasher salt and the rinse aid dispenser with rinse aid. Refer to the indicators on the control panel for levels.

## 4.6 FIRST USE

Run an empty cycle with detergent to clean the interior before loading dishes for the first time.

# 5. Operating Instructions

---

## 5.1 CONTROL PANEL

The dishwasher features a digital touch LED display and various control buttons:

- **Start / Pause:** To begin or temporarily stop a wash cycle.
- **Display:** Shows delay start time, remaining time, and program indicators.
- **Delay Timer:** Set a delayed start for up to 24 hours.
- **Eco Wash:** Activates the energy-saving Eco program.
- **Half Load:** Option for washing smaller loads with reduced water and energy consumption (3 modes available).
- **Tablet:** Optimizes wash cycle for all-in-one detergent tablets.
- **Extra Hygiene:** Increases wash temperature for enhanced sanitization.
- **Extra Drying:** Extends the drying phase for better results.
- **Extra Silent (Silent Wash):** Reduces noise during operation.
- **Extra Fast:** Shortens the wash cycle duration.
- **Energy Save:** Reduces energy consumption.
- **Child Lock:** Prevents accidental changes to settings.

## 5.2 LOADING DISHES

Load dishes carefully to ensure proper water circulation. Scrape off large food particles. Place larger items in the lower basket, smaller items and glasses in the upper basket, and cutlery in the 3rd basket or cutlery basket.

## 5.3 DETERGENT DISPENSER

Open the detergent dispenser and add the appropriate amount of powder or a detergent tablet. Close the dispenser lid securely.

## 5.4 PROGRAM SELECTION

The dishwasher offers 10 washing programs:

1. **Prewash:** For rinsing dishes that will be washed later.
2. **Mini 14' (Jet Wash):** A very quick wash for lightly soiled items.
3. **Quick 30' 40°C:** A fast wash for lightly soiled dishes.
4. **Eco:** Energy-efficient program for normally soiled dishes.
5. **Super 50' 65°C (Quick Clean):** A rapid and effective wash for daily use.
6. **Dual Pro Wash 60°C:** Intensive cleaning for mixed loads.
7. **Smart 30°C - 50°C:** Automatic program adjusting temperature based on soil level.
8. **Smart 50°C - 60°C:** Automatic program for medium to heavily soiled dishes.
9. **Steam Wash:** Uses steam for stubborn dirt and improved hygiene.
10. **Save+ 5.4 lt:** An ultra-low water consumption program.

## 5.5 STARTING A CYCLE

Close the dishwasher door firmly. Select your desired program and any additional options. Press the Start/Pause button to begin the cycle.

## 5.6 CHILD LOCK

To activate or deactivate the Child Lock, refer to your control panel instructions. This feature prevents accidental program changes during operation.

## 5.7 ADVANCED TECHNOLOGIES

- **Auto-Door Technology:** The door automatically opens slightly at the end of the cycle to facilitate drying.
- **Ecobox Technology:** Optimizes water and energy consumption.
- **Water Box:** An internal water storage system for efficient water usage.
- **Turbidity Sensor (Smart Wash):** Detects the soil level of the water and adjusts the wash program accordingly.
- **Turbo Drying System:** Enhances drying performance.
- **Water Softener System:** Improves wash results in hard water areas.
- **Electrical Diverter System:** Directs water to specific spray arms for targeted cleaning.

# 6. Maintenance and Care

---

## 6.1 CLEANING FILTERS

Regularly clean the antibacterial filter system located at the bottom of the dishwasher. Remove food debris and rinse under running water. Reassemble correctly to ensure proper drainage.

## 6.2 CLEANING SPRAY ARMS

Check the spray arm nozzles for blockages. If necessary, remove the spray arms and clear any obstructions with a thin object.

## 6.3 CLEANING THE INTERIOR AND EXTERIOR

Wipe the exterior with a damp cloth. Clean the interior with a dishwasher cleaner or a mixture of vinegar and water periodically to prevent odors and limescale buildup.

## 6.4 REFILLING SALT AND RINSE AID

The control panel features indicators for rinse aid and salt levels. Refill these compartments when the indicators illuminate.

# 7. Troubleshooting

Before contacting service, review the following common issues and solutions:

- **Dishwasher does not start:** Check power connection, door closure, and ensure a program is selected.
- **Dishes are not clean:** Verify proper loading, detergent amount, program selection, and clean filters/spray arms.
- **Water not draining:** Check drain hose for kinks or blockages, and ensure the filter is clean.
- **Leaks:** Inspect hose connections and door seal for damage or improper seating.
- **Unusual noise:** Ensure dishes are not obstructing spray arms and that the dishwasher is level.

If problems persist after attempting these solutions, please contact authorized service personnel.

# 8. Specifications

Model Name	QW-V1014A-BK
Item Weight	53 Kilograms
Voltage	220V
Style	Modern, Black
Display Type	LED Digital Touch
Number of Programs	10
Product Dimensions (D x W x H)	60 x 60 x 85 cm
Efficiency	A+
Annual Energy Consumption	27 Kilowatt Hours
Capacity	14 Place Settings
Special Features	Digital Display, Touch Panel, Inverter Motor, Auto-Door, Turbidity Sensor
Color	Black
Controls Type	Touch
Noise Level	44 Decibels
Installation Type	Freestanding
Tub Material	Stainless Steel

# 9. Warranty and Support

## 9.1 WARRANTY INFORMATION

This SHARP QW-V1014A-BK Dishwasher comes with a **3 Years full free warranty**. Please retain your purchase receipt as proof of purchase for warranty claims. The warranty covers manufacturing defects and malfunctions under normal use conditions.

## 9.2 CUSTOMER SUPPORT

For technical assistance, service requests, or warranty inquiries, please contact your local authorized SHARP service center. Contact details can typically be found on the warranty card included with your product or on the official SHARP website for your region.