

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [LEXiBOOK](#) /

› [LEXiBOOK Moana Nightlight Alarm Clock RL800VN User Manual](#)

LEXiBOOK RL800VN

LEXiBOOK Moana Nightlight Alarm Clock RL800VN User Manual

Model: RL800VN

INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your LEXiBOOK Moana Nightlight Alarm Clock, model RL800VN. Please read this manual thoroughly before using the product to ensure proper function and longevity.

PRODUCT FEATURES

- Moana character nightlight function.
- Digital LCD screen with adjustable backlight (on/off).
- 6 Moana-inspired alarm sounds and 6 ringtones with adjustable volume.
- Snooze function.
- Low battery indicator.
- Battery operated (3 x AA/LR6 batteries, not included).

SETUP

1. Battery Installation

The LEXiBOOK Moana Nightlight Alarm Clock requires 3 AA/LR6 batteries (not included) for operation.

1. Locate the battery compartment on the underside of the alarm clock.
2. Open the battery compartment cover.
3. Insert 3 AA/LR6 batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.



Image: Rear view of the alarm clock, highlighting the battery compartment and control buttons.

2. Initial Power On

Once batteries are installed, the LCD screen will power on. You may need to set the time and alarm.

OPERATING INSTRUCTIONS

Setting the Time

Specific button labels may vary. Generally, look for a **SET** or **TIME SET** button.

1. Press the **SET** button to enter time setting mode.
2. Use the **+** and **-** buttons to adjust the hours.
3. Press **SET** again to move to minutes, then use **+** and **-** to adjust.
4. Press **SET** one more time to confirm and exit time setting mode.

Setting the Alarm

Look for an **ALARM SET** button, often indicated by a bell icon.

1. Press the **ALARM SET** button to enter alarm setting mode.
2. Use the **+** and **-** buttons to adjust the alarm hours.
3. Press **ALARM SET** again to move to alarm minutes, then use **+** and **-** to adjust.
4. Press **ALARM SET** to confirm.
5. To activate/deactivate the alarm, press the **ALARM ON/OFF** button. An alarm icon will appear/disappear on the display.

Selecting Alarm Sounds/Ringtones

The clock offers 6 Moana-inspired sounds and 6 ringtones.

1. While in alarm setting mode (or a dedicated sound setting mode, refer to specific button labels), use the **SOUND** or **MUSIC** button to cycle through available options.
2. Adjust the volume using the dedicated volume buttons or the **+** and **-** buttons when not in time/alarm setting mode.

Nightlight Function

Press the Moana figure on top of the clock to activate the nightlight. The figure will light up. Press again to turn off. The LCD screen backlight can be toggled on or off for glare-free nights.

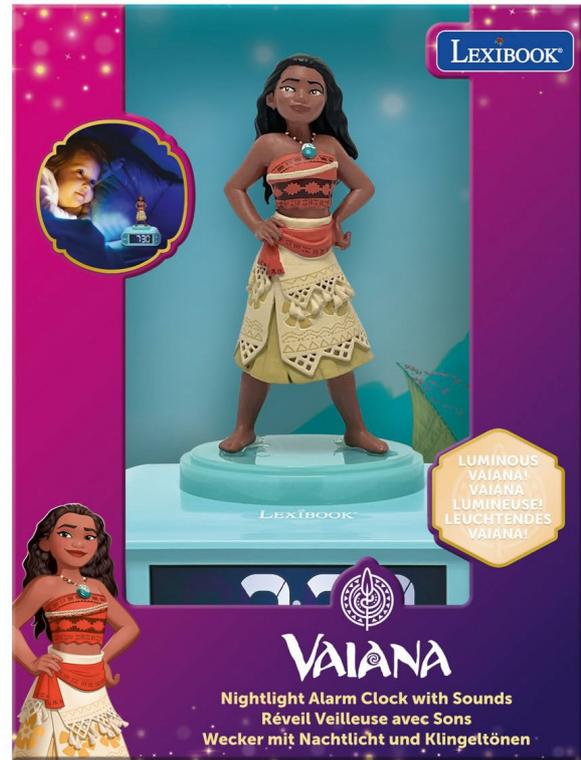


Image: The alarm clock with the Moana figure illuminated, showing the time 7:30.



Image: A child asleep in bed with the Moana nightlight alarm clock providing a soft glow.

Snooze Function

When the alarm sounds, press the top of the clock (or the Moana figure) to activate the snooze function. The alarm will temporarily stop and sound again after a few minutes (typically 5-10 minutes).

MAINTENANCE

Cleaning

Wipe the alarm clock with a soft, dry cloth. Do not use abrasive cleaners or solvents, as these may damage the surface.

Battery Replacement

When the low battery indicator appears on the display, replace all 3 AA/LR6 batteries promptly to ensure continued functionality. Follow the battery installation steps outlined in the Setup section.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock does not turn on.	Batteries are not installed or are depleted.	Install new AA/LR6 batteries, ensuring correct polarity.
Alarm does not sound.	Alarm is not activated or volume is too low.	Ensure the alarm icon is displayed. Increase alarm volume.
Nightlight does not illuminate.	Batteries are low or depleted.	Replace batteries.
Time display is incorrect.	Time was not set correctly or batteries were removed.	Reset the time following the operating instructions.

SPECIFICATIONS

Model: RL800VN

Brand: LEXiBOOK

Power Source: 3 x AA/LR6 batteries (not included)

Display Type: Digital LCD

Dimensions: 3.54"W x 7.17"H

Material: Plastic

Special Features: Sounds & Melodies, Backlit LCD Display, Nightlight, Snooze

IMPORTANT SAFETY INFORMATION

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Remove batteries if the product is not to be used for an extended period.
- Dispose of depleted batteries properly according to local regulations.
- This product is not a toy. Adult supervision is recommended for young children.

VIDEO DEMONSTRATION

Your browser does not support the video tag.

Video: An official demonstration of the LEXiBOOK Moana Nightlight Alarm Clock, showcasing its features and operation.

