

ODK B010116SPD07USDF-1

ODK 48-Inch Computer Desk User Manual

Model: B010116SPD07USDF-1

1. INTRODUCTION

Thank you for choosing the ODK 48-Inch Computer Desk. This manual provides detailed instructions for assembly, operation, maintenance, and troubleshooting to ensure you get the most out of your new desk. Designed for home offices and small spaces, this desk offers a spacious and stylish workstation for writing, studying, or gaming.

Its simple and modern design seamlessly integrates with various decor styles, providing a comfortable and efficient workspace.

2. PRODUCT OVERVIEW

The ODK Computer Desk is built with durability and functionality in mind. Key features include:

- **Spacious Desktop:** Accommodates computers, notebooks, and office essentials.
- **Durable Construction:** Reinforced metal frame with powder-coated finish and high-quality particle board tabletop.
- **Waterproof & Scratch-Resistant:** Tabletop designed for everyday use and easy cleaning.
- **Enhanced Stability:** Reinforced structure at the back prevents wobbling.
- **Space-Saving Storage:** Includes a side hook for headphones, bags, or cables.
- **Adjustable Feet Pads:** Ensures stability on uneven surfaces.



Figure 2.1: The ODK 48-Inch Computer Desk, showcasing its spacious design and modern aesthetic.

3. SETUP AND ASSEMBLY

Assembly of your ODK Computer Desk is designed to be straightforward. All necessary tools and labeled parts are included. Please follow these steps carefully:

1. **Unpack Components:** Carefully remove all parts from the packaging. Verify that all components listed in the instruction sheet are present and undamaged.
2. **Assemble Side Frames:** Attach the horizontal crossbars to the vertical side frames using the provided screws. Ensure all connections are secure but do not fully tighten screws until all parts are aligned.
3. **Attach Tabletop:** Once the frame is assembled, carefully place the tabletop onto the frame, aligning the pre-drilled holes. Secure the tabletop to the frame using the remaining screws.
4. **Tighten All Screws:** After all parts are in place and aligned, fully tighten all screws to ensure maximum stability.
5. **Adjust Feet Pads:** Turn the desk upright. Adjust the feet pads at the bottom of the legs to level the desk on uneven surfaces and prevent wobbling.



Figure 3.1: The desk's surface, highlighting its smooth finish and elegant texture.



Figure 3.2: Detail of the convenient side hook for accessories.

4. OPERATING INSTRUCTIONS

Your ODK Computer Desk is designed for versatile use in various settings. Consider the following for optimal operation:

- **Placement:** Position the desk on a flat, stable surface. Utilize the adjustable feet pads to compensate for any unevenness in the floor.
- **Weight Capacity:** The desk is designed to support a maximum weight of 110 lbs (approximately 50 kg) evenly distributed across the surface. Avoid placing excessive weight on any single point.
- **Headphone Hook:** Use the integrated side hook to keep your headphones, bags, or cables organized and off the desktop, maximizing your workspace.



Figure 4.1: Desk dimensions and maximum weight capacity.

5. MAINTENANCE AND CARE

To maintain the appearance and longevity of your ODK Computer Desk, please follow these simple care instructions:

- **Cleaning:** Wipe the tabletop and frame with a soft, damp cloth. For stubborn marks, a mild soap solution can be used, followed by drying with a clean cloth. Avoid harsh chemicals or abrasive cleaners.
- **Spills:** The tabletop is waterproof. In case of spills, wipe them immediately to prevent any potential damage or staining.
- **Protection:** While the tabletop is scratch-resistant, using coasters for drinks and protective pads for heavy or sharp objects is recommended to preserve its finish.
- **Regular Checks:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary to maintain stability.

6. TROUBLESHOOTING

If you encounter any issues with your ODK Computer Desk, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Desk is wobbly.	Screws are loose or feet pads are uneven.	Ensure all assembly screws are fully tightened. Adjust the feet pads until the desk is stable.
Missing parts during assembly.	Packaging error or parts overlooked.	Double-check all packaging materials. If parts are genuinely missing, contact ODK customer support with your purchase details.
Surface scratches or damage.	Improper handling or sharp objects.	While scratch-resistant, extreme force can cause damage. Use protective mats for heavy items. For minor scratches, touch-up pens may be available from furniture stores.

7. SPECIFICATIONS

Attribute	Detail
Brand	ODK
Model Number	B010116SPD07USDF-1
Product Dimensions (D x W x H)	48"D x 18.9"W x 29.13"H
Color	White
Style	Modern
Top Material Type	Engineered Wood
Base Material	Metal (feet Pad)
Item Weight	20.5 Pounds
Maximum Weight Capacity	110 lbs (approx. 50 kg)
Included Components	Headphone Hook
Required Assembly	Yes
Includes All Assembly Tools	Yes

8. WARRANTY AND SUPPORT

ODK is committed to providing healthy, comfortable home furniture. This product comes with a Limited Warranty. For specific warranty details, please refer to the documentation included with your purchase or contact ODK customer service.

If you have any questions, require assistance with assembly, or need to report missing/damaged parts, please contact our customer support team. We are dedicated to resolving your concerns and ensuring your satisfaction.

ODK Customer Service:

- Visit the [ODK Store on Amazon](#) for more information and contact options.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question