



[Manuals.plus](#) /

› [VOYSIGN](#) /

› VOYSIGN Foldable Wagon Cart Instruction Manual (Model 3-VS23FW04-01BK)

VOYSIGN 3-VS23FW04-01BK

VOYSIGN Foldable Wagon Cart Instruction Manual

Model: 3-VS23FW04-01BK

INTRODUCTION

Thank you for choosing the VOYSIGN Foldable Wagon Cart. This manual provides essential information for the safe and efficient use of your wagon. Please read it thoroughly before operation and retain it for future reference.

This heavy-duty utility wagon is designed for various outdoor and household tasks, featuring a robust construction and all-terrain wheels for versatile use.



Image: The VOYSIGN Foldable Wagon Cart in its fully assembled, open configuration, showcasing its spacious interior and sturdy wheels.

SAFETY INFORMATION

- Do not exceed the maximum weight capacity of 300 lbs (136 kg).
- Ensure the wagon is fully unfolded and locked before loading.
- Distribute weight evenly to maintain stability.
- Always engage wheel brakes when parking on inclines or uneven surfaces.
- Keep hands and fingers clear of moving parts during folding and unfolding.
- Not intended for transporting children or pets without proper safety restraints and supervision.
- Avoid prolonged exposure to extreme weather conditions to prevent material degradation.

SETUP AND ASSEMBLY

The VOYSIGN Foldable Wagon Cart comes largely pre-assembled. Initial setup primarily involves unfolding the unit and adjusting

the handle.

1. Unfolding the Wagon

1. Place the folded wagon on a flat, stable surface.
2. Grasp the top edges of the wagon and pull them apart gently. The wagon frame will begin to expand.
3. Push down on the center of the wagon's base until it is fully extended and flat. Ensure all frame joints are securely locked into place.



Image: Visual guide demonstrating the three-step process of unfolding the wagon from its compact state to its operational form.

2. Handle Adjustment

- The wagon features an adjustable handle for comfortable pulling.
- To adjust the length, locate the locking mechanism on the handle shaft and release it. Extend or retract the handle to your desired length, then secure the locking mechanism.
- The handle also offers angle adjustment for ergonomic use. Pivot the handle to the desired angle.

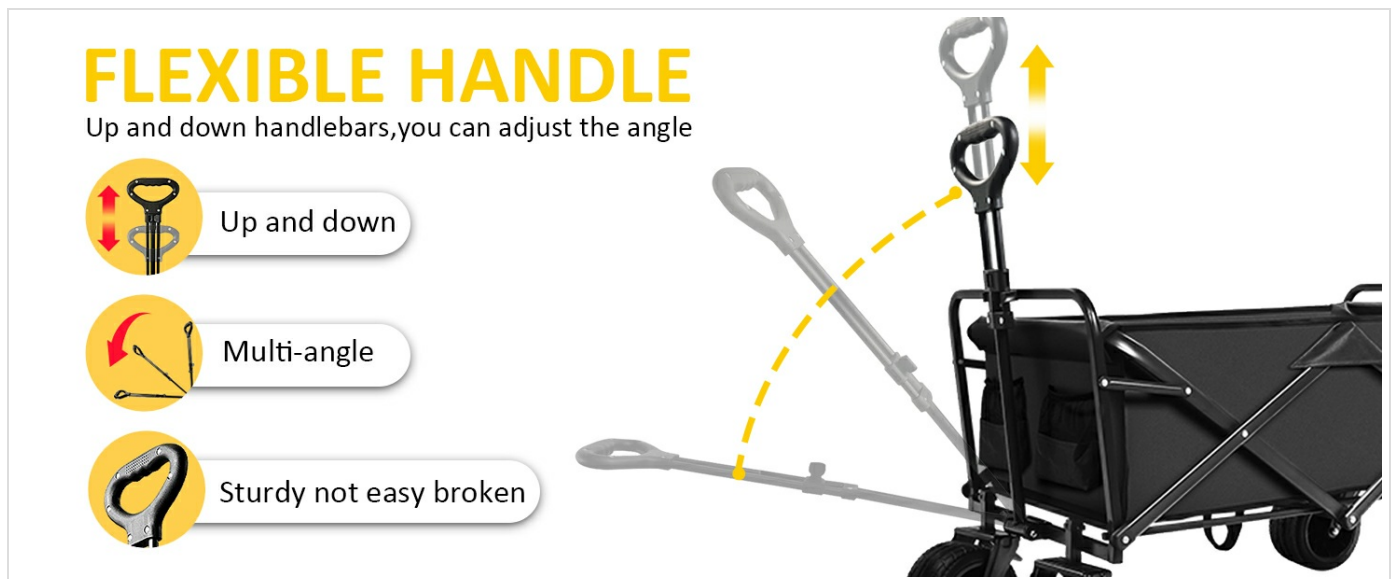


Image: Illustration of the wagon's flexible handle, highlighting its adjustable length and multi-angle pivot capabilities for user comfort.

OPERATING INSTRUCTIONS

Loading the Wagon

- Ensure the wagon is fully open and stable before loading.
- Place items evenly within the wagon's fabric liner. Do not overload one side.
- The maximum load capacity is 300 lbs (136 kg). Do not exceed this limit.
- Utilize the integrated cup holders for beverages or small items.

Maneuvering and Braking

- The wagon is equipped with 360-degree swivel wheels, allowing for easy navigation and tight turns.
- The all-terrain wheels are designed for various surfaces including grasslands, gravel roads, concrete, and wet conditions.
- To engage the brakes, press down on the brake levers located on the wheels. To release, lift the levers. Always engage brakes when stationary, especially on slopes.



Image: Detailed view of the all-terrain wheel, illustrating its shock-absorbing, low-noise design, and the brake function, suitable for diverse ground types.

Folding for Storage

1. Ensure the wagon is empty.
2. Locate the pull tab or strap in the center of the wagon's base. Pull upwards firmly.
3. As you pull, the sides of the wagon will collapse inward. Continue until the wagon is fully folded into its compact form.
4. Secure any straps or clips to keep the wagon in its folded position for easy transport and storage.



Image: The wagon in its compact, folded state, demonstrating how easily it can be stored in a vehicle's trunk, highlighting its portability.

MAINTENANCE

- **Cleaning the Fabric Liner:** The fabric liner is removable and washable. Detach it from the frame and clean according to fabric care instructions (typically hand wash or gentle cycle with mild detergent). Allow to air dry completely before reattaching.
- **Frame Cleaning:** Wipe the metal frame with a damp cloth to remove dirt and debris. For best results and to prevent rust, dry the frame thoroughly after cleaning, especially if it has been exposed to water or moisture.
- **Wheel Maintenance:** Periodically check wheels for debris or wear. Clean any obstructions from the wheel axles to ensure smooth operation.
- **Storage:** Store the wagon in a dry, protected area when not in use to prolong its lifespan.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Wagon does not unfold/fold smoothly.	Frame joints are stiff or obstructed.	Ensure no items are inside. Apply gentle, even pressure. Check for debris in joints.
Wheels are not turning freely.	Debris caught in wheels or axles; brakes engaged.	Clear any obstructions. Ensure brakes are fully disengaged.
Wagon feels unstable when loaded.	Overloaded or uneven weight distribution.	Reduce load to within 300 lbs capacity. Redistribute items evenly.
Rust spots appear on the frame.	Exposure to moisture without proper drying.	Wipe down the frame with a dry cloth immediately after exposure to water. Store in a dry environment.

SPECIFICATIONS

Feature	Detail
Brand	VOYSIGN
Model Number	3-VS23FW04-01BK
Product Dimensions (Unfolded)	Approx. 38.2"L x 23.6"W x 38"H (from image)
Product Dimensions (Folded)	Approx. 6"D x 23.6"W x 28"H (from image)
Item Dimensions (Internal/Basket)	29.92"D x 10.63"W x 14.57"H (from product specifications)
Weight Capacity Maximum	300 Pounds (136 kg)
Item Weight	11.66 Kilograms (approx. 25.7 lbs)
Material	Metal (Frame), 600D Oxford (Fabric Liner)
Color	Black
Special Feature	Adjustable Handle, Removable/Washable Fabric
Caster Type	Swivel, All-Terrain

Feature	Detail
Required Assembly	No (Minimal unfolding required)



Image: Diagram illustrating the key dimensions of the wagon in both its open and folded states, including overall length, width, height, and folded depth.

WARRANTY AND SUPPORT

Specific warranty information for the VOYSIGN Foldable Wagon Cart is not provided in this manual. For details regarding warranty coverage, returns, or technical support, please contact VOYSIGN customer service directly or refer to the product's purchase documentation.

You may also visit the official VOYSIGN store on Amazon for additional product information and support resources: [VOYSIGN Store](#)

