

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Cherub](#) /

› [Cherub WST-670 Rechargeable Clip-On Tuner User Manual](#)

## Cherub WST-670

# Cherub WST-670 Rechargeable Clip-On Tuner

User Manual

## INTRODUCTION

---

Thank you for choosing the Cherub WST-670 Rechargeable Clip-On Tuner. This compact and versatile tuner is designed for precise tuning of various musical instruments, including chromatic, guitar, ukulele, and violin. Featuring a high-contrast color LCD display and a long-lasting rechargeable battery, it offers convenience and accuracy for musicians of all levels.

## PACKAGE CONTENTS

---

Please check the package for the following items:

- 1 x Cherub WST-670 Clip-On Tuner
- 1 x USB Charging Cable
- 1 x User Manual (this document)

## PRODUCT OVERVIEW

---

The Cherub WST-670 tuner features a robust clip mechanism and a clear display for easy readability. Its intuitive controls allow for quick mode selection and precise tuning.



Image: Front view of the Cherub WST-670 Clip-On Tuner, showing the display and clip mechanism.



### Clip-on tuner with chromatic(C), guitar(G), ukulele(U), violin(V) tuning modes

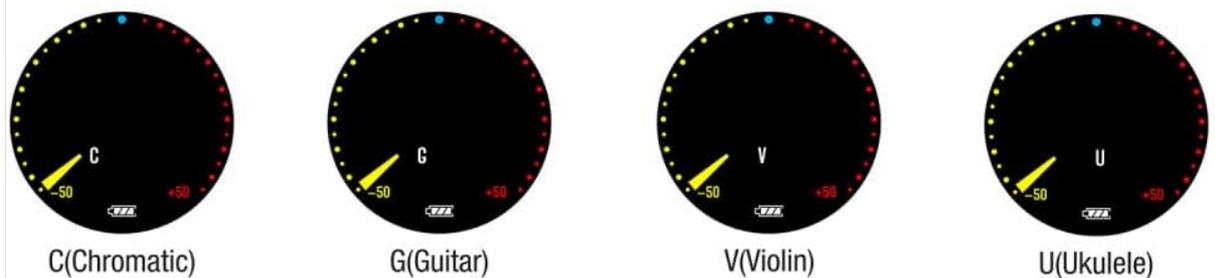


Image: Close-up of the Cherub WST-670 Tuner's color LCD display, showing tuning indicators and battery level.

## Key Features:

- **Tuning Modes:** Chromatic (C), Guitar (G), Ukulele (U), Violin (V).
- **Rechargeable Battery:** Built-in Li-Po battery provides over 10 hours of continuous use per charge.
- **High-Contrast LCD:** Bright and clear color display shows tuning status.
- **Adjustable Clip:** Strong and flexible clip for optimal viewing angle.
- **Auto Power-Off:** Automatically turns off to maximize battery life.

## SETUP

### 1. Charging the Tuner

Before first use, fully charge the tuner. The built-in rechargeable battery ensures long operation time.

1. Connect the included USB charging cable to the tuner's charging port.
2. Connect the other end of the USB cable to a standard USB power adapter (not included) or a computer's USB port.
3. The battery indicator on the display will show charging status. Once fully charged, the indicator will

show a full battery.



Image: Diagram illustrating how to connect the USB charging cable to the Cherub WST-670 Tuner for recharging.

## 2. Attaching the Tuner

The clip-on design allows for easy attachment to the headstock of your instrument.

- Gently open the clip and attach it securely to the headstock of your guitar, ukulele, or violin.
- Adjust the tuner's display angle for optimal visibility.

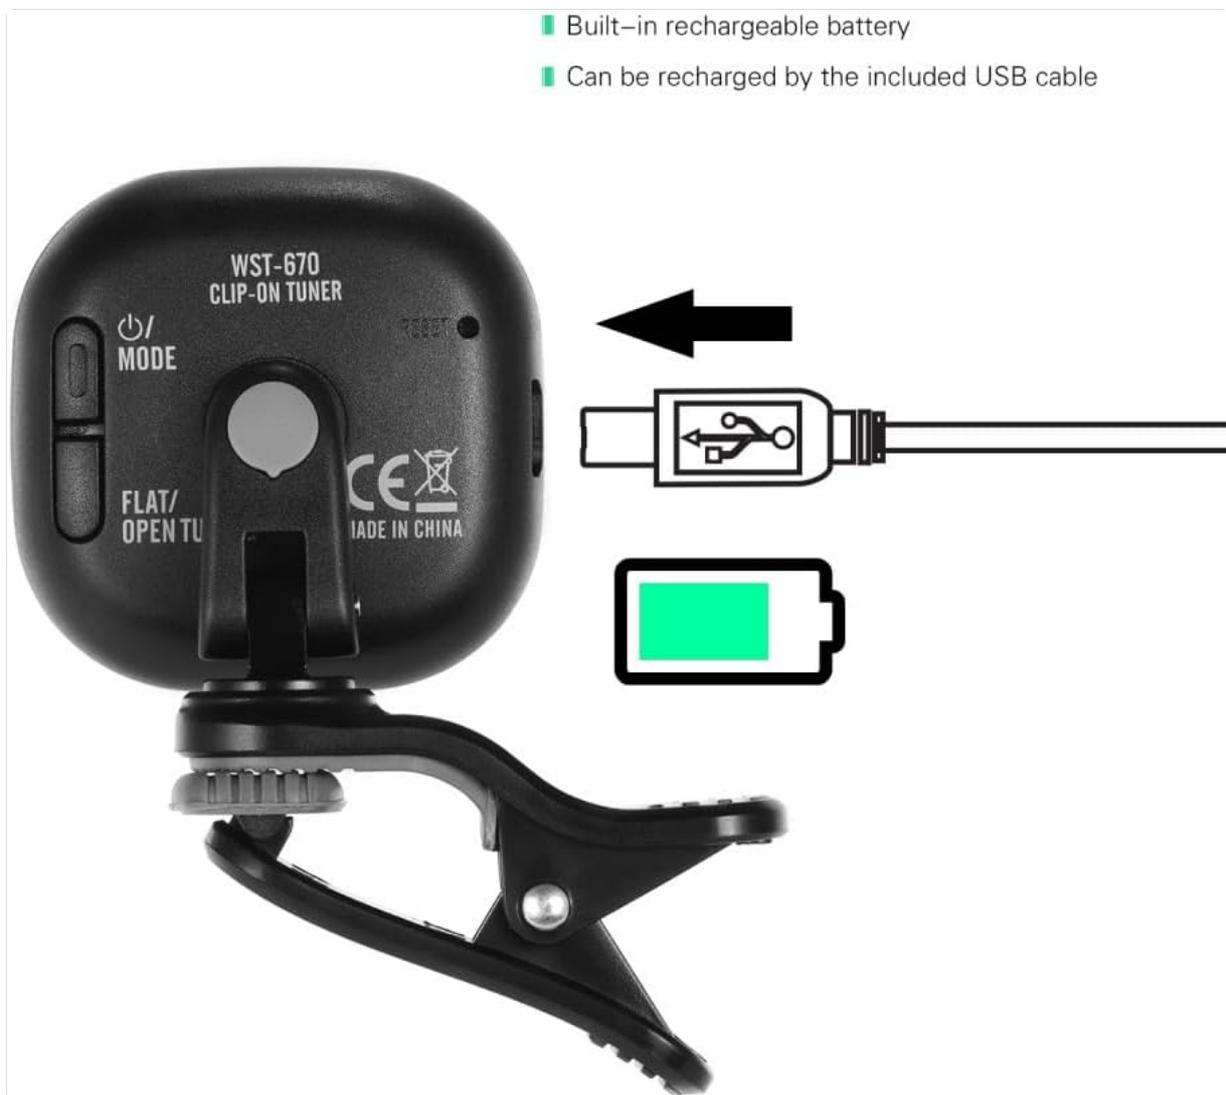


Image: The Cherub WST-670 Tuner securely clipped onto the headstock of an acoustic guitar.

## OPERATING INSTRUCTIONS

### 1. Power On/Off

- To power on, press and hold the power button (usually marked with a power symbol) for a few seconds.
- To power off, press and hold the power button again. The tuner also features an auto power-off function to save battery.

### 2. Selecting Tuning Mode

The WST-670 supports multiple tuning modes:

- **Chromatic (C):** For all instruments, displays the exact note.
- **Guitar (G):** Optimized for guitar tuning.
- **Ukulele (U):** Optimized for ukulele tuning.
- **Violin (V):** Optimized for violin tuning.

To change the tuning mode, press the "MODE" button repeatedly until the desired mode (C, G, U, or V) is displayed on the screen.

### 3. Tuning Your Instrument

1. Ensure the tuner is powered on and the correct tuning mode is selected for your instrument.
2. Pluck a single string on your instrument. The tuner will detect the vibration and display the note.
3. **Interpreting the Display:**
  - If the needle points to the left and the display is red/yellow, the note is flat. Tighten the string.
  - If the needle points to the right and the display is red/yellow, the note is sharp. Loosen the string.
  - When the note is in tune, the needle will be centered, and the display will turn green.
4. Repeat for all strings until your instrument is perfectly in tune.

## MAINTENANCE

---

### Cleaning

To clean the tuner, use a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the display or casing.

### Battery Care

- Avoid fully discharging the battery frequently to prolong its lifespan.
- If storing the tuner for an extended period, charge it to about 50% capacity and recharge every few months.
- Use only the provided USB cable or a compatible cable for charging.

## TROUBLESHOOTING

---

### Tuner not turning on:

- Ensure the battery is charged. Connect the tuner to a USB power source and allow it to charge for at least 30 minutes before attempting to power on again.
- Press and hold the power button firmly for a few seconds.

### Inaccurate tuning:

- Check that the tuner is securely clipped to the instrument's headstock. Loose attachment can affect vibration detection.
- Ensure the correct tuning mode (C, G, U, or V) is selected for your instrument.
- Tune in a quiet environment to avoid interference from external sounds.
- If using Chromatic mode, ensure you are aware of the specific notes for your instrument's standard tuning.

### Display is dim or flickering:

- The battery might be low. Recharge the tuner using the provided USB cable.

## SPECIFICATIONS

---

|               |         |
|---------------|---------|
| <b>Brand:</b> | Cherub  |
| <b>Model:</b> | WST-670 |

|                            |  |
|----------------------------|--|
| <b>Tuning Modes:</b>       | Chromatic (C), Guitar (G), Ukulele (U), Violin (V) |
| <b>Detection Range:</b>    | A0 (27.50 Hz) - C8 (4186 Hz)                       |
| <b>Detection Method:</b>   | Piezo (Clip)                                       |
| <b>Reference Pitch:</b>    | 440 Hz   |
| <b>Tuning Accuracy:</b>    | +/-1 cent  |
| <b>Power Supply:</b>       | Built-in Rechargeable Li-Po Battery (3.7V 180mAh)  |
| <b>Item Weight:</b>        | 30 g / 1.1 oz                                      |
| <b>Product Dimensions:</b> | 10.5 x 9.5 x 5 cm (approx. 4.1 x 3.7 x 2 inches)   |

## WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. For specific warranty details, please refer to the documentation provided at the time of purchase or contact your retailer. For technical support or further assistance, please contact the customer service department of your retailer.

*Note: The guitar shown in images is for illustration purposes only and is not included with the tuner.*