

[Manuals.plus](#) /

> [UNINELL HOME](#) /

> UNINELL HOME UV1 Cordless Vacuum Cleaner Replacement Battery and Power Adapter User Manual

## UNINELL HOME UV1-BP

# UNINELL HOME UV1 Cordless Vacuum Cleaner Replacement Battery and Power Adapter User Manual

Model: UV1-BP

## PRODUCT OVERVIEW

---

This manual provides essential information for the safe and effective use of your UNINELL HOME UV1 Cordless Vacuum Cleaner Replacement Battery and Power Adapter. Please read this manual thoroughly before use and retain it for future reference.



Image: The UNINELL HOME UV1 replacement battery charging base and its accompanying power adapter. The power adapter is black with a coiled cord, and the charging base is gray, designed to securely hold the vacuum battery for charging.

## SETUP

---

1. **Unpacking:** Carefully remove the replacement battery and power adapter from its packaging. Inspect for any signs of damage.
2. **Connecting the Power Adapter:**
  - Locate the charging port on the battery charging base.
  - Insert the barrel connector of the power adapter into the charging port.
  - Plug the power adapter into a standard wall outlet (100-240V AC, 50/60Hz).
3. **Inserting the Battery:**
  - Align the replacement battery with the charging base, ensuring the contacts on the battery match the contacts on the base.
  - Gently slide the battery into the base until it clicks securely into place.
4. **Initial Charge:** For optimal performance, fully charge the battery before its first use. The charging indicator light on the vacuum cleaner (when the battery is installed) or on the charging base (if applicable) will typically change color or turn off when charging is complete.

## OPERATING INSTRUCTIONS

---

### Charging the Battery

- Ensure the power adapter is connected to the charging base and plugged into a live electrical outlet.
- Place the battery into the charging base. The charging process will begin automatically.
- Charging time may vary. Refer to your original vacuum cleaner manual for specific charging duration and indicator light behavior.
- Do not leave the battery on charge for extended periods after it is fully charged to prolong battery life.

### Using the Battery with the Vacuum Cleaner

- Once fully charged, remove the battery from the charging base.
- Insert the battery into your UNINELL HOME UV1 Cordless Vacuum Cleaner according to the vacuum's instruction manual.
- The battery powers the vacuum cleaner, allowing for cordless operation.

## MAINTENANCE

---

- **Battery Care:**
  - Store the battery in a cool, dry place when not in use.
  - Avoid extreme temperatures, both hot and cold, as they can degrade battery performance and lifespan.
  - If storing for an extended period, charge the battery to approximately 50% capacity. Recharge every 3-6 months to prevent deep discharge.
  - Do not expose the battery to water or other liquids.
- **Power Adapter Care:**
  - Keep the power adapter and its cord free from kinks or damage.
  - Do not use the adapter if the cord is frayed or damaged.
  - Clean the adapter and charging base with a dry, soft cloth. Do not use liquid cleaners.
- **Disposal:** Dispose of old batteries responsibly according to local regulations. Do not dispose of batteries in household waste.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Battery not charging.	<ul style="list-style-type: none"><li>Power adapter not properly connected.</li><li>Outlet has no power.</li><li>Battery not seated correctly in charging base.</li><li>Damaged power adapter or charging base.</li></ul>	<ul style="list-style-type: none"><li>Ensure all connections are secure.</li><li>Test the outlet with another device.</li><li>Re-seat the battery firmly into the charging base.</li><li>Inspect for visible damage. If damaged, discontinue use and contact support.</li></ul>
Vacuum cleaner not powering on with new battery.	<ul style="list-style-type: none"><li>Battery not fully charged.</li><li>Battery not properly installed in vacuum.</li><li>Issue with the vacuum cleaner itself.</li></ul>	<ul style="list-style-type: none"><li>Fully charge the battery before use.</li><li>Ensure the battery is securely clicked into place in the vacuum.</li><li>Refer to your vacuum cleaner's manual for troubleshooting vacuum-specific issues.</li></ul>
Battery run time is shorter than expected.	<ul style="list-style-type: none"><li>Battery not fully charged.</li><li>Operating vacuum in high-power mode.</li><li>Battery nearing end of its lifespan.</li></ul>	<ul style="list-style-type: none"><li>Ensure battery is fully charged before each use.</li><li>Use standard power mode for longer run times.</li><li>Battery lifespan is finite; consider replacement if significantly degraded.</li></ul>

## SPECIFICATIONS

---

- **Model Name:** UV1-BP
- **Brand:** UNINELL HOME
- **Included Components:** Battery, Power Adapter
- **Is Cordless?:** Yes (for the vacuum when powered by battery)
- **Item Weight:** 4.8 ounces (approx. 136 grams)
- **Product Dimensions:** 8"L x 4"W x 4"H (approximate for the battery and adapter combined)
- **Batteries Required:** 1 A battery (included with the replacement unit)
- **Recommended Uses:** Hard Floor (for the vacuum cleaner)
- **Indoor/Outdoor Usage:** Indoor

## WARRANTY AND SUPPORT

---

This UNINELL HOME product is covered by a standard manufacturer's warranty. For specific warranty terms and conditions, please refer to the documentation provided with your original UNINELL HOME UV1 Cordless Vacuum Cleaner or contact UNINELL HOME customer support.

For technical assistance, troubleshooting not covered in this manual, or warranty claims, please contact UNINELL HOME customer service. Contact information can typically be found on the product packaging or the official UNINELL HOME website.

*Note: Protection plans may be available for purchase separately. These plans are not part of the standard manufacturer's warranty.*



© 2024 UNINELL HOME. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.