

[manuals.plus](#) /› [Geek Chef](#) /› [Geek Chef 16QT Air Fryer Toaster Oven \(Model GTO16\) Instruction Manual](#)**Geek Chef GTO16**

Geek Chef 16QT Air Fryer Toaster Oven (Model GTO16) Instruction Manual

INTRODUCTION

Thank you for choosing the Geek Chef 16QT Air Fryer Toaster Oven. This appliance combines multiple cooking functions, including air frying, baking, toasting, broiling, and warming, into a single compact unit. Designed for ease of use and efficient cooking, this manual provides essential information for safe operation, maintenance, and optimal performance of your new appliance.



Image: The Geek Chef 16QT Air Fryer Toaster Oven, showcasing its interior with a pizza on the top rack and french fries in the air fryer basket below, along with a smartphone displaying recipe videos.

IMPORTANT SAFETY INSTRUCTIONS

To ensure safe operation and prevent injury or damage, please read all instructions before using this appliance. Keep this manual for future reference.

- Always place the appliance on a stable, heat-resistant surface.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Supervise children closely when the appliance is in use.
- Avoid contact with hot surfaces. Use oven mitts or a cloth when handling hot components.
- Unplug the appliance from the outlet when not in use and before cleaning.
- Do not operate the appliance with a damaged cord or plug.
- Ensure adequate ventilation around the appliance during operation.
- Do not place any objects on top of the appliance while it is operating.

PRODUCT COMPONENTS

Your Geek Chef 16QT Air Fryer Toaster Oven comes with the following accessories:

- Baking Pan

- Air Fryer Basket
- Wire Rack
- Crumb Tray


CAN MAKE ANY DELICIOUS

Baking pan



Can Roast a Whole Chicken

Oven Rack

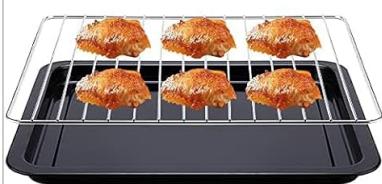

Catch the oil,
Reduce Fat by 85%

Airfryer Basket



French Fries
without Oil

Crumb Tray



Baking at
Home Easily

Image: A visual representation of the included accessories: a baking pan with a whole roasted chicken, an air fryer basket with french fries, an oven rack with baked goods, and a crumb tray.

SETUP

Follow these steps for initial setup:

1. Unpack the appliance and all accessories. Remove any packaging materials.
2. Wipe down the exterior of the oven with a damp cloth.
3. Wash all removable accessories (baking pan, air fryer basket, wire rack, crumb tray) with warm, soapy water. Rinse thoroughly and dry completely.
4. Place the oven on a flat, stable, heat-resistant surface with at least 4 inches of clearance on all sides for proper ventilation.
5. Insert the crumb tray at the bottom of the oven.
6. Plug the power cord into a grounded electrical outlet.

OPERATING INSTRUCTIONS

The Geek Chef 16QT Air Fryer Toaster Oven features four control knobs for easy operation: Timer, Temperature, Function, and Toast Darkness.

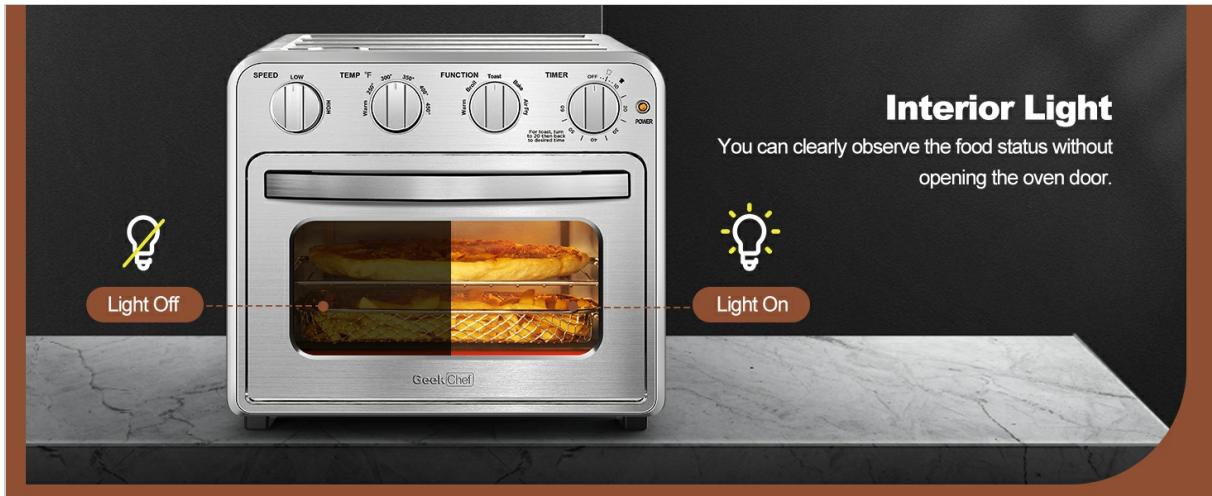


Image: Close-up of the oven's control panel, highlighting the four knobs for Speed, Temperature, Function, and Timer, along with a power button.

General Operation:

1. Place food inside the oven using the appropriate accessory (e.g., air fryer basket for air frying, baking pan for baking).
2. Turn the **Function** knob to select your desired cooking mode (Warm, Broil, Toast, Bake, Air Fry).
3. Adjust the **Temperature** knob to the desired temperature setting (200°F to 450°F).
4. Set the **Timer** knob for the desired cooking duration (up to 60 minutes). The oven will automatically turn off when the timer expires. For toast, turn the timer past 20 and then back to the desired toast darkness setting.
5. For Air Fry function, you can also adjust the **Speed** knob (Low/High) for fan speed control.
6. To turn on the interior light, press the light button located next to the Toast Darkness knob.

Specific Functions:

- **Air Fry:** Ideal for crispy foods like french fries, chicken wings, and drumsticks. Use the air fryer basket. Adjust fan speed for desired crispness.
- **Bake:** Suitable for cakes, pizzas, and other baked goods. Use the baking pan or wire rack.
- **Toast:** For toasting bread or bagels. Use the wire rack. Adjust the Toast Darkness knob for preferred browning level.
- **Broil:** For grilling or browning the top of dishes. Use the wire rack or baking pan.
- **Warm:** To keep food warm without further cooking.

Your browser does not support the video tag.

Video: An official overview of the Geek Chef 16QT Air Fryer Oven, demonstrating its multi-functions and ease of use, including setting the timer, temperature, and function knobs.

COOKING CAPACITY

The 16-quart capacity and 3-layer cooking design allow for versatile meal preparation:

- Up to 4 slices of bread
- A 9-inch pizza

- Up to 700g of chicken wings
- Up to 3 lbs of chicken
- Up to 6 bagels

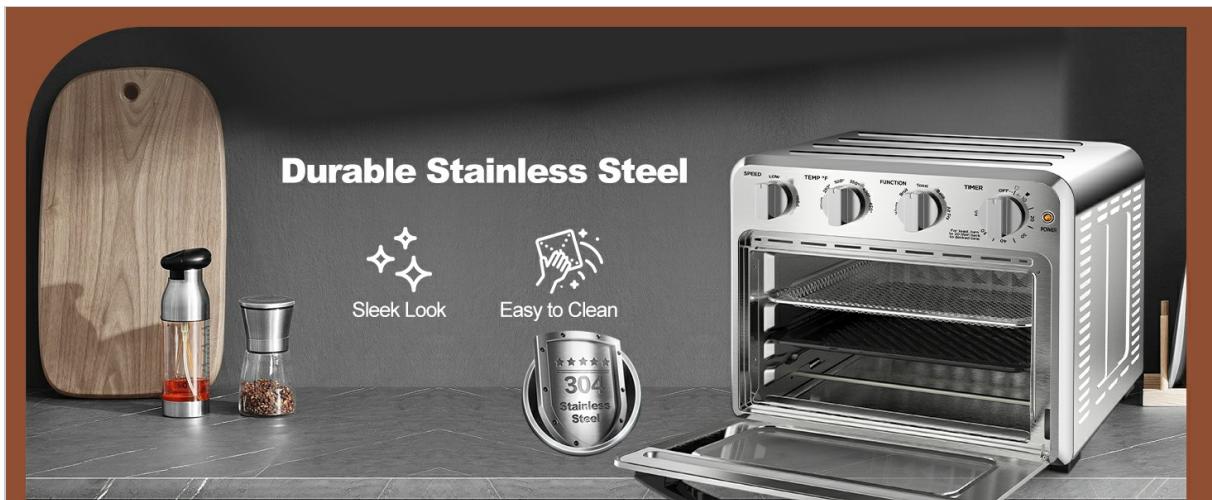


Image: Examples of food items that can be cooked in the 16QT oven, including french fries, chicken wings, pizza, toast, and a whole chicken, illustrating the appliance's capacity.

CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and hygiene of your appliance.

1. Always unplug the oven and allow it to cool completely before cleaning.
2. Remove the crumb tray, air fryer basket, baking pan, and wire rack. Wash them with warm, soapy water. For stubborn residue, it is recommended to soak accessories in warm water and detergent.
3. Wipe the interior walls of the oven with a damp cloth and mild detergent. Avoid abrasive cleaners or scouring pads.
4. Clean the exterior with a damp cloth. Do not use harsh chemicals or abrasive materials.
5. Ensure all parts are completely dry before reassembling and storing the appliance.

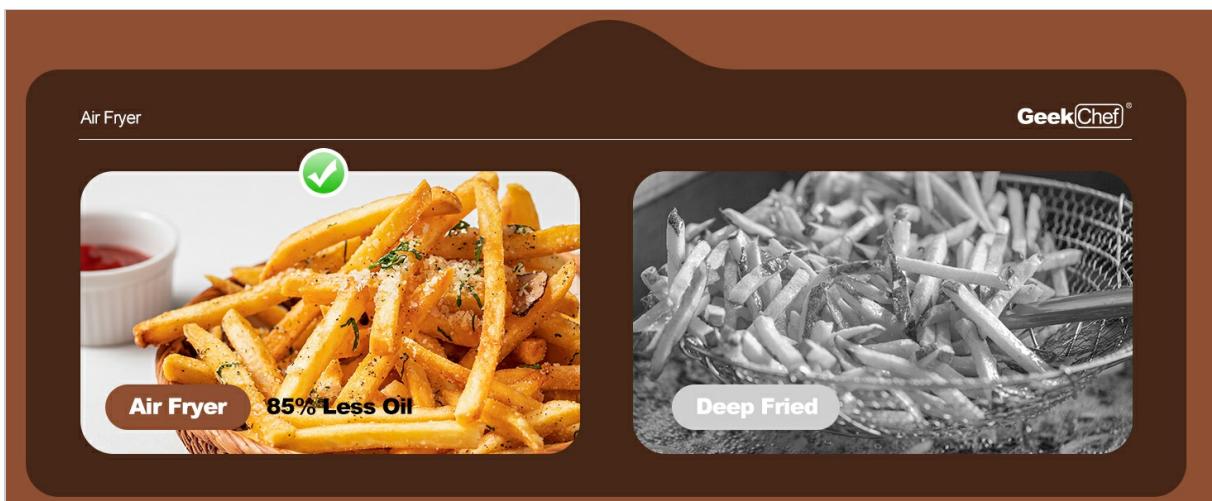


Image: A hand removing the crumb tray from the bottom of the oven, demonstrating the ease of cleaning this removable component.

TROUBLESHOOTING

If you encounter issues, refer to the following common problems and solutions:

- **Appliance does not turn on:** Ensure the power cord is securely plugged into a working outlet. Check if the timer knob is set to a cooking duration.
- **Food not cooking evenly:** Ensure food is arranged in a single layer in the air fryer basket or on the rack. Preheat the oven if necessary.
- **Smoke coming from the oven:** This may be due to food residue or excessive oil. Clean the interior and accessories thoroughly. Reduce oil if air frying.
- **Knobs are hot during operation:** It is normal for the exterior surfaces, including knobs, to become warm during use. Always use caution and oven mitts if necessary.

SPECIFICATIONS

Feature	Specification
Brand	Geek Chef
Model Name	GTO16
Capacity	16 Quart
Product Dimensions	13.5"D x 13.5"W x 12.1"H
Material	Stainless Steel
Control Type	Knob Control
Special Features	Warm, Broil, Toast, Bake, Air Fryer
Included Components	Air Fry Basket, Baking Pan, Broiling Rack, Crumb Tray
Item Weight	14.01 pounds

WARRANTY AND SUPPORT

Your Geek Chef 16QT Air Fryer Toaster Oven comes with a **1-Year Warranty**. This warranty can be extended by registering your product through the GeekSmart App.

For direct assistance or any questions, please contact Geek Chef customer service. You can also access 100+ video recipes and instant online customer service through the GeekSmart App.



Image: Information on Geek Chef's support, including ETL listing, free app with 100+ video recipes, 1-year warranty (extendable via app), direct assistance, and extra accessories.