

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [HUAYU](#) /

› [HUAYU URC1728 Universal LCD/LED TV Remote Control Instruction Manual](#)

HUAYU URC1728

HUAYU URC1728 Universal LCD/LED TV Remote Control Instruction Manual

1. INTRODUCTION

This manual provides comprehensive instructions for the **HUAYU URC1728 Universal LCD/LED TV Remote Control**. This remote is designed to operate a wide range of LCD and LED televisions, offering a convenient replacement or secondary control unit. Please read this manual carefully before use to ensure proper operation and to maximize the remote's functionality.

The HUAYU URC1728 is a high-quality, aftermarket replacement remote designed to function identically to the original remote shown in the product images. For seamless operation, ensure the buttons on this remote match your original remote.

2. PRODUCT OVERVIEW



Image 2.1: Front, side, and back views of the HUAYU URC1728 Universal LCD/LED TV Remote Control. The front features a black body with various control buttons, including power, number keys, channel and volume controls, navigation, and dedicated app buttons. The side view shows the slim profile, and the back view shows the battery compartment cover.

The HUAYU URC1728 remote control features a standard layout for ease of use. Key buttons include:

- **Power Button:** Located at the top left, typically red, to turn the TV on or off.
- **Number Keys (0-9):** For direct channel selection.
- **Volume Control (+/-):** Adjusts the audio volume.
- **Channel Control (CH +/-):** Changes TV channels sequentially.
- **Mute Button:** Silences the TV audio.
- **Source Button:** Selects input sources (HDMI, AV, etc.).
- **Navigation Pad (Up, Down, Left, Right, OK):** For menu navigation and selection.
- **Home, Return, Exit Buttons:** For navigating TV menus and smart features.
- **Dedicated App Buttons:** Quick access to streaming services like NTX, You TV, Prime, Raku TV, F-Play, and GOOG.
- **Smart Button:** Accesses smart TV features or app launchers.
- **Text/Info Buttons:** Displays teletext or information about the current program.
- **Brand-Specific Keys:** Buttons labeled with TV brands (e.g., Samsung, LG, Sony, Panasonic,

Philips, Toshiba, Sharp, Thomson, Vestel, Telefunken, Hitachi, Hisense, Daewoo, Hyundai, Supra, Blaupunkt, Skyworth, Aiwa/BBK, Haier, Changhong, Ergo, TCL, JVC, Kivi) for potential direct programming or brand-specific functions.

- **Menu, Guide, P.Mode, S.Mode, Subt., Aspect:** Access various TV settings and features.
- **Playback Controls:** Rewind, Play/Pause, Fast Forward for media playback.

3. SETUP

3.1. Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide or lift the cover to open the compartment.
3. Insert two (2) AAA batteries (not included), ensuring that the positive (+) and negative (-) terminals match the markings inside the compartment.
4. Replace the battery compartment cover securely.

Note: Always use new batteries and replace both batteries at the same time. Do not mix old and new batteries or different types of batteries.

3.2. Programming the Remote Control

The HUAYU URC1728 is a universal remote control and may require programming to operate your specific TV model. There are typically a few methods for programming:

- **Automatic Code Search:**
 - a. Manually turn on your television.
 - b. Point the HUAYU URC1728 remote control towards the TV.
 - c. Press and hold the 'SET' button (or a similar programming button, if available, or a common brand button like 'Samsung' or 'LG') for a few seconds until an indicator light on the remote illuminates.
 - d. While still holding the programming button, repeatedly press the 'Power' button on the remote until your TV turns off. This indicates a matching code has been found.
 - e. Release the programming button.
 - f. Test other functions (e.g., volume, channel). If not all functions work correctly, repeat the process to find a better matching code.
- **Manual Code Entry (if code list is available):**
 - a. Manually turn on your television.
 - b. Locate the 3 or 4-digit code for your TV brand from a compatible code list (not provided with this manual).
 - c. Press and hold the 'SET' button (or similar programming button) on the remote until the indicator light illuminates.
 - d. Enter the code using the number keys on the remote. The indicator light should turn off after the last digit is entered.
 - e. Test the remote's functions. If it does not work, try another code for your TV brand.
- **Brand-Specific Direct Setup:**
 - a. Manually turn on your television.
 - b. For some common brands listed on the remote (e.g., Samsung, LG, Sony), you may be able to press and hold the corresponding brand button directly until the TV turns off or responds.

- c. Release the button once the TV responds.

If you encounter difficulties, consult your original TV manual for remote control compatibility or try different programming methods. Some advanced TV features may not be fully supported by universal remotes.

4. OPERATING INSTRUCTIONS

Once programmed, the HUAYU URC1728 remote control operates similarly to your original TV remote.

- **Power:** Press the **Power** button to turn the TV on or off.
- **Channel Selection:** Use the **Number Keys (0-9)** for direct channel input, or **CH+ / CH-** to cycle through channels.
- **Volume Adjustment:** Use **VOL+ / VOL-** to increase or decrease the volume. Press **MUTE** to silence the audio.
- **Input Source:** Press the **SOURCE** button to cycle through available input sources (HDMI, AV, etc.).
- **Menu Navigation:** Use the **Up, Down, Left, Right** arrow buttons to navigate menus. Press **OK** to confirm a selection.
- **Smart TV/Home:** Press **HOME** or **SMART** to access your TV's smart features or home screen.
- **App Access:** Use the dedicated buttons (NTX, You TV, Prime, Raku TV, F-Play, GOOG) for quick access to these streaming applications.
- **Return/Exit:** Use **RETURN** to go back to the previous screen or **EXIT** to close menus.
- **Playback Controls:** Use the **Rewind, Play/Pause, Fast Forward** buttons for controlling media playback.

5. MAINTENANCE

- Keep the remote control clean by wiping it with a soft, dry cloth. Avoid using liquid cleaners.
- Do not expose the remote to direct sunlight, high temperatures, or high humidity.
- Avoid dropping the remote control or subjecting it to strong impacts.
- If the remote will not be used for an extended period, remove the batteries to prevent leakage.

6. TROUBLESHOOTING

- **Remote is not working:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace the batteries with new ones.
 - Ensure there is a clear line of sight between the remote control and the TV's infrared (IR) receiver. Remove any obstructions.
 - Reprogram the remote control using one of the methods described in Section 3.2.
- **Some buttons are not working or performing incorrectly:**
 - This may indicate an incomplete or incorrect programming code. Try reprogramming the remote using a different code for your TV brand, if available, or repeat the automatic code search.
 - Some advanced or unique functions of your original TV remote may not be supported by a universal remote.

- **TV is not responding to the remote:**
 - Ensure the TV is powered on and not in standby mode.
 - Verify that the TV's IR receiver is not blocked or covered.

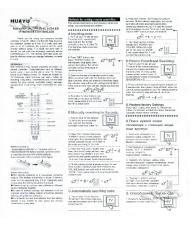
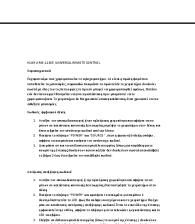
7. SPECIFICATIONS

Model:	URC1728
Brand:	HUAYU
Compatibility:	Universal LCD/LED TV Remote Control
Power Source:	2 x AAA Batteries (not included)

8. WARRANTY AND SUPPORT

No specific warranty information is provided with this product. For any support inquiries, technical assistance, or questions regarding compatibility, please contact your original retailer or the point of purchase.

Related Documents - URC1728

	<p>HUAYU RM-L1195+ Universal LCD/LED TV Remote Controller Setup Guide</p> <p>Comprehensive guide to setting up the HUAYU RM-L1195+ universal LCD/LED TV remote controller. Learn how to program your remote using code input, manual search, automatic search, and brand-specific search methods. Includes battery installation and troubleshooting tips.</p>
	<p>Οδηγός Χρήσης Universal Τηλεχειριστηρίου HUAYU RM-L1385</p> <p>Οδηγίες για τη ρύθμιση και χρήση του universal τηλεχειριστηρίου HUAYU RM-L1385, με χειροκίνητη και αυτόματη αναζήτηση κωδικού.</p>
	<p>HUAYU RM-L1508 Universal LCD TCL Remote Control</p> <p>User guide for the HUAYU RM-L1508 Universal LCD TCL Remote Control, including specifications, compatible TV models, and automatic code searching instructions.</p>

	<p><u>HUAYU RM-L1785 Universal Remote Control for VESTEL TVs - Compatible Models</u></p> <p>Discover the HUAYU RM-L1785 universal remote control, designed for VESTEL LCD/LED TVs. This document lists compatible remote models and their characteristics, ensuring seamless TV operation.</p>
	<p><u>HUAYU RM-L1772 Universal Remote Control for VESTEL TVs - Compatibility List</u></p> <p>Detailed information about the HUAYU RM-L1772 universal remote control, designed for VESTEL LCD/LED TVs. Includes characteristics and a comprehensive list of compatible remote control models.</p>
	<p><u>HUAYU RM-L1200+ Universal Remote Control Setup Guide</u></p> <p>Instructions and guide for setting up the HUAYU RM-L1200+ Universal Remote Control, including manual and automatic code search methods.</p>