

[Manuals.plus](#) /

› [FEZIBO](#) /

› FEZIBO 55x24 Inch Electric Standing Desk with Double Drawer (Model: B0DXVKGZ35) User Manual

FEZIBO B0DXVKGZ35

FEZIBO 55x24 Inch Electric Standing Desk with Double Drawer User Manual

Model: B0DXVKGZ35

INTRODUCTION

This manual provides comprehensive instructions for the assembly, operation, maintenance, and troubleshooting of your FEZIBO 55x24 Inch Electric Standing Desk with Double Drawer. Please read this manual thoroughly before use to ensure proper function and safety.

SAFETY INFORMATION

Important Safety Precautions:

- Always keep hands and body parts away from moving parts when adjusting the desk height.
- Use caution when placing heavy objects on the desk to prevent tipping.
- Do not exceed the weight limit of the desk.
- Ensure all cables are properly managed to avoid entanglement during height adjustments.

PACKAGE CONTENTS

Before assembly, verify that all components are present. Refer to the included assembly diagram for a complete list of parts and hardware.

Sitting and Standing

Height Adjustment Range



Image: All components of the FEZIBO standing desk laid out, including the desktop, frame, drawers, and hardware.

SETUP AND ASSEMBLY

A detailed installation video is available for reference. The package includes all necessary assembly tools and detailed instructions.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.
2. **Assemble Frame:** Follow the step-by-step instructions in the provided assembly guide to construct the desk frame. Ensure all screws are tightened securely.
3. **Attach Desktop:** Secure the desktop to the assembled frame using the designated hardware.

4. **Install Drawers and Shelf:** Mount the double drawers and storage shelf according to the instructions.
5. **Connect Power:** Plug the power cord into a suitable electrical outlet.




Image: An open instruction manual next to desk components, illustrating the ease of installation.

OPERATING INSTRUCTIONS

Height Adjustment

The desk features an electric motor for smooth height adjustments between 27.36 inches and 46.06 inches. The motor operates with low noise (under 50 dB).

- **Raise Desk:** Press and hold the **Up (^)** button on the control panel.
- **Lower Desk:** Press and hold the **Down (v)** button on the control panel.

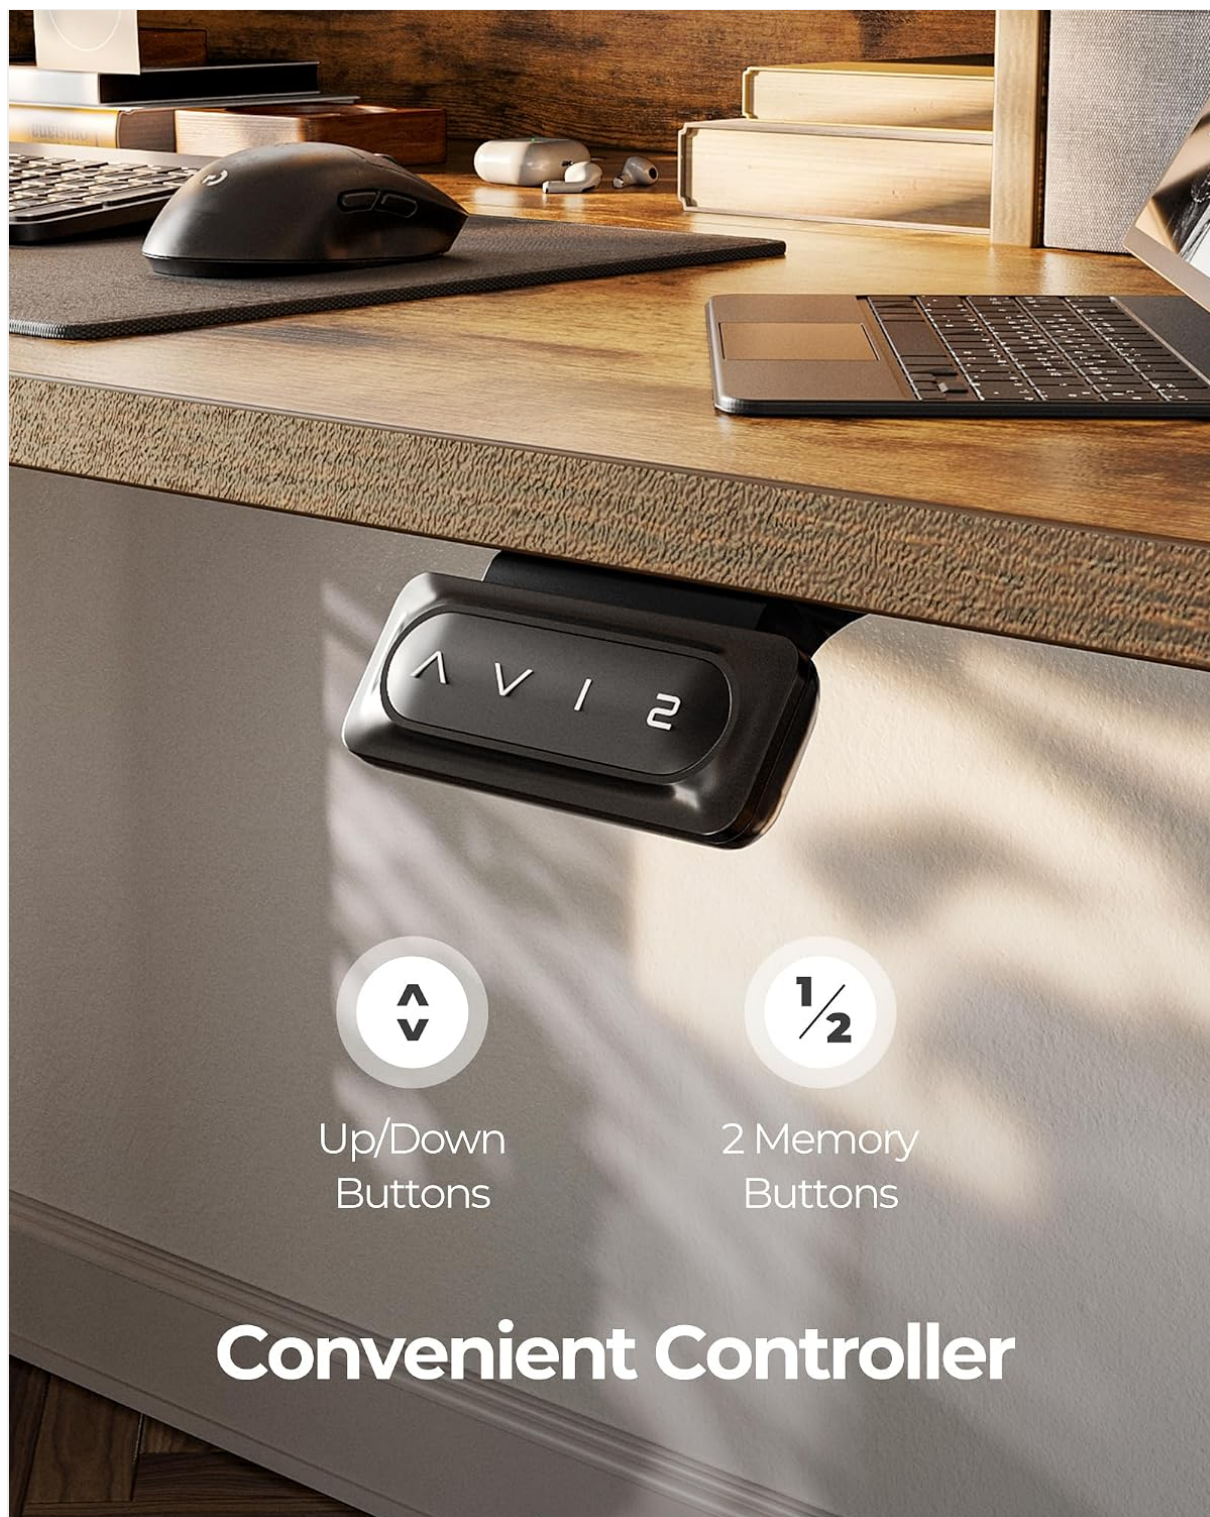

Up/Down
Buttons



2 Memory
Buttons

Convenient Controller

Image: Close-up of the desk's control panel, showing the Up/Down buttons and two memory preset buttons.

Memory Height Settings

The desk includes two programmable memory height buttons to save your preferred sitting and standing positions.

1. Set a Memory Position:

- Adjust the desk to your desired height using the Up/Down buttons.
- Press and hold one of the memory buttons (**1** or **2**) until the display flashes or a beep is heard, indicating the position is saved.

2. Recall a Memory Position:

- Press the corresponding memory button (**1** or **2**). The desk will automatically move to the saved height.

Anti-Collision Technology

The desk is equipped with an anti-collision system. If the desk encounters an obstacle during height adjustment, it will automatically move approximately 2cm in the opposite direction to prevent damage or injury.



Image: Illustration of the anti-collision feature, showing the desk stopping and reversing slightly upon contact with an object.

MAINTENANCE

- **Cleaning:** Wipe the desk surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Cable Management:** Periodically check and organize cables to prevent them from getting caught during height adjustments.
- **Inspection:** Regularly inspect all screws and connections to ensure they remain tight.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Desk does not move or motor stops working.	Power connection issue, motor overload, or control panel error.	1. Ensure the power cord is securely plugged into both the desk and the wall outlet. 2. Perform a reset: Press and hold the Down (v) button for 5 seconds until the desk lowers to its lowest point and slightly rises, indicating a successful reset. 3. If the issue persists, disconnect power for 10 minutes, then reconnect and try again.
Desk moves unevenly or makes unusual noises.	Loose connections or uneven load.	1. Check all assembly screws and tighten any that are loose. 2. Ensure the weight on the desk is evenly distributed.

Problem	Possible Cause	Solution
Anti-collision system triggers frequently.	Obstruction in the desk's path.	1. Clear any objects from the desk's path, both above and below. 2. Ensure cables are not interfering with the desk's movement.

SPECIFICATIONS

Brand	FEZIBO
Model Number	B0DXVKGZ35
Product Dimensions (D x W x H)	24"D x 55"W x 27"H
Height Adjustment Range	27.36" - 46.06"
Color	Rustic Brown
Base Material	Alloy Steel
Top Material Type	Wood (Laminated Finish)
Number of Drawers	2
Number of Shelves	1 (Storage Shelf)
Noise Level (Operating)	Under 50 dB
Assembly Required	Yes (Tools Included)



Image: Diagram showing the overall dimensions of the FEZIBO standing desk, including width, depth, and adjustable height range.

WARRANTY INFORMATION

The FEZIBO Electric Standing Desk comes with a limited warranty. Please refer to the warranty card included in your package for specific terms and conditions, or visit the official FEZIBO website for more details.

CUSTOMER SUPPORT

For technical assistance, missing parts, or any questions regarding your FEZIBO standing desk, please contact FEZIBO customer support. Contact information can typically be found on the product packaging,

the official FEZIBO website, or through your point of purchase.

When contacting support, please have your model number (B0DXVKGZ35) and purchase date available.