

001

4K Mini Body Camera User Manual

Brand: Generic | Model: 001

1. INTRODUCTION

Thank you for purchasing the Generic 4K Mini Body Camera. This compact and versatile action camera is designed for hands-free recording in various environments, from daily vlogs to outdoor adventures. Its small size, 4K recording capability, and multiple mounting options make it an ideal companion for capturing your moments. This manual provides essential information on setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your device.

2. SAFETY INFORMATION

- Do not expose the camera to extreme temperatures or direct sunlight for prolonged periods.
- Keep the camera away from water and moisture unless it is securely enclosed in its waterproof housing.
- Avoid dropping or subjecting the camera to strong impacts.
- Use only the specified charging accessories to prevent damage and ensure safety.
- Do not attempt to disassemble or modify the camera, as this will void the warranty and may cause damage.
- Store the camera and accessories out of reach of children.

3. PACKAGE CONTENTS

Please verify that all items listed below are included in your package. If any items are missing or damaged, please contact customer support.

- 4K Mini Body Camera
- 64GB Micro SD Card
- USB Charging Cable
- USB Card Reader
- Magnetic Lanyard Pad
- 360° Rotating Spring Clip
- Waterproof Housing
- Various Mounting Accessories (e.g., helmet mount, bike mount, adhesive mounts)
- Battery Charger (as listed in product details)



Image 3.1: Overview of the 4K Mini Body Camera and its included accessories, such as various mounts, a lanyard, a 64GB Micro SD card, and a USB card reader.

Package Included



Image 3.2: A comprehensive display of all items included in the product package, ensuring users can verify their contents.

4. PRODUCT OVERVIEW & FEATURES

The 4K Mini Body Camera is designed for portability and ease of use, offering high-quality video recording in a compact form factor.

Key Features:

- **Thumb Size & Lightweight:** Extremely compact, weighing only 1.25 ounces (35.7 grams), making it easy to wear or carry discreetly.
- **4K Recording:** Captures high-resolution video for clear and detailed footage.
- **Hands-Free Operation:** Designed for wearable use with various clips and mounts, allowing for hands-free recording.
- **One-Click Recording:** Simplifies operation with an intuitive single-button control for instant capture.
- **Magnetic Design & 360° Rotation:** Features a magnetic back for easy attachment to metal surfaces and a 360° rotating clip for versatile positioning.
- **Wi-Fi Connectivity:** Enables instant sharing and viewing of footage via a mobile application.
- **64GB Storage:** Comes with a 64GB SD card for ample recording time.
- **Durable & Versatile Mounting:** Includes a waterproof housing and various accessories for mounting on clothing, bikes, helmets, and more.

Small & Lightweight

Tiny camera, huge potential, Mount it and take it anywhere, anytime!



Weight:
1.25oz (35.7g)

Action Camera

to film for a massive 150 minutes
after fully charged (WI-FI OFF)



Image 4.1: The camera's compact size is illustrated by comparing it to a human thumb, emphasizing its portability and lightweight design (1.25 oz).



Image 4.2: Visual representation of the camera's core features, including 4K video resolution, USB-C charging, back clip, 800mAh battery, and magnetic neck strap compatibility.

5. SETUP

5.1 Charging the Camera

Before first use, fully charge the camera. Connect the USB charging cable to the camera's USB-C port and to a power source (e.g., computer USB port or USB wall adapter). The charging indicator light will show the charging status.

5.2 Inserting the Micro SD Card

Locate the Micro SD card slot on the camera. Gently insert the provided 64GB Micro SD card into the slot until it clicks into place. Ensure the card is inserted in the correct orientation.

5.3 Connecting to the Mobile App (Wi-Fi)

To utilize Wi-Fi features and app control, download the dedicated mobile application for your camera. Refer to the packaging or a QR code on the camera for the app name. Once installed:

1. Turn on the camera.
2. Enable Wi-Fi on your smartphone.
3. Open the camera's mobile app.
4. Follow the in-app instructions to connect to the camera's Wi-Fi hotspot. The camera's Wi-Fi name and password should be displayed on the camera screen or in the manual.
5. Once connected, you can view live footage, adjust settings, and transfer files.

Easy to View

You can watch videos on your cell phone anytime.



#3 Hotspot Connect to the phone

*Note: Comes with a app for use.
More Conveniently Transport Videos*



#1 Directly Connect the Camera to the laptop/Phone/PC.



#2 Comes with 64GB(out of box)

Note: equipped-the card reader

Image 5.1: Instructions for connecting the camera to various devices, including direct connection to laptops/phones/PCs, the use of the included 64GB SD card, and Wi-Fi hotspot connection for app control.



Image 5.2: Demonstrates the instant app preview feature, allowing users to watch footage immediately after filming by connecting the camera to their smartphone via Wi-Fi.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off

- **Power ON:** Simply press the home button on the front of the mini camera for 3 seconds. The blue LED will turn ON.
- **Power OFF:** Press the home button on the front of the mini camera for 3 seconds. The LED will turn OFF.

6.2 Recording Video (One-Click Capture)

- To start recording, simply press the home button once when the camera is ON. The blue LED will FLASH, indicating recording is in progress.
- To stop recording, press the home button again. The blue LED will stop flashing and remain ON.



Image 6.1: Step-by-step guide for powering on, initiating quick capture (recording), and powering off the camera using the main button and LED indicators.

6.3 Mounting Options

The camera offers diverse mounting solutions for various scenarios:

- **Magnetic Lanyard Pad:** Attach the camera to the magnetic pendant and wear it around your neck for hands-free recording.
- **360° Rotating Spring Clip:** Clip the camera to your collar, pocket, or waist for flexible angles.
- **Magnetic Attachment:** Directly attach the camera to any iron metal surface.
- **Accessory Mounts:** Use the included mounts to attach the camera to bikes, motorcycles, helmets, or other gear.



Image 6.2: Illustrates the camera's versatility with examples of mounting on a person's chest, for underwater use, on a helmet, and even on a pet, showcasing its 'Mount Anywhere' capability.



Image 6.3: Examples of the camera being used in action sports, specifically mounted on a bicycle handlebar and a helmet, demonstrating its suitability for various dynamic scenarios.

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the camera body. For the lens, use a specialized lens cleaning cloth and solution. Do not use harsh chemicals or abrasive materials.
- **Storage:** When not in use, store the camera in a cool, dry place, away from direct sunlight and extreme temperatures.

- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the camera regularly, even if not in use, to maintain battery health.
- **SD Card Management:** Regularly back up your footage and format the Micro SD card periodically to ensure optimal recording performance and prevent data corruption.

8. TROUBLESHOOTING

- **Camera not turning on:** Ensure the battery is charged. Connect the camera to a power source and try again.
- **Cannot record:** Check if the Micro SD card is inserted correctly and has sufficient free space. Format the SD card if necessary (this will erase all data).
- **Wi-Fi connection issues:** Ensure the camera's Wi-Fi is enabled. Restart both the camera and your smartphone. Try reconnecting through the app.
- **Poor video quality:** Ensure the lens is clean. Check recording settings in the app to confirm 4K resolution is selected. Ensure adequate lighting conditions.
- **Short battery life:** Ensure the camera is fully charged before use. Reduce Wi-Fi usage if not needed, as it consumes more power.
- **Camera freezes/unresponsive:** Press and hold the power button for an extended period (e.g., 10-15 seconds) to force a restart.

9. SPECIFICATIONS

Feature	Specification
Brand	Generic
Model Number	001
Item Weight	3.5 ounces (approx. 99.2 grams)
Product Dimensions	1.2 x 2.2 x 1.8 inches (approx. 3.0 x 5.6 x 4.6 cm)
Video Capture Resolution	4K
Flash Memory Type	Micro SD (64GB included)
Video Capture Format	MP4
Supported Audio Format	MP4
Connectivity Technology	Wi-Fi
Color	Black
Special Features	360-degree Rotation, 4K Recording, Clip-on, Magnetic Mount, Wearable
Batteries	1 AA batteries required (included)

10. WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions, including the warranty period and coverage details. For technical support, troubleshooting assistance, or warranty claims, please contact the seller or manufacturer directly through the contact information provided

with your purchase or on the product packaging.

For additional support, you may also visit the product's listing page on Amazon.com [B0DXVLFHH4](#)) for frequently asked questions and customer reviews that may offer helpful insights.