

B0DXVVM8Z3

Generic Ultrasonic Jewelry Cleaner 350ML

Model: B0DXVVM8Z3 - User Manual

INTRODUCTION

Thank you for purchasing the Generic Ultrasonic Jewelry Cleaner. This device utilizes high-frequency ultrasonic waves to effectively clean various items such as jewelry, eyeglasses, watches, and more. Please read this manual thoroughly before operating the device to ensure safe and optimal performance.

SAFETY INFORMATION

- Do not immerse the main unit in water or other liquids.
- Ensure the power adapter is disconnected from the outlet before filling or emptying the tank.
- Keep the device out of reach of children.
- Do not operate the cleaner without water in the tank.
- Avoid cleaning items that may be damaged by water or ultrasonic vibrations, such as certain types of pearls, glued items, or soft gemstones. Consult a jeweler if unsure.
- Use only the provided power adapter.
- If the device is damaged, do not attempt to repair it yourself. Contact customer support.

PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x Ultrasonic Cleaner Unit
- 1 x Power Adapter
- 1 x Instruction Manual (this document)

304 stainless steel cleaning tank Corrosion and wear resistance



Image: Contents of the package, including the cleaner, power adapter, and manual.

PRODUCT SPECIFICATIONS

Product Size	215mm x 98mm x 62mm
Liner Material	304 Stainless Steel
Product Color	White
Product Capacity	350ml
Power	18W
Ultrasonic Frequency	47000Hz (47kHz)
Product Net Weight	345g
Batteries Required	No



Image: Product dimensions for the ultrasonic cleaner.



Image: The interior of the cleaning tank, showing the 304 stainless steel material and the 'MAX' fill line.

SETUP

1. **Unpack:** Carefully remove the ultrasonic cleaner and all accessories from the packaging.
2. **Placement:** Place the cleaner on a stable, flat, and dry surface, away from heat sources or direct sunlight.
3. **Fill Tank:** Open the lid and fill the stainless steel tank with tap water. Do not exceed the 'MAX' fill line indicated inside the tank. For enhanced cleaning, a small amount of non-foaming cleaning solution (e.g., dish soap) can be added.
4. **Connect Power:** Plug the power adapter into the cleaner's power port, then plug the adapter into a standard electrical outlet.

OPERATING INSTRUCTIONS

The cleaner offers two cleaning modes: a 3-minute quick clean and a 5-minute deep clean.

1. **Place Items:** Gently place the items to be cleaned into the water-filled tank. Ensure items are fully submerged but not overcrowded. Close the lid.
2. **Select Cleaning Mode:**


- Press the power button once for a 3-minute quick clean. The indicator light for '3min' will illuminate.
 - Press the power button a second time for a 5-minute deep clean. The indicator light for '5min' will illuminate.
3. **Start Cleaning:** The device will automatically begin the selected cleaning cycle. You may hear a slight buzzing sound, which is normal during ultrasonic operation.
 4. **Cycle Completion:** The cleaner will automatically shut off once the cycle is complete.
 5. **Remove Items:** Open the lid, carefully remove the cleaned items, and rinse them under clean water. Dry them thoroughly with a soft cloth.

Recommended Items for Cleaning:

- Jewelry (gold, silver, platinum, diamonds, sapphires, rubies, etc.)
- Eyeglasses, sunglasses
- Watches (waterproof only, do not submerge non-waterproof watches)
- Razor heads, printer heads
- Dental tools, dentures, retainers
- Cutlery, metal coins



Image: Operating the cleaner by pressing the power button to select cleaning duration.

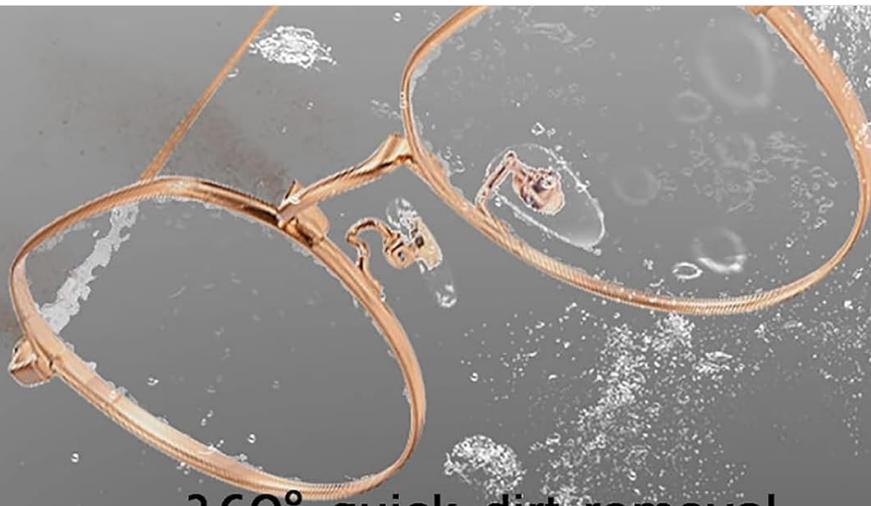

360° quick dirt removal
Clean mirror does not damage the mirror



Image: Demonstration of eyeglasses cleaning, showing effective dirt removal.

Ultrasonic high frequency vibration cleaning
47000 times/second high frequency vibration
water molecule blasting
All-round clean gap



Image: Visual representation of the 47000Hz high-frequency vibration cleaning process.

MAINTENANCE

1. **Empty Tank:** After each use, disconnect the power adapter and carefully pour out the water from the tank.
2. **Clean Tank:** Wipe the inside of the stainless steel tank with a soft cloth to remove any residue. Do not use abrasive cleaners.
3. **Clean Exterior:** Wipe the exterior of the unit with a soft, damp cloth. Do not use harsh chemicals.
4. **Storage:** Store the cleaner in a cool, dry place when not in use. Ensure the tank is completely dry before storing.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not turn on.	Power adapter not connected properly or no power from outlet.	Ensure the power adapter is securely plugged into both the unit and a working electrical outlet.

Cleaning effect is poor.	Insufficient water, items overcrowded, or stubborn dirt.	Ensure water level is adequate. Do not overcrowd items. Use the 5-minute deep clean cycle. Add a small amount of cleaning solution. Pre-soak heavily soiled items.
Unusual noise during operation.	Normal operating sound or unit not on a stable surface.	A slight buzzing sound is normal. Ensure the unit is placed on a stable, flat surface. If the noise is excessive or unusual, discontinue use and contact support.

WARRANTY AND SUPPORT

This product is covered by a standard manufacturer's warranty. For specific warranty details, please refer to the documentation provided with your purchase or contact the retailer. If you encounter any issues or require technical assistance, please contact the manufacturer or your point of purchase for support.