

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [JONR](#) /

› [JONR ED20 Pro 4-in-1 Cordless Wet Dry Vacuum Cleaner Instruction Manual](#)

JONR

JONR ED20 Pro 4-in-1 Cordless Wet Dry Vacuum Cleaner Instruction Manual

Model: ED20 Pro

Brand: JONR

1. SAFETY INFORMATION

Please read this instruction manual thoroughly before operating the JONR ED20 Pro. Keep this manual for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- This appliance is for indoor household use only. Do not use outdoors or on commercial surfaces.
- Do not immerse the appliance in water or other liquids.
- Use only the charging adapter provided by the manufacturer.
- Do not pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Ensure the clean water tank and dirty water tank are correctly installed before use.
- Always unplug the appliance from the charging base before cleaning or performing maintenance.
- Do not operate the appliance with a damaged cord or plug.
- Keep out of reach of children. This appliance is not a toy.

2. PRODUCT OVERVIEW

The JONR ED20 Pro is a versatile 4-in-1 cordless wet dry vacuum cleaner designed to simplify your cleaning routine. It combines powerful vacuuming with effective mopping, offering multiple cleaning modes and attachments for various surfaces.

Key Features:

- **4-in-1 Functionality:** Seamlessly switches between wet dry vacuum, stick vacuum, handheld vacuum, and specialized cleaning tools.
- **Powerful Suction:** Delivers 17000 Pa suction power for effective dirt and liquid removal.
- **Self-Cleaning & Auto-Drying:** One-click self-cleaning and automatic drying function for the brush roller, preventing odors and extending lifespan.
- **Tangle-Free Design:** Advanced dual scraper system prevents hair and pet hair from tangling on the brush roller.
- **Edge Cleaning:** Thin 0.2-inch edge design allows thorough cleaning along skirting boards and hard-to-reach corners.
- **Intelligent Voice Reminder:** Provides helpful voice prompts during operation and maintenance.

- **Long Runtime:** Up to 30 minutes in wet/dry vacuum mode and 60 minutes in vacuum cleaner mode.
- **Battery Replaceable:** Supports battery replacement for extended use.

Included Components:

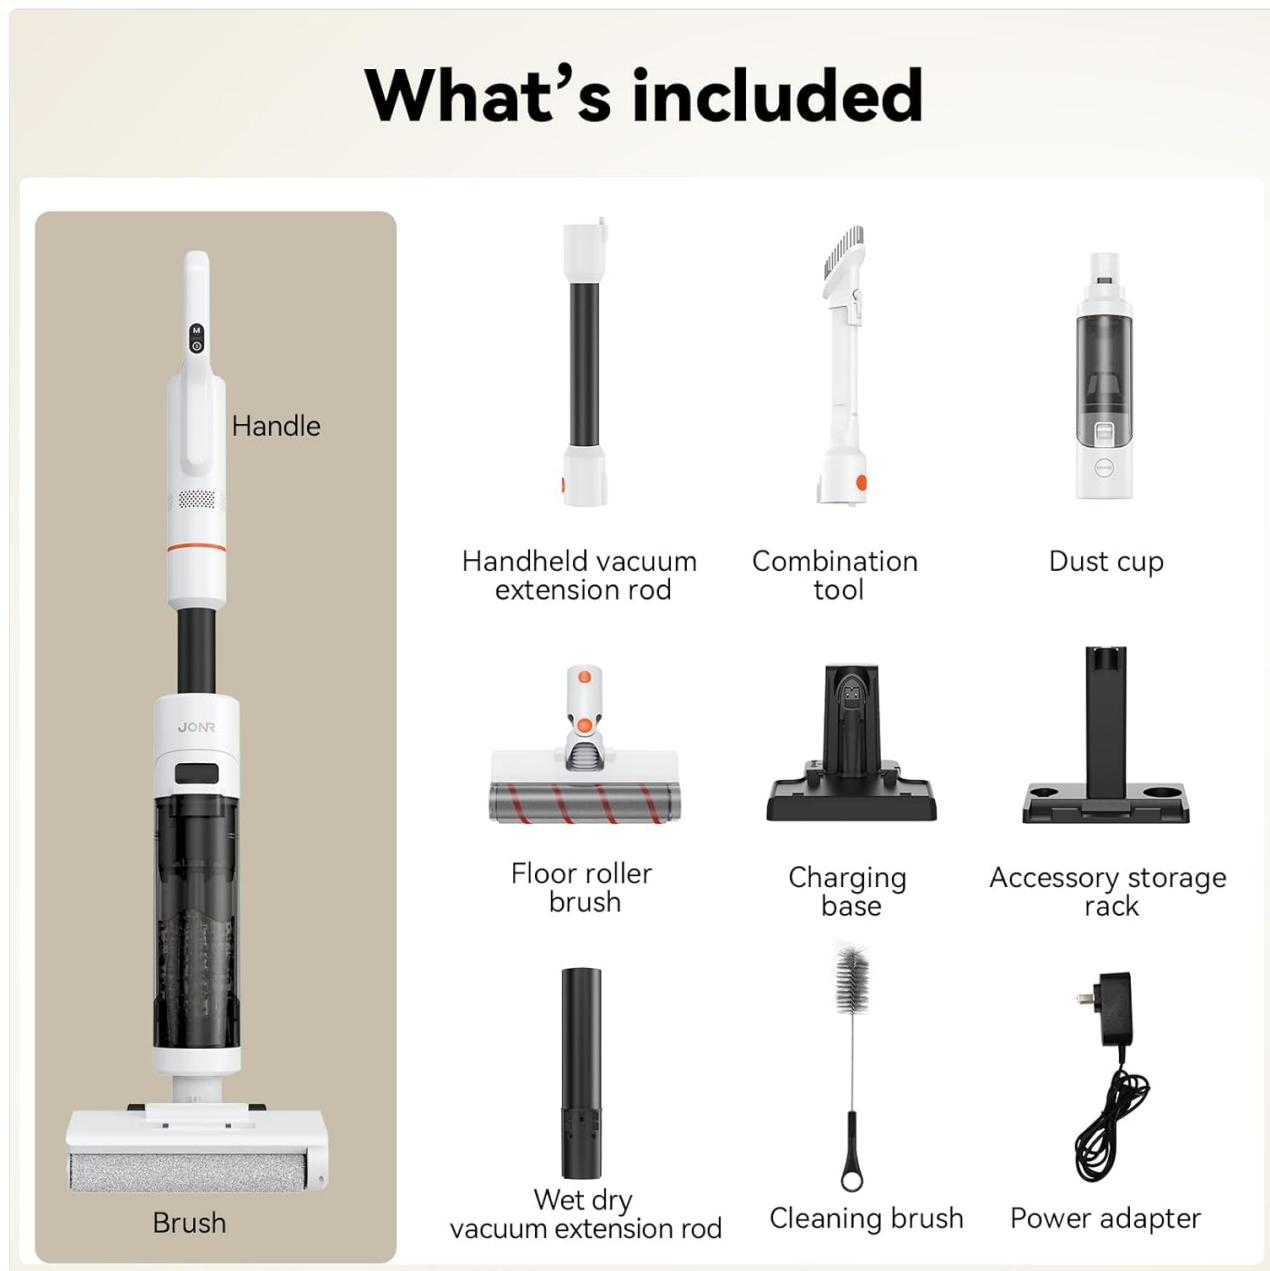


Figure 2.1: All components included with the JONR ED20 Pro.

- Main Unit (Handle, Brush, Dust Cup)
- Handheld Vacuum Extension Rod
- Wet Dry Vacuum Extension Rod
- Combination Tool (2-in-1 crevice and dusting brush)
- Floor Roller Brush
- Charging Base
- Accessory Storage Rack
- Cleaning Brush
- Power Adapter

3. SETUP

3.1 Assembly

Follow these steps to assemble your JONR ED20 Pro vacuum cleaner:

1. Unpack all components from the box.
2. Insert the handle into the main unit until it clicks securely into place.
3. Attach the floor roller brush to the bottom of the main unit.
4. For wet/dry vacuuming, ensure the clean water tank and dirty water tank are properly seated.
5. For handheld or stick vacuuming, detach the motor unit and attach the appropriate extension rod and combination tool.

3.2 Initial Charging

Before first use, fully charge the vacuum cleaner. Place the main unit onto the charging base and connect the power adapter to a wall outlet. The indicator lights on the display will show charging status. A full charge typically takes several hours.

3.3 Filling the Clean Water Tank

For wet cleaning, remove the clean water tank from the main unit. Fill it with clean tap water up to the MAX line. You may add a small amount of non-foaming cleaning solution suitable for wet/dry vacuums if desired. Reattach the tank securely to the main unit.

Assembly & Operation Guide Video:

Video 3.1: A detailed guide on assembling and operating the JONR ED20 Pro Wet Dry Vacuum Mop.

4. OPERATING INSTRUCTIONS

4.1 Powering On/Off

Press the power button on the handle to turn the vacuum cleaner on or off. The intelligent voice reminder will confirm the status.

4.2 Cleaning Modes

The JONR ED20 Pro offers multiple cleaning modes and configurations:

- **Wet Dry Vacuum Mode:** Ideal for hard floors, simultaneously vacuuming debris and mopping with clean water.
- **Stick Vacuum Mode:** Detach the main unit and attach the handheld vacuum extension rod and floor roller brush for dry vacuuming carpets and large areas.
- **Handheld Vacuum Mode:** Use the main unit with the combination tool for cleaning crevices, furniture, car interiors, and other hard-to-reach spots.

4.3 Using the Vacuum Cleaner

For wet/dry cleaning, simply push the vacuum forward. The brush roller will rotate, and water will be dispensed to clean the floor while dirty water is simultaneously suctioned into the dirty water tank. For dry vacuuming, operate as a standard stick or handheld vacuum.

4-in-1 Wet Dry Vacuum Cleaners Combo



Hard Floor & Carpet



Furniture Surfaces



Sofa & Car



Figure 4.1: The JONR ED20 Pro offers 4-in-1 functionality for various cleaning needs, including hard floors, carpets, furniture, and car interiors.

4.4 Edge Cleaning

The specialized 0.2-inch narrow edge design allows the vacuum to clean very close to walls and skirting boards, ensuring no dirt is left behind in corners.

Edge Cleaning Design



Figure 4.2: The ED20 Pro's edge cleaning design allows it to reach tight spaces and corners effectively.

4.5 Battery Life and Runtime

The ED20 Pro provides approximately 30 minutes of runtime in wet/dry vacuum mode and up to 60 minutes in dry vacuum mode on a full charge. The display will indicate the remaining battery level.

Whole-house cleaning solution

30 mins



60 mins



Figure 4.3: The JONR ED20 Pro offers sufficient battery life for whole-house cleaning.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your JONR ED20 Pro.

5.1 Self-Cleaning and Automatic Drying

After each wet cleaning session, place the vacuum cleaner back on its charging base. Press the self-cleaning button (usually indicated by a water droplet icon) to activate the self-cleaning cycle. The vacuum will automatically clean the brush roller and then initiate an automatic drying process to prevent odor and bacterial growth.

Self-Cleaning & Self-Drying



Real-time
fresh water wash
while mopping



Activate
self-cleaning



40-hole smart
water dispensing



Efficient brush
cleaning in 60s



120 mins
centrifugal drying



Continuous
drying eliminates
bacteria and odors



Figure 5.1: The self-cleaning and automatic drying process ensures hygiene and extends the life of the brush roller.

5.2 Emptying the Dirty Water Tank

The dirty water tank should be emptied after each use. Remove the tank from the main unit, open the lid, and pour out the dirty water and debris. Rinse the tank thoroughly with clean water and allow it to air dry before reattaching.

5.3 Cleaning the Brush Roller

While the self-cleaning function handles most of the brush maintenance, occasional manual cleaning may be necessary. The dual scraper system minimizes hair tangles, but if any hair or debris remains, carefully remove the brush roller and use the provided cleaning brush to clear it. Ensure the brush roller is completely dry before reinserting.

Double Metal Scrapers Prevent Hair Entanglement

Toothed dual scraper design, combs and scrapes at the same time, easily straightening hair attached to the roller brush. With less hair entanglement, floor cleaning is smooth.

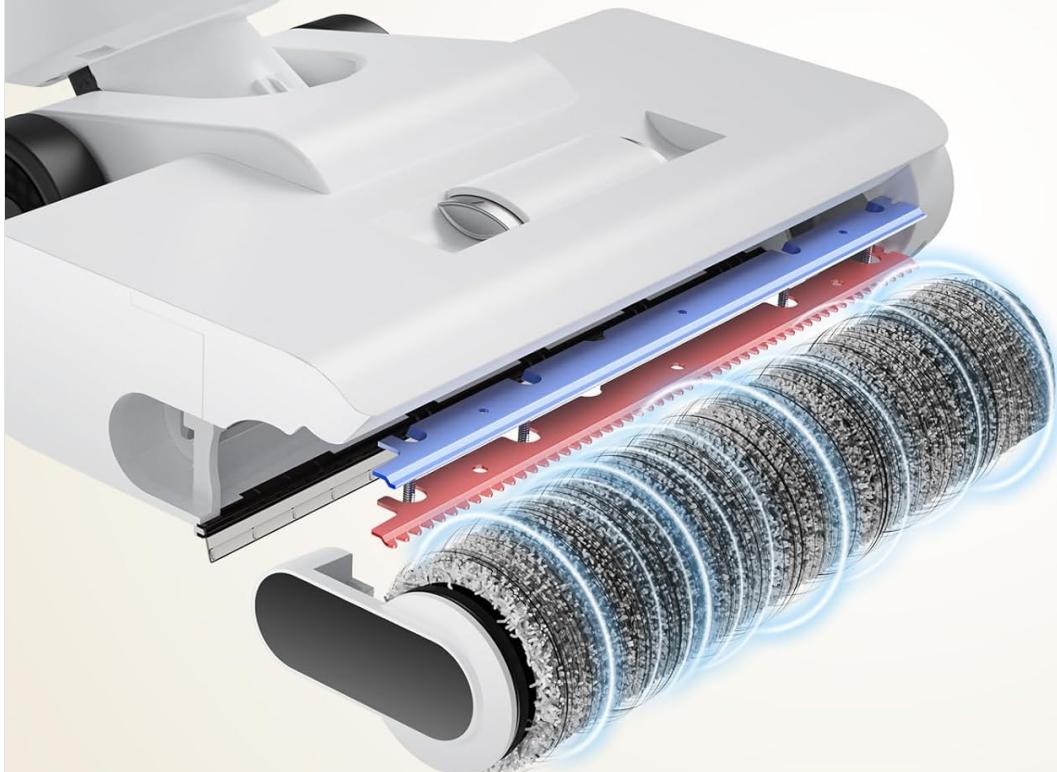


Figure 5.2: The double metal scrapers effectively prevent hair entanglement on the brush roller.

5.4 Filter Maintenance

The HEPA filter should be cleaned regularly to maintain suction performance. Remove the filter from the dirty water tank assembly, tap off loose debris, and rinse under running water. Allow the filter to air dry completely for at least 24 hours before reinserting. Replace the filter every 3-6 months, or as needed.

6. TROUBLESHOOTING

If you encounter any issues with your JONR ED20 Pro, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on	Low battery; Not properly charged	Charge the vacuum fully. Ensure it is correctly seated on the charging base.
Poor suction power	Dirty filter; Clogged brush roller/hose; Full dirty water tank	Clean or replace the filter. Clear any blockages. Empty the dirty water tank.

Problem	Possible Cause	Solution
Water not dispensing	Empty clean water tank; Tank not properly installed	Refill the clean water tank. Ensure the tank is securely in place.
Leaves streaks/excess water	Dirty brush roller; Dirty water tank full; Incorrect cleaning solution	Run self-cleaning cycle or manually clean brush roller. Empty dirty water tank. Use recommended cleaning solution.
Voice reminder not working	Volume too low; Malfunction	Check volume settings if available. Contact customer support if issue persists.

If the problem persists after trying these solutions, please contact JONR customer support for assistance.

7. SPECIFICATIONS

Feature	Specification
Brand	JONR
Model Name	ED20 Pro
Special Feature	Cordless, Self-Cleaning, Automatic Drying, Voice Reminder
Suction Power	17000 Pa
Filter Type	Foam, HEPA Filter
Clean Water Tank Capacity	530 ml (approx.)
Dirty Water Tank Capacity	540 ml (approx.)
Wet/Dry Vacuum Runtime	Up to 30 minutes
Dry Vacuum Runtime	Up to 60 minutes
Form Factor	Stick
Color	White
Product Dimensions	10" L x 10" W x 37" H
Item Weight	8 pounds
UPC	368463655749

8. WARRANTY AND SUPPORT

JONR products are manufactured to the highest quality standards. For warranty information, technical support, or service inquiries, please contact JONR Direct customer service. Keep your purchase receipt as proof of purchase.

JONR Direct Customer Service:

- Refer to the contact information provided on the product packaging or the official JONR website.
- Online support may be available through the JONR brand store on Amazon.

